




# Dell Inspiron 15R 5520 Memory Module Replacement

Written By: Terrence15

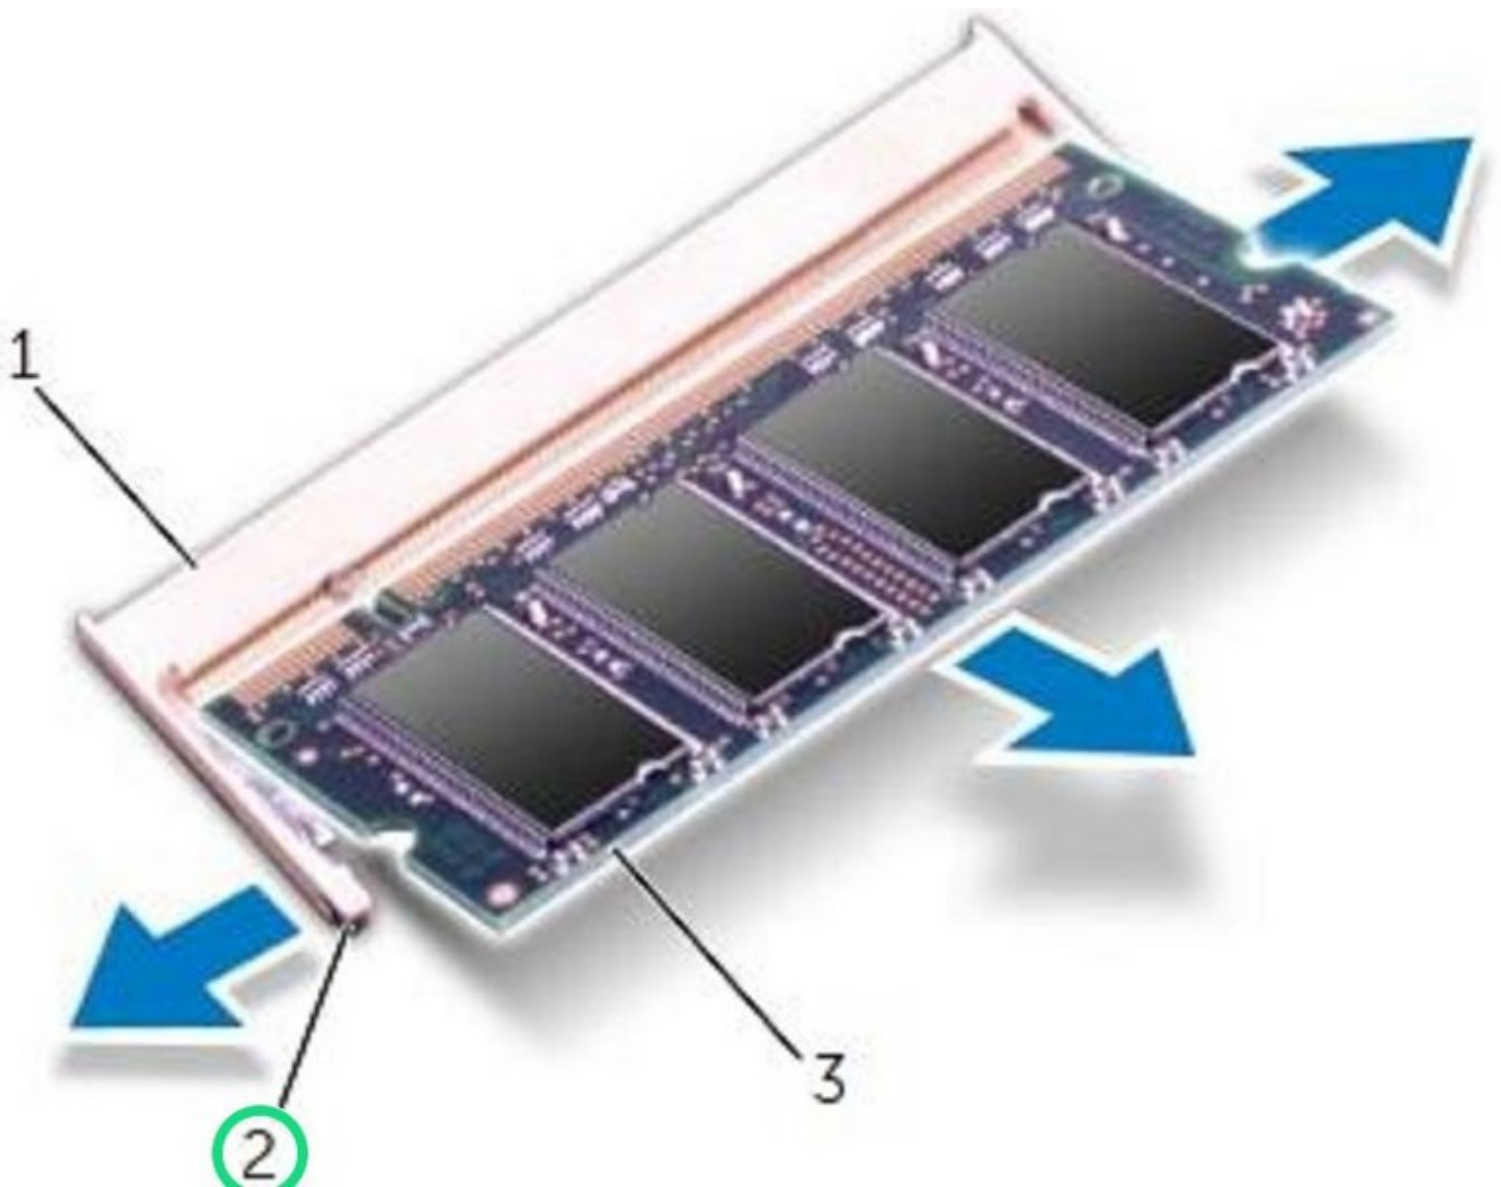

## INTRODUCTION


In this guide, we will be showing you how to remove and replace the Memory Module.

---

### TOOLS:


- [Anti-Static Wrist Strap](#) (1)
-

## Step 1 — Popping up the Memory Module

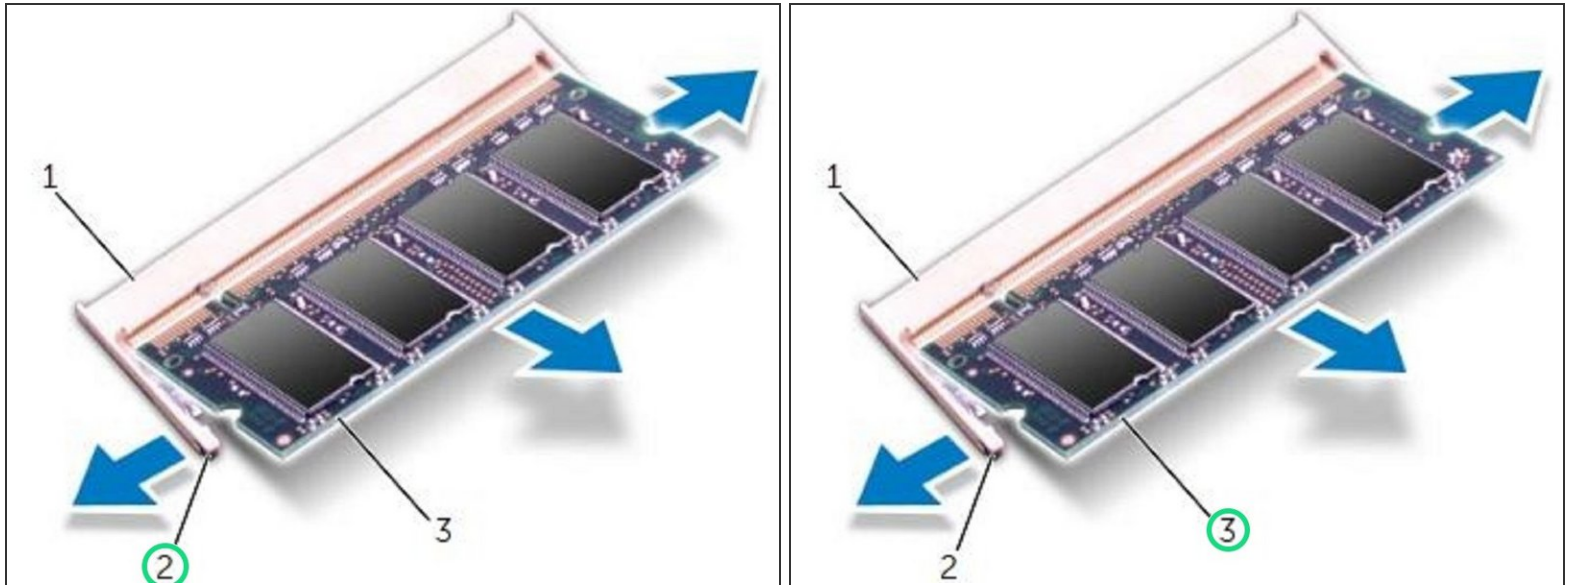



- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).
- ⚠ CAUTION:** To prevent damage to the memory-module connector, do not use tools to spread the memory-module securing clips.
- Use your fingertips to carefully spread apart the securing clips on each end of the memory-module connector until the memory module pops up.

## Step 2 — Remove the Memory Module

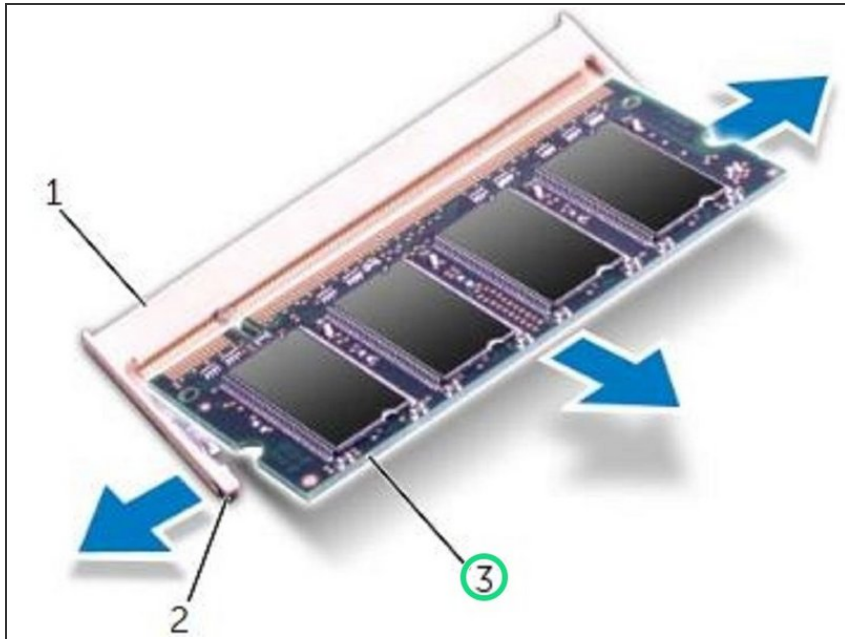


- Remove the memory module from the memory-module connector.

## Step 3 — Align the Notch

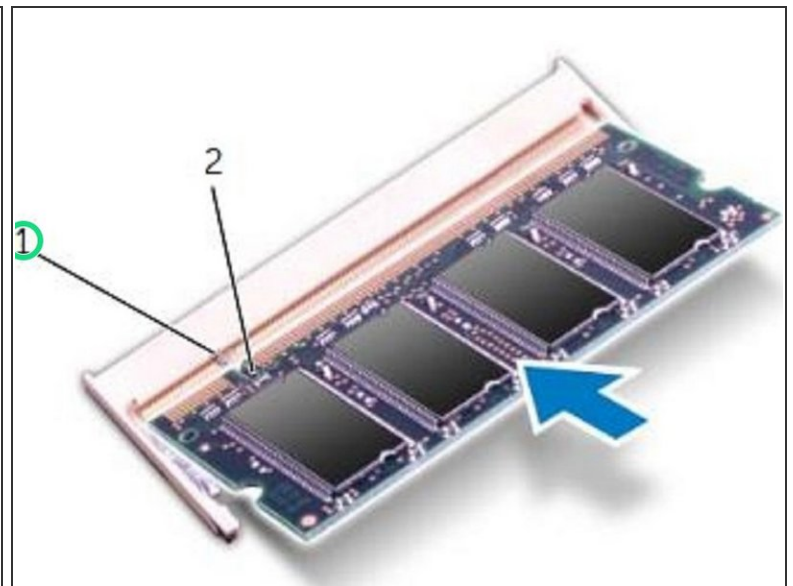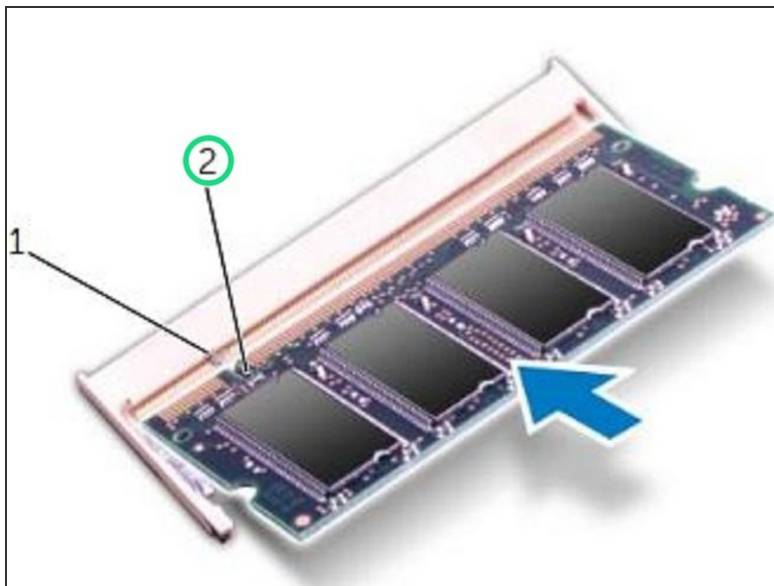

- Align the notch on the memory module with the tab on the memory-module connector.

## Step 4 — Sliding the Memory Module

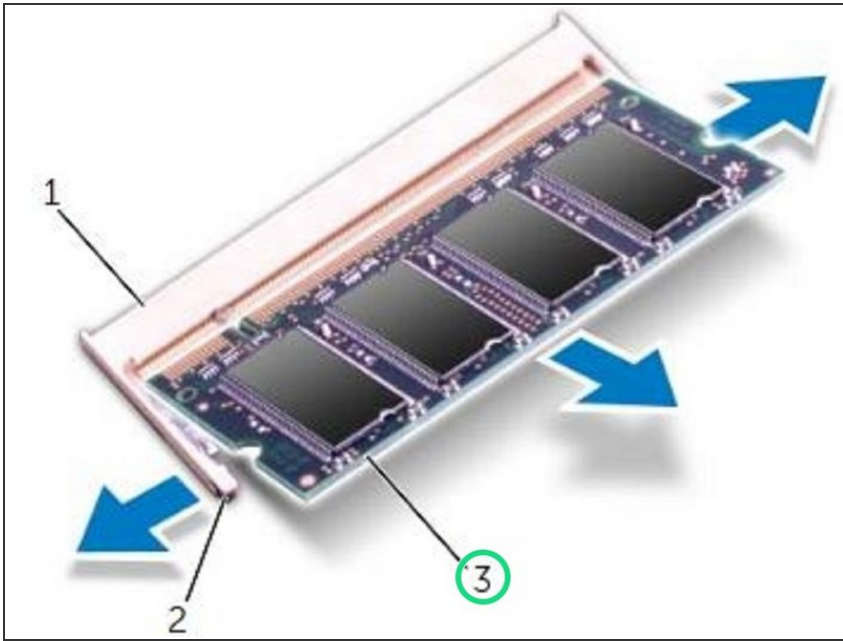

- Slide the memory module firmly into the slot at a 45-degree angle, and press the memory module down until it clicks into place. If you do not hear the click, remove the memory module and reinstall it.

ⓘ NOTE: If the memory module is not installed properly, the computer may not boot.

This document was last generated on 2019-05-22 06:27:27 AM.