



Dell Inspiron 15R N5110 Battery Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Battery.

Step 1 — Sliding the Latches



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Close the display and turn the computer over.
- Slide the battery latches on each end of the battery bay to the unlock position. You will hear a click when the battery is unlocked.

Step 2 — Removing the Battery



- Lift and remove the battery off the computer base to disconnect it from the computer.

Step 3 — Align the Tabs



- Align the tabs on the **NEW** battery with the slots on the battery bay and snap the battery into place.

This document was last generated on 2019-01-14 03:16:59 PM.