




# Dell Inspiron n5110 Battery Replacement

Written By: Terrence15

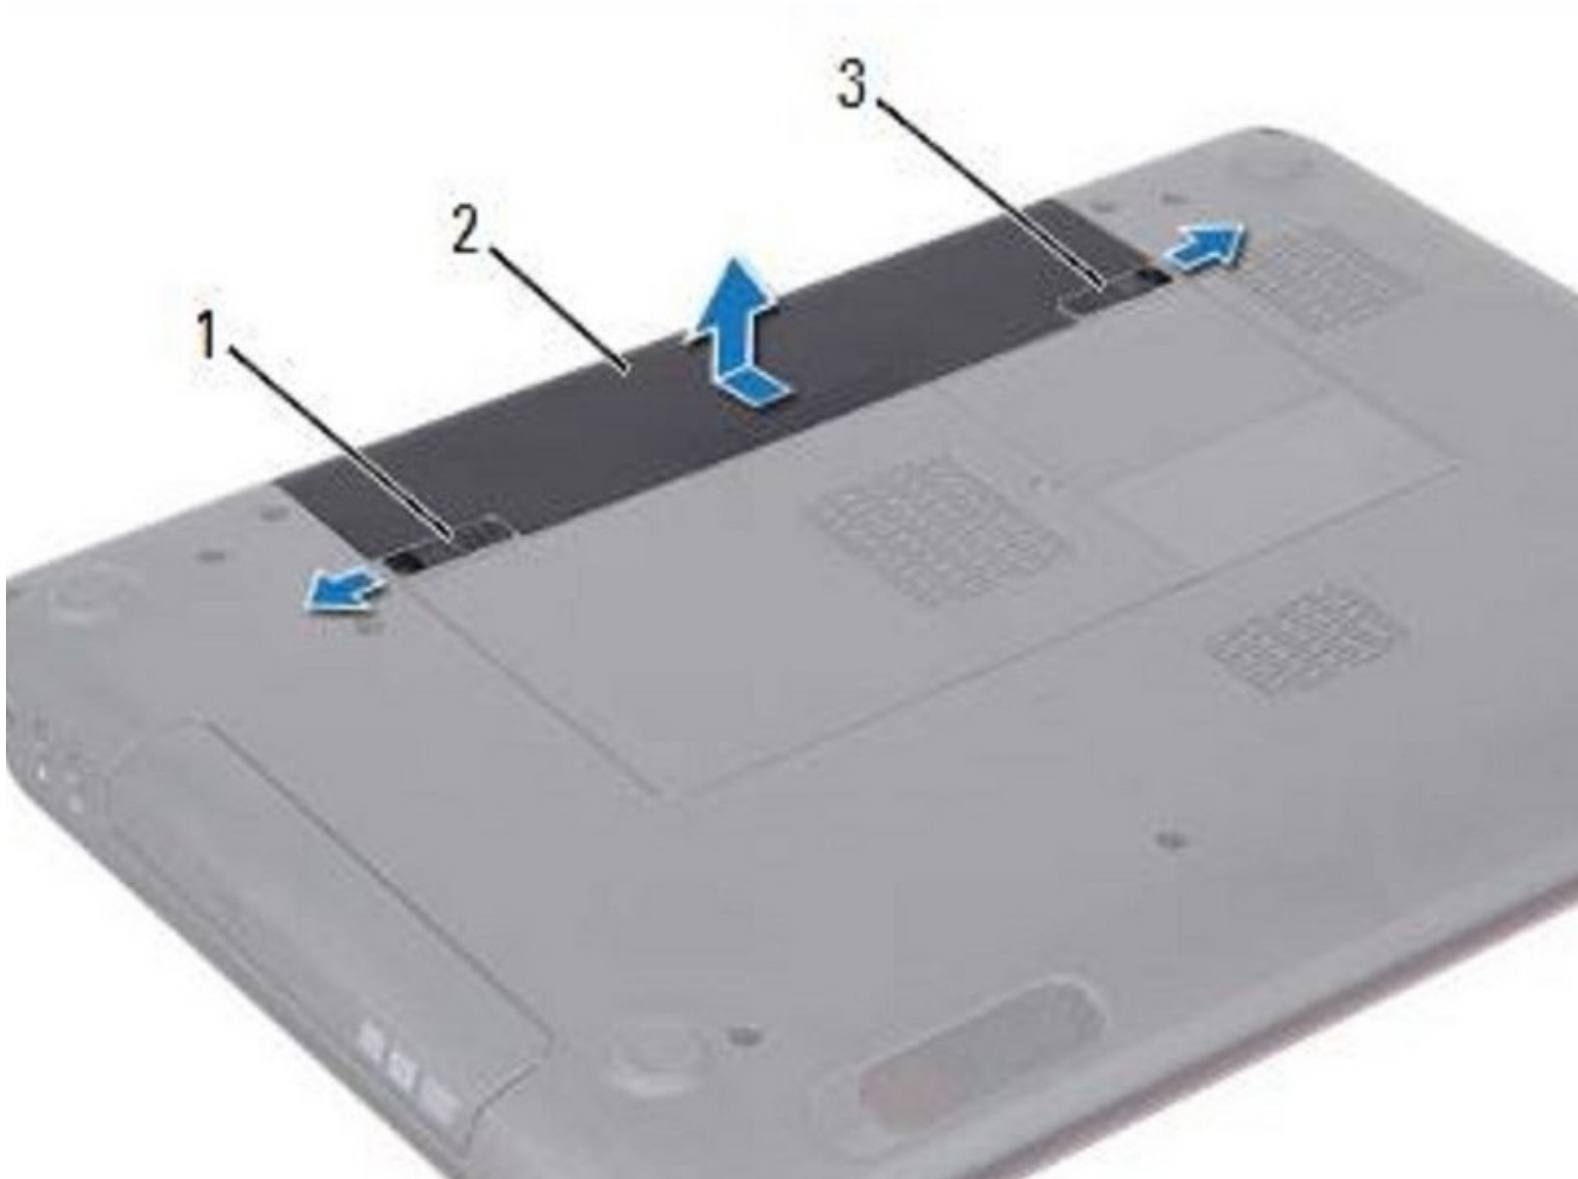

## **INTRODUCTION**


In this guide, we will be showing you how to remove and replace the Battery.

## Step 1 — Turn Over the Computer




- ⚠ WARNING:** Before working inside your computer, read the safety information that shipped with your computer. Follow the instructions in ["Before You Begin"](#).
- ⚠ CAUTION:** To avoid electrostatic discharge, ground yourself by using a wrist grounding strap or by periodically touching an unpainted metal surface (such as a connector on your computer).
- Shut down the computer and turn it over.

## Step 2 — Sliding the Latch

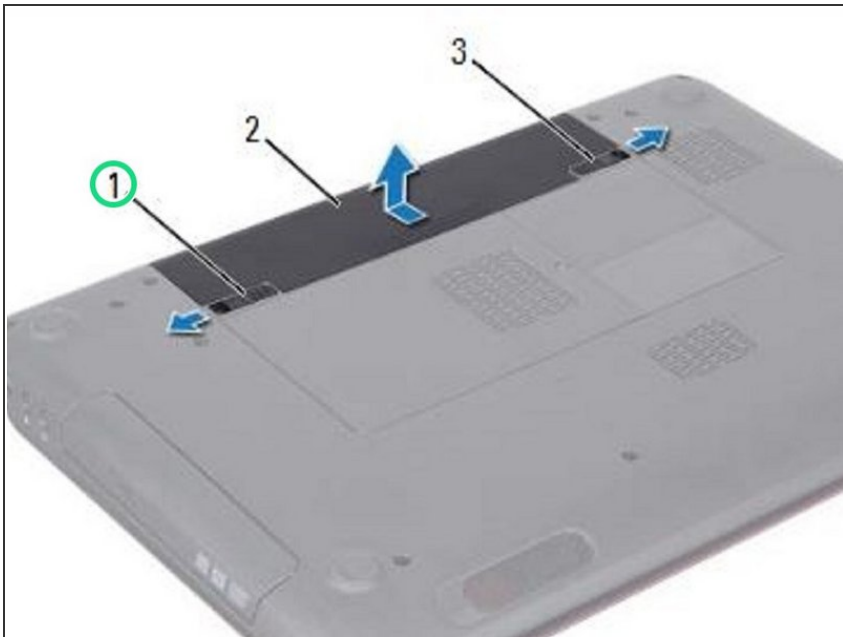


- Slide the battery release latch and the battery lock latch to the unlock positions.

### Step 3 — Lifting the Battery

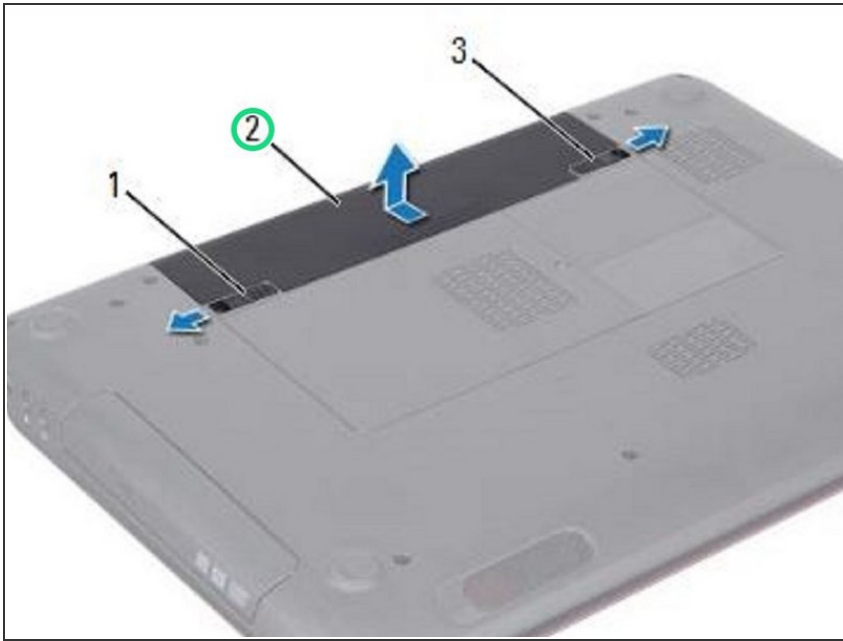


- Slide and lift the battery out of the battery bay.

### Step 4 — Sliding the Battery

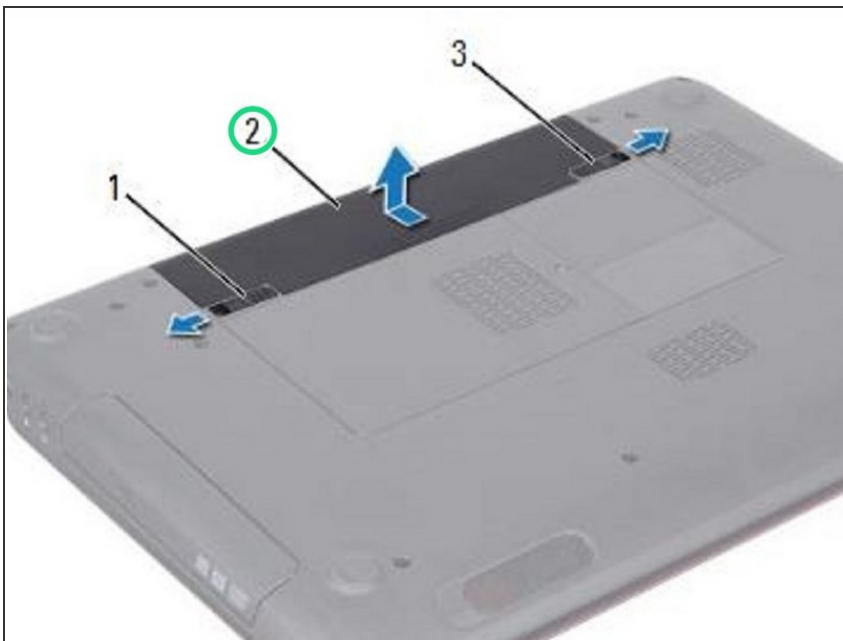

- Slide the **NEW** battery into the battery bay until it clicks into place.

## Step 5 — Sliding the Battery Latch

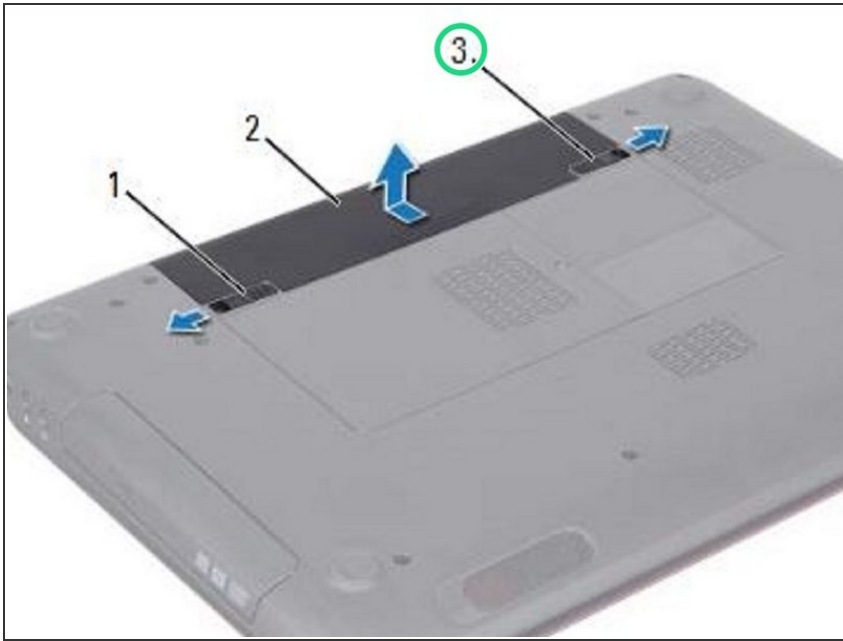

- Slide the battery lock latch to the lock position.

This document was last generated on 2019-01-15 06:21:47 AM.