




Dell Inspiron 15R SE 7520 Hard Drive Replacement

Written By: Terrence15

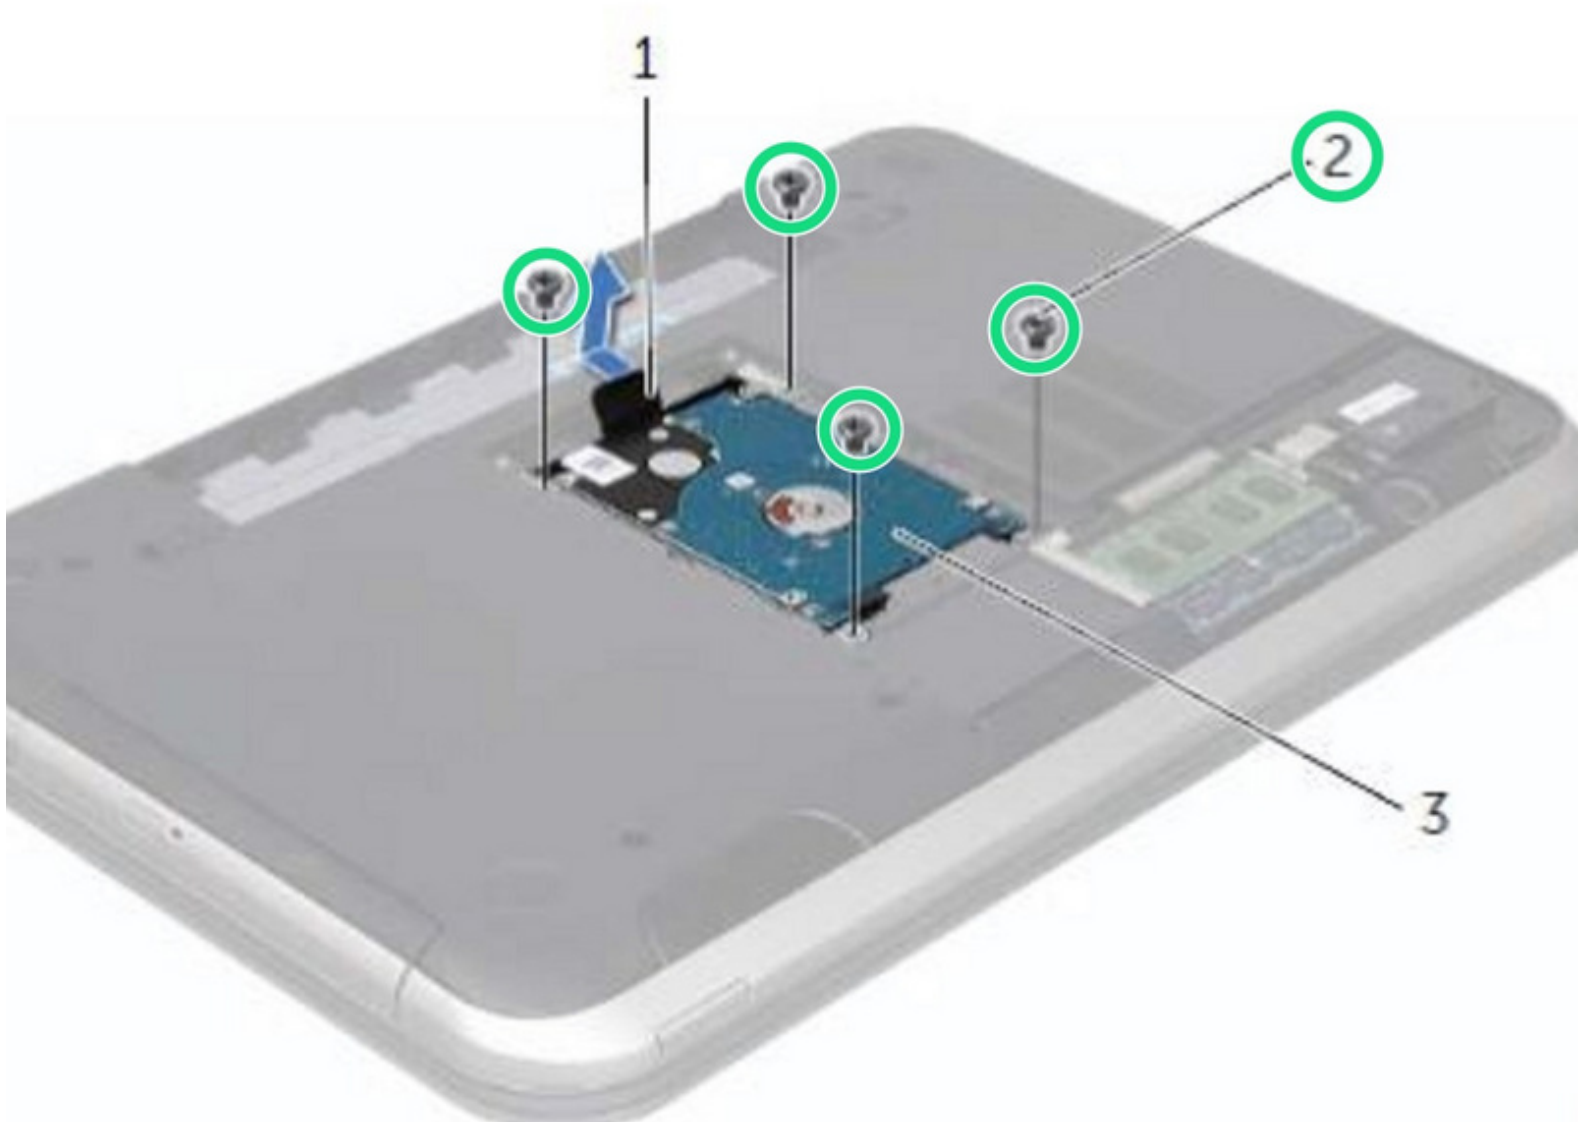


INTRODUCTION

In this guide, we will be showing you how to remove and replace the Hard Drive.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-


Step 1 — Remove the Screws

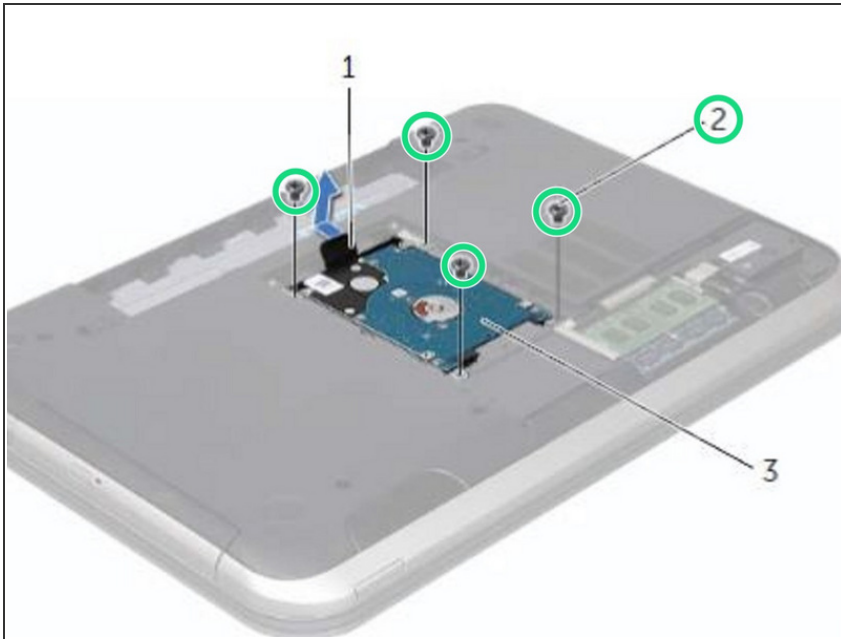

⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).


- Remove the screws that secure the hard-drive assembly to the computer base.

Step 2 — Sliding the Hard Drive

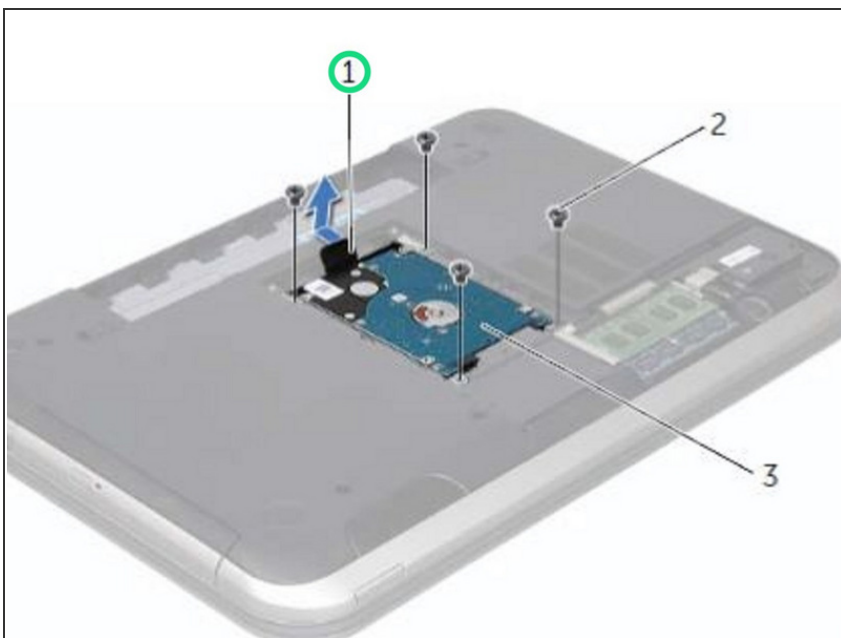


- Using the pull-tab, slide the hard-drive assembly toward the back of the computer to disconnect the hard-drive assembly from the connector on the system board.

Step 3 — Lifting the Hard-Drive Assembly

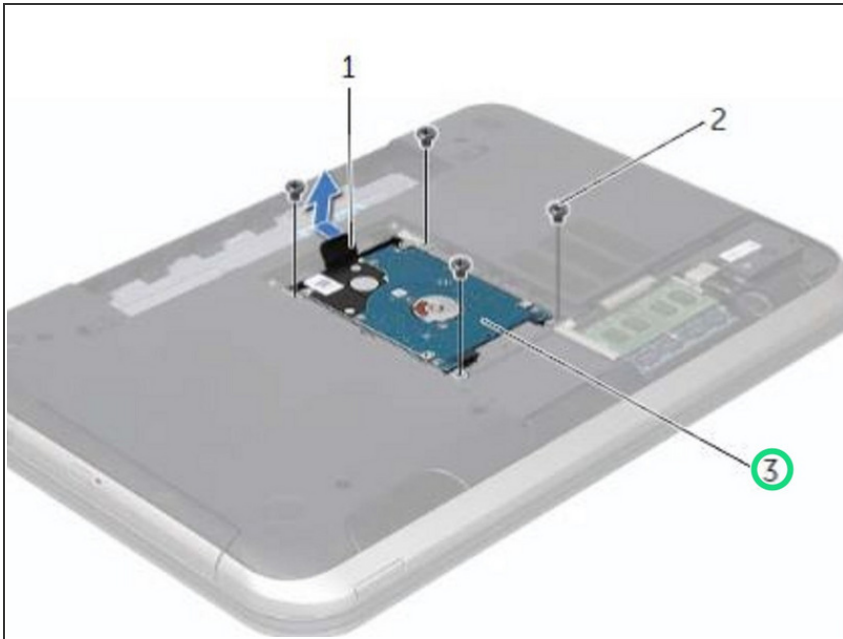



- Lift the hard-drive assembly out of the computer base.

Step 4 — Remove the Screws

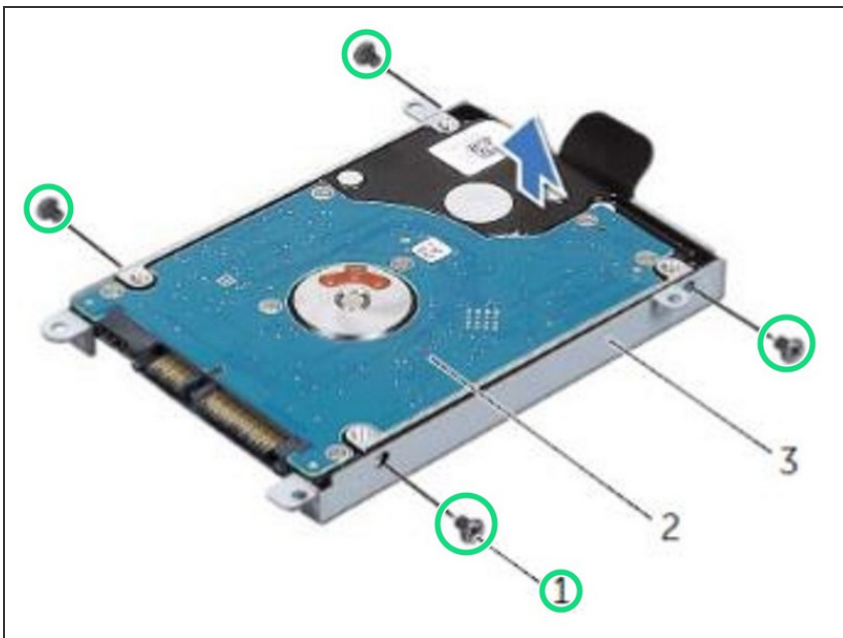


- Remove the screws that secure the hard-drive bracket to the hard drive.

Step 5 — Lifting the Hard Drive

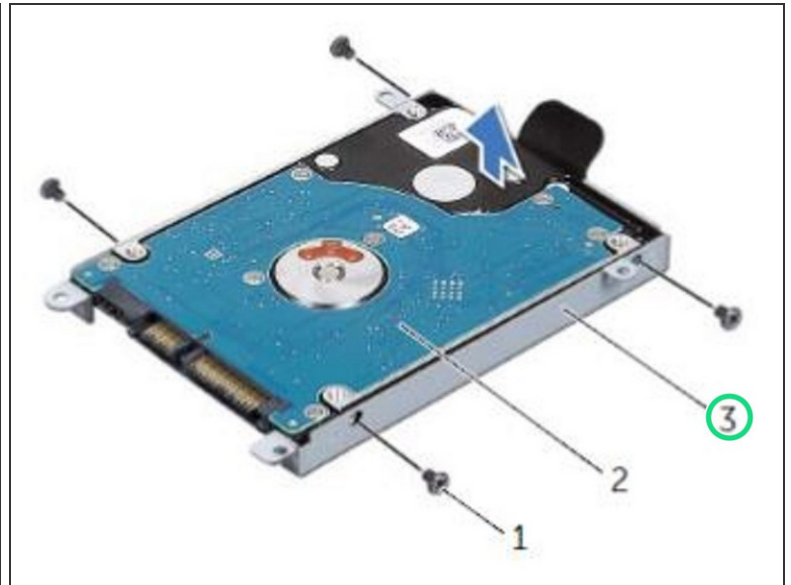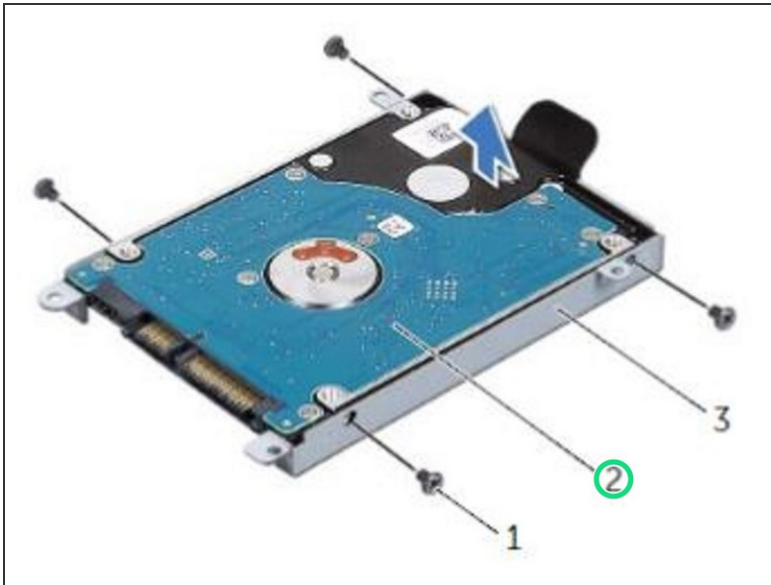


- Lift the hard drive off the hard-drive bracket.

Step 6 — Align the Screw Holes

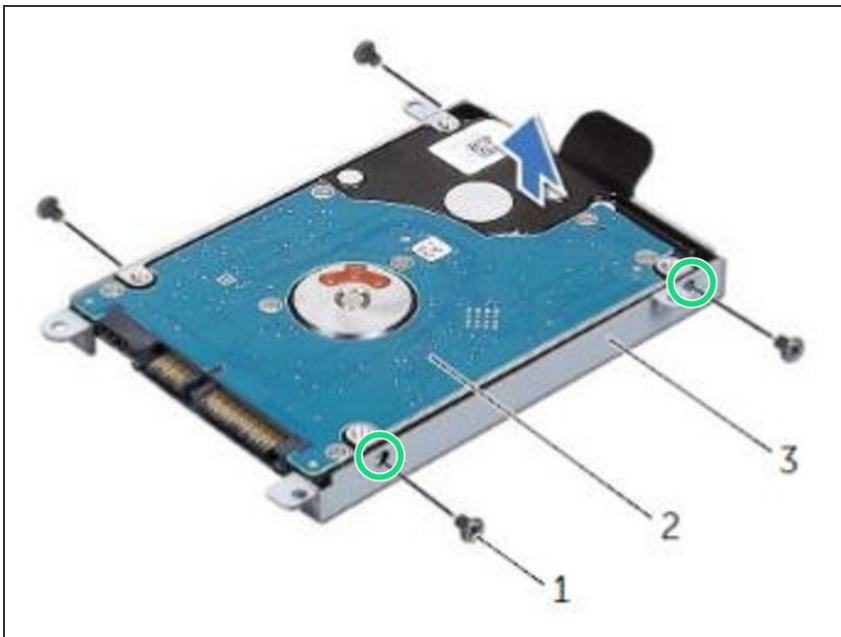


- Align the screw holes on the hard drive-bracket with the screw holes on the **NEW** hard drive.

Step 7 — Replace the Screws

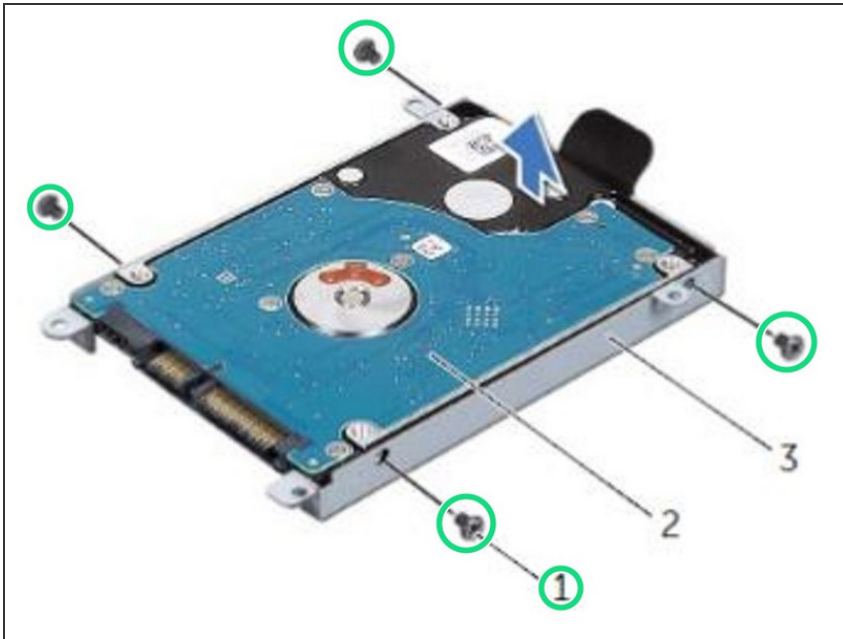


- Replace the screws that secure the hard-drive bracket to the hard drive.

Step 8 — Place the Hard-Drive Assembly

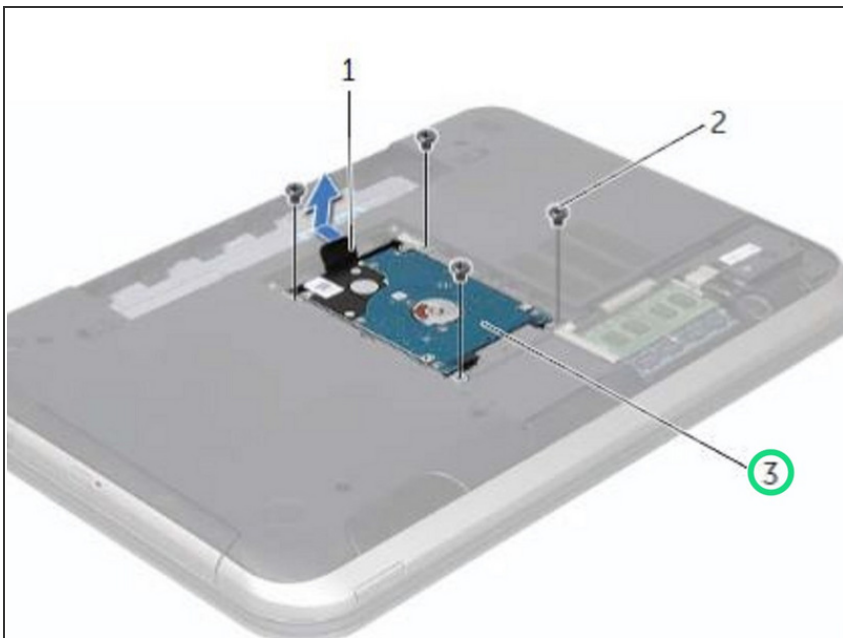


- Place the hard-drive assembly on the computer base.

Step 9 — Sliding the Hard Drive Assembly

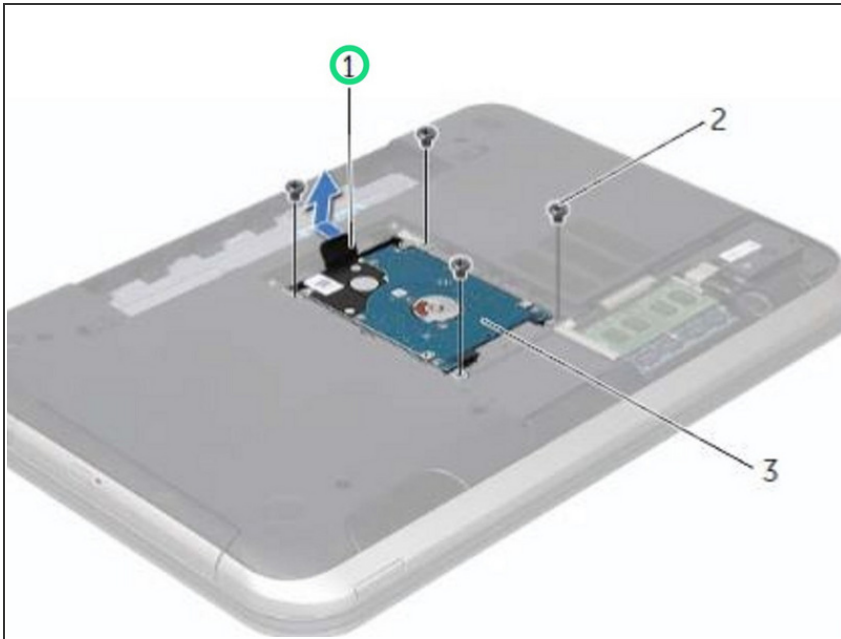

- Using the pull-tab, slide the hard-drive assembly toward the front of the computer, to connect the hard-drive assembly to the connector on the system board.

Step 10 — Replace the Screws

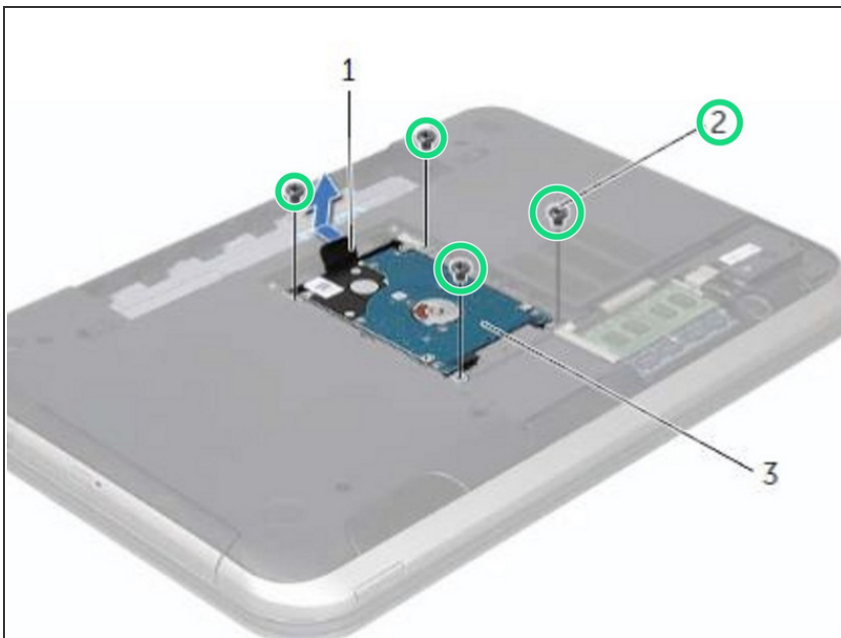

- Replace the screws that secure the hard-drive assembly to the computer base.