



Dell Inspiron 15R SE 7520 Display Assembly Replacement

Written By: Terrence15



INTRODUCTION

In this guide, we will be showing you how to remove and replace the Display Assembly.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Disconnecting the Antenna Cables



⚠ WARNING: Before working inside your computer, read the safety information that shipped with your computer and follow the steps in ["Before You Begin"](#).

- Disconnect the antenna cables from the connectors on the Mini-Card.

Step 2 — Peel the Tape



- Peel the tape that secures the display cable to the system board and then disconnect the display cable from the connector on the system board.

Step 3 — Display Cable Routing



- Make a note of the display cable routing and remove the cable from the routing guides.

Step 4 — Remove the Screws



- Remove the screws that secure the display assembly to the computer base.

Step 5 — Lifting the Display Assembly



- Lift the display assembly off the computer base.

Step 6 — Placing the Display Assembly



- Place the **NEW** display assembly in position and replace the screws that secure the display assembly to the computer base.

Step 7 — Route the Display Cable



- Route the display cable through the routing guides and connect the display cable to the connector on the system board.

Step 8 — Adhering the Tape



- Adhere the tape that secures the display cable to the system board.

Step 9 — Connecting the Antenna Cables



- Connect the antenna cables to the connectors on the Mini-Card.

This document was last generated on 2018-10-19 01:29:39 AM.