



How to Recognize MicroSD Card

This guide is a step by step manual on how to get your Motorola Adventure V750 to recognize the micro sd card.

Written By: Kyle



INTRODUCTION

The Motorola Adventure is a cellular device that has a Micro SD card for more memory and for storing useful information valued by the owner. At times, the format of the phone may need to be reset or altered in order to read a new Micro SD card. This guide will prepare those that are witnessing this error, and inform them how to further eliminate this issue.

Step 1 — How to Recognize MicroSD Card



- Go to the main screen on the device and press the Center Select Key (OK), and select **Menu** to open the menu. This will format the SD card to make it recognizable by the device.

Step 2



- In the menu options, use the Navigation Key to scroll to **Settings & Tools**. Press the Center Select Key (OK) to select this option.

Step 3



- Use the Navigation Key to scroll to **Memory**. Press the Center Select Key (OK) to select this option.

Step 4



- Select **Phone Memory** (or **Card Memory** on differing models) by pressing the Center Select Key (OK).

Step 5



- If selected **Phone Memory** in the previous step, select **Phone Memory Usage**. If you selected **Card Memory**, select **Card Memory Usage** and **Format Card**.

Step 6



- Select any of the following folders to store their files on the SD card: **My Pictures**, **My Videos**, **My Music**, or **My Sounds**. To select the folder, press the Center Select key (OK).