



How to Recognize MicroSD card

This guide is a step by step manual on how to get your Motorola Adventure V750 to recognize the micro sd card.

Written By: Kyle



INTRODUCTION

The Motorola Adventure is a cellular device that has a Micro SD card for more memory, and storing useful information valued by the owner. At times, the format of the phone may need to be reset or altered in order to read a new Micro SD card. This guide will prepare those that are witnessing this error, and inform them onto further eliminate this issue.

Step 1 — How to Recognize MicroSD card



- The first step is to format the card on the phone to make the phone recognize it. To do this, go to the main screen, press the Center Select Key (OK)-(MENU) to open the menu.

Step 2



- Once in the menu options, there will be a Navigation Key which you will then scroll to (SETTINGS & TOOLS). Press the Center Select Key (OK).

Step 3



- From there, you will then scroll to Memory. Press the Center Select Key (OK).

Step 4



- There you will select Phone Memory, or on some models, it is labeled as (Card Memory). Scroll over to this option and once again, press the Center Select Key (OK).

Step 5



- The next step is to make sure that if you selected Phone Memory in step 4, you will also see Phone Memory Usage. Or, also to make sure that if you selected Card Memory in step 4, you will also see Card Memory Usage and Format Card.

Step 6



- Finally, Select My Pictures, My Videos, My Music, or My Sounds, and press the Center Select key (OK).

To get your Motorola Adventure V750 to format and recognize the Micro SD card.

This document was last generated on 2017-06-19 08:27:10 AM.