



Ematic FunTab 3 Back Panel Replacement

Open or replace the case on your Ematic FunTab 3.

Written By: Harrison Lee



INTRODUCTION

If you need to open your device or replace the back panel, this guide will show you how.

TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Back Panel



 Turn off the device before starting

 To prevent damage, open the device on the side without the buttons.

- Insert the hooked end of the plastic opening tool in the gap between the screen and the back panel on the edge of the device.
- Slide the plastic opening tool down the long side of the device.
- Insert tool again and slide it down the long side of the case a second time.

Step 2



- Pull the back panel away from the screen.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-11-22 08:35:38 AM.