




# Farberware FSTO100 Power Supply Replacement

Use this guide to perform a basic fix to the power supply.

Written By: Tony Wang

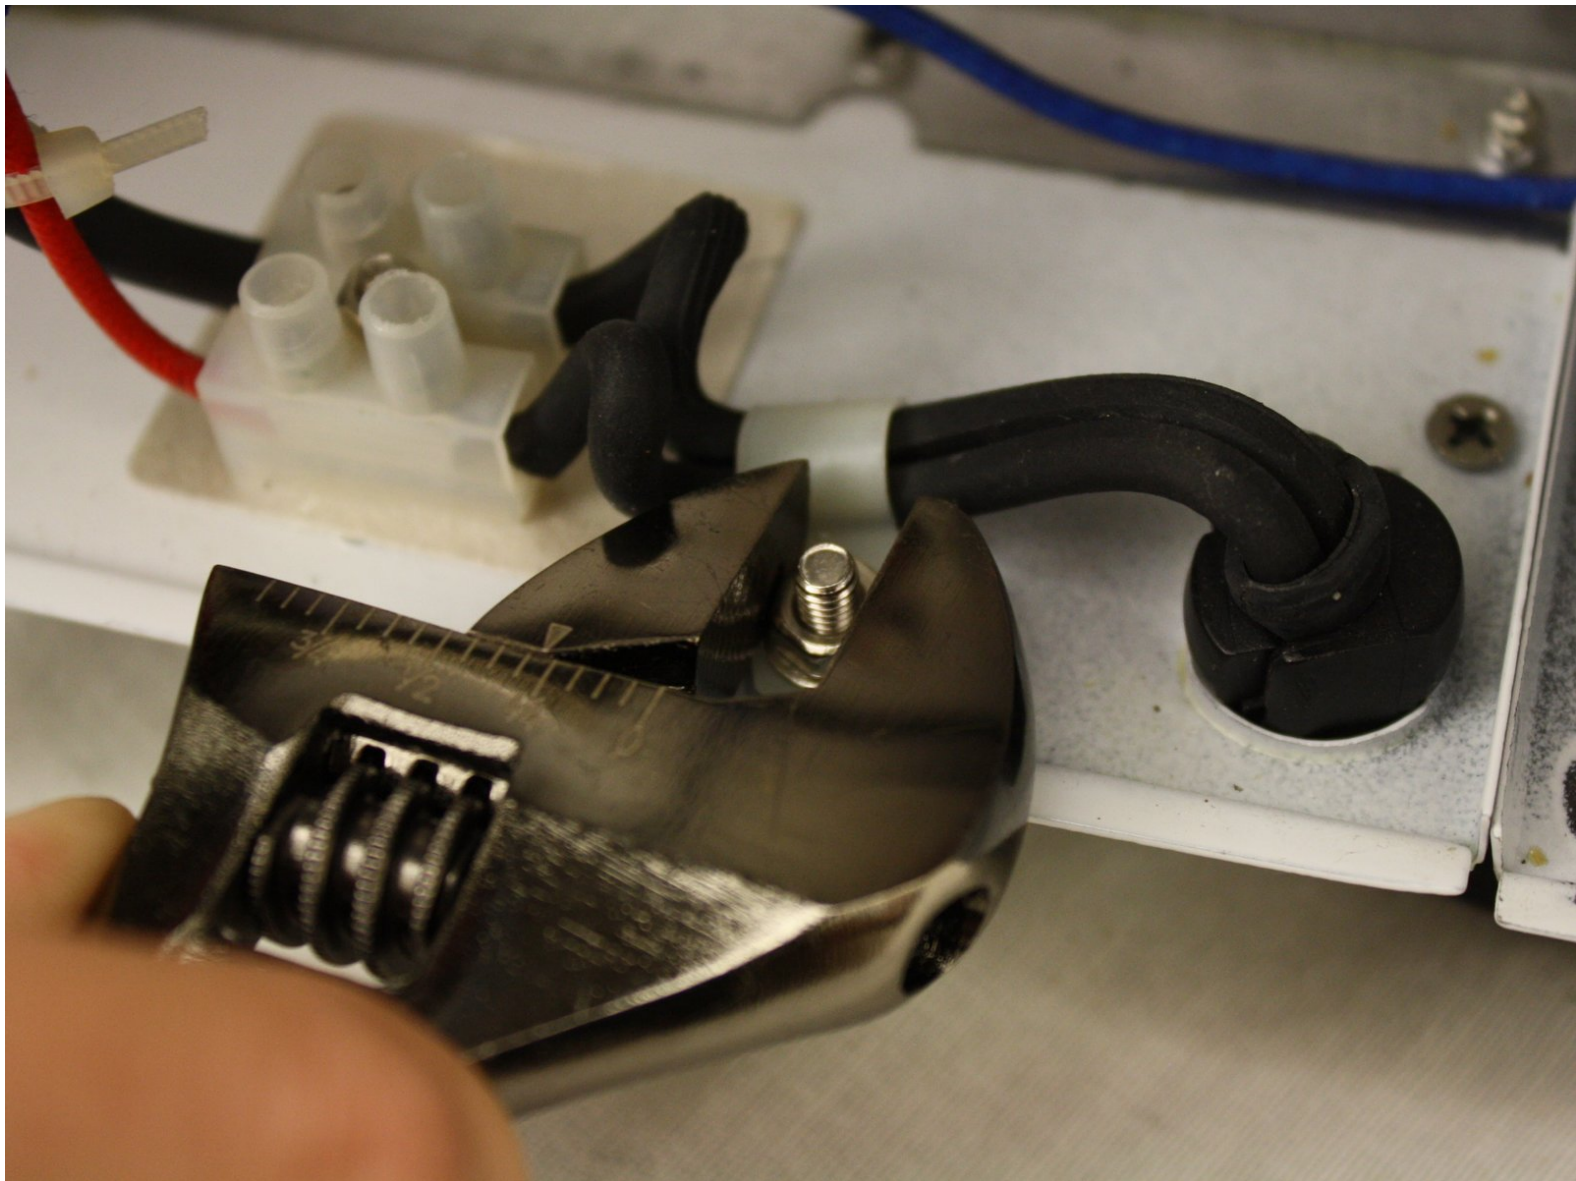

## INTRODUCTION

Use this guide to repair the power supply with a Phillips head screwdriver, a wrench, and pliers. These tools will help secure the screw holding the wire.

---

### TOOLS:


- [9/32" Crescent Wrench](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
  - [Flathead 3/32" or 2.5 mm Screwdriver](#) (1)
-

## Step 1 — Power Supply




- First, to remove the plastic bracket, turn toaster oven on its side.

## Step 2

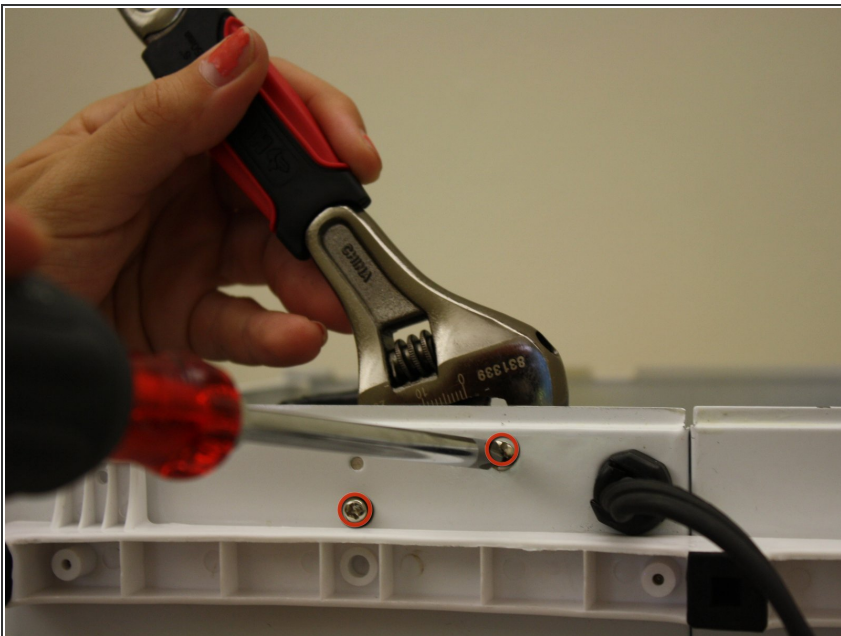


- Use Phillips head screwdriver and wrench to remove screw and nut securing the plastic bracket.

### Step 3

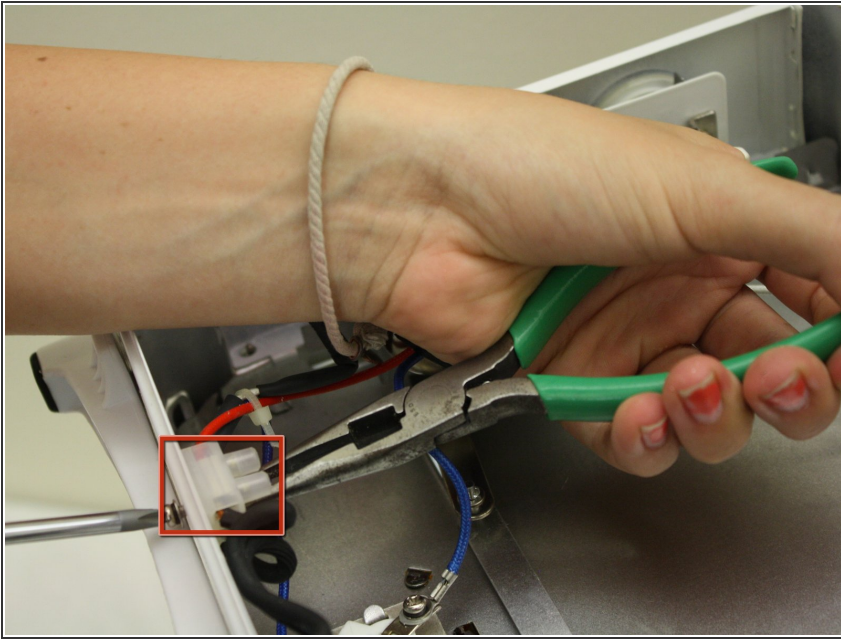

- Use Phillips head screwdriver and pliers to remove screw and nut securing transformer.

### Step 4

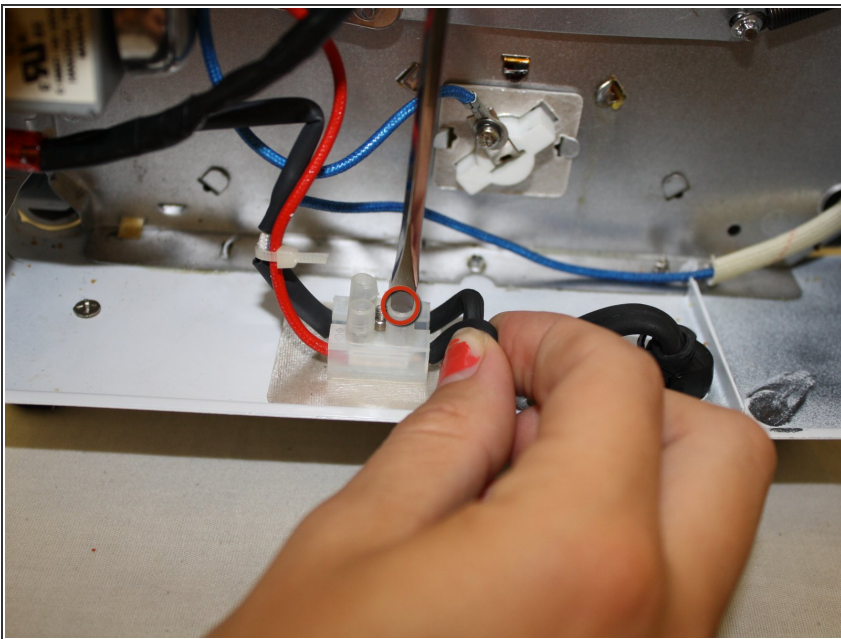

- If the wire gets pulled out of the transformer, reinsert it.
- Use a small flathead screwdriver to secure the screw that holds the wire in place.

To reassemble your device, follow these instructions in reverse order.