




Teac DC-D2831 volume control knob replacement

This guide will show how to remove the old volume control knob and replace it with a new one.

Written By: Oliver Kunz

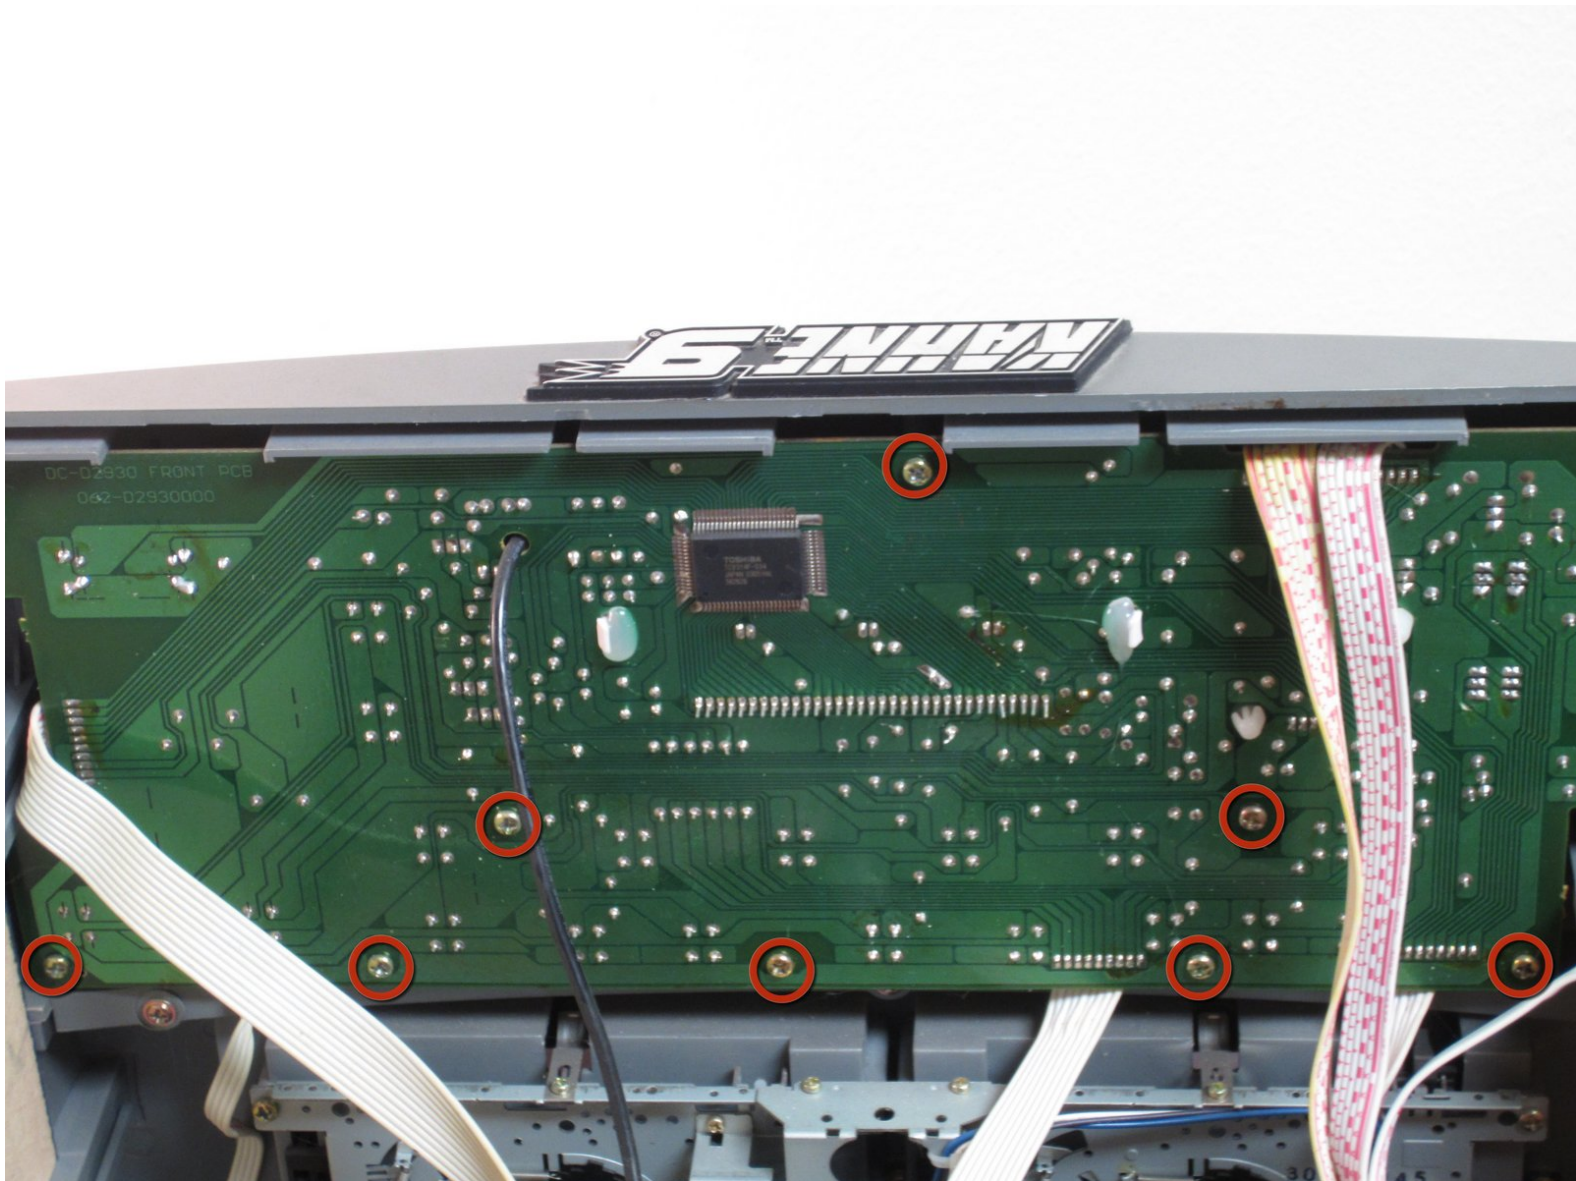



INTRODUCTION

This guide will help you replace your faulty volume knob. This guide should only be looked at after completing the [Disassembly Guide](#).

TOOLS:



- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Volume Control Knob

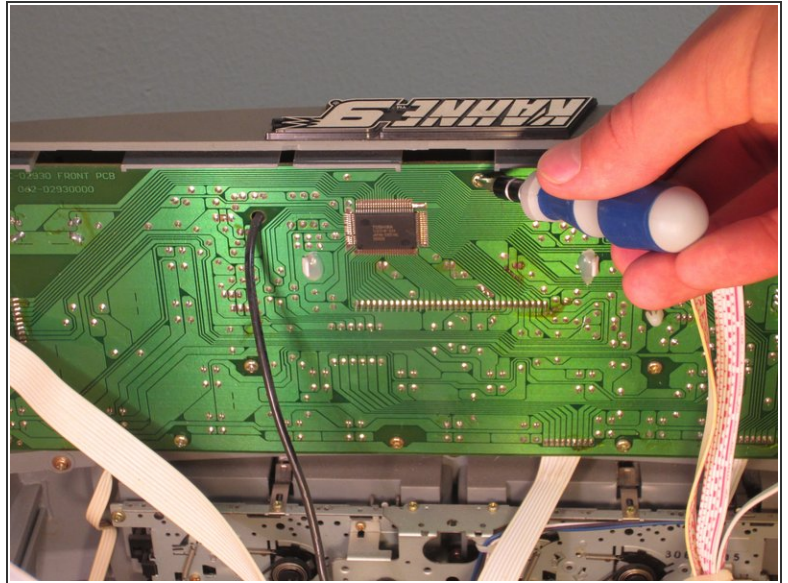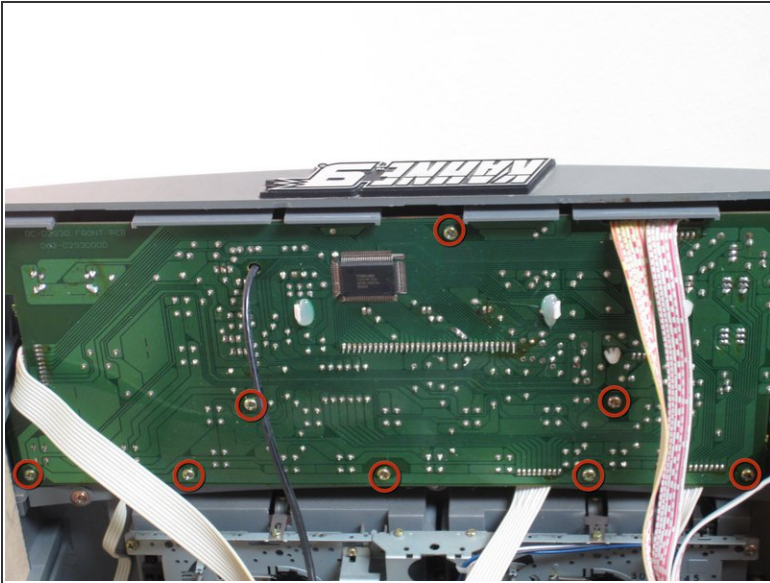


- Remove the screws that are holding the circuit board in place.

Step 2

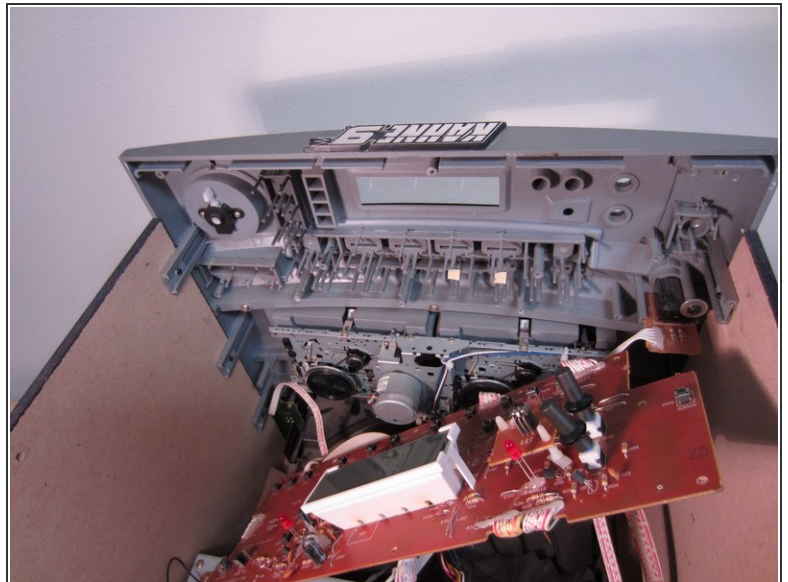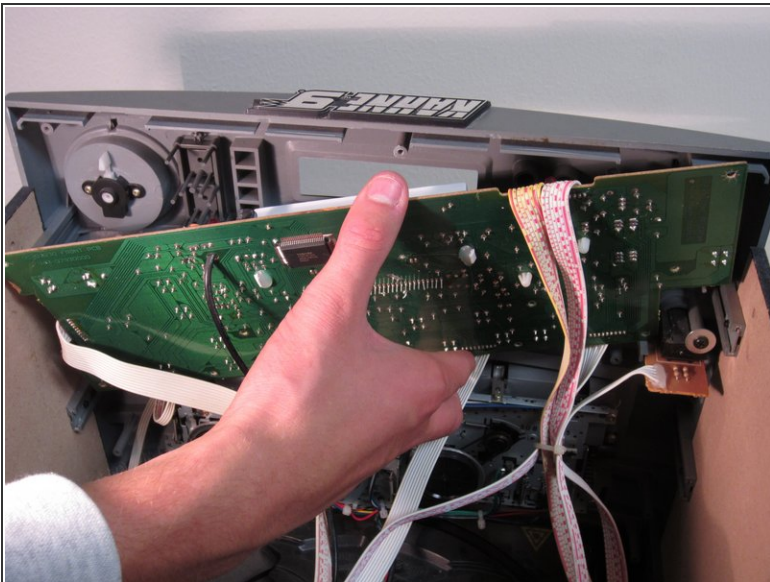

- Pull the circuit board out to reveal the inside of the display.

Step 3

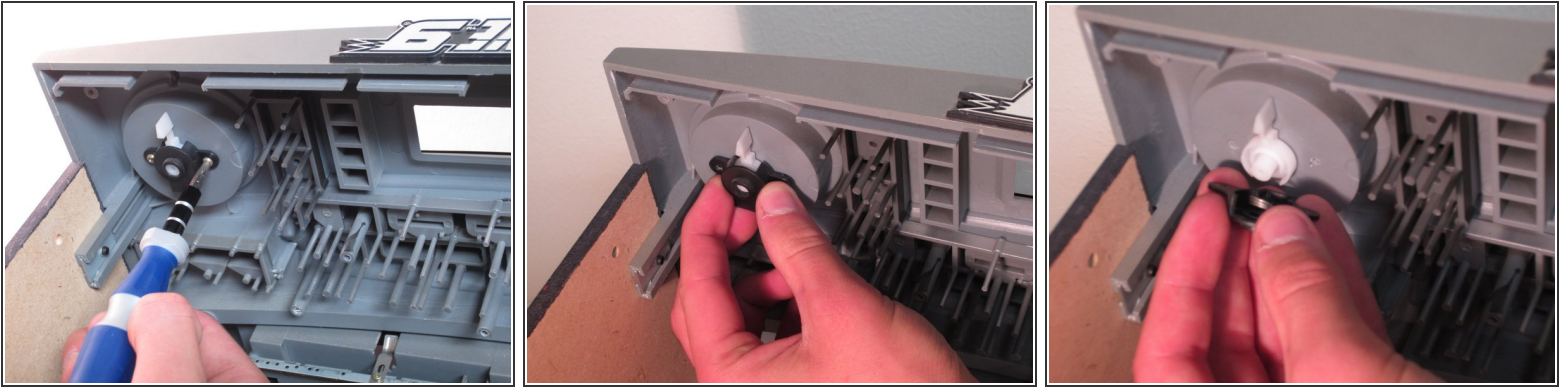

- Remove the screws and the black piece that are holding the volume control knob in place.

Step 4



- Pull the volume control knob from the outside and the white piece on the inside until they separate.
- Replace the volume knob with a new one to complete the repair.

To reassemble your device, follow these instructions in reverse order and follow the disassembly guide instructions in reverse order.

This document was last generated on 2019-07-19 04:32:12 PM.