



MacBook A1150 Teardown

Written By: Luke






TOOLS:




- [Pro Tech Toolkit \(1\)](#)
-

Step 1 — Battery

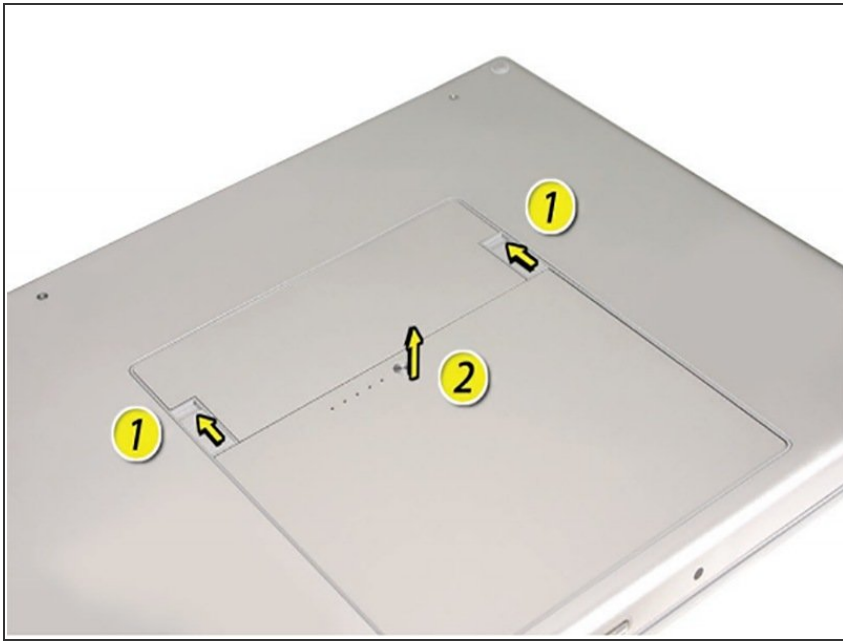


- Shut down the computer and disconnect the power cord and any other cables connected to the computer
- Place the computer face down
- Slide both battery latches away and lift the battery out

Step 2 — Memory

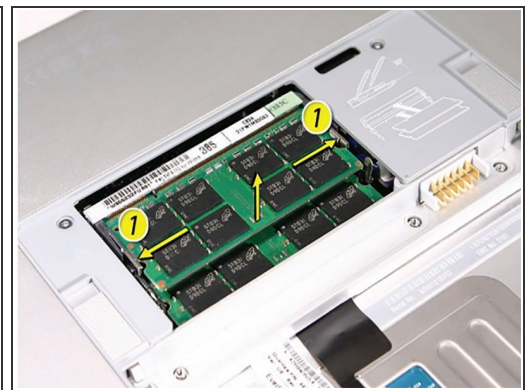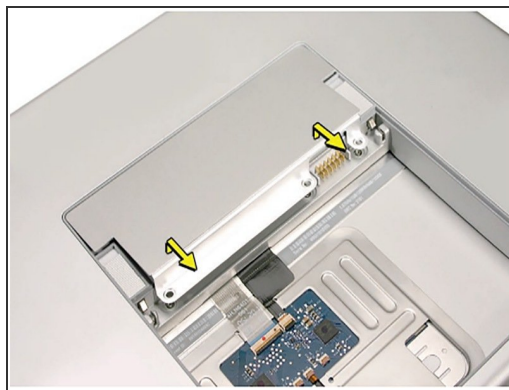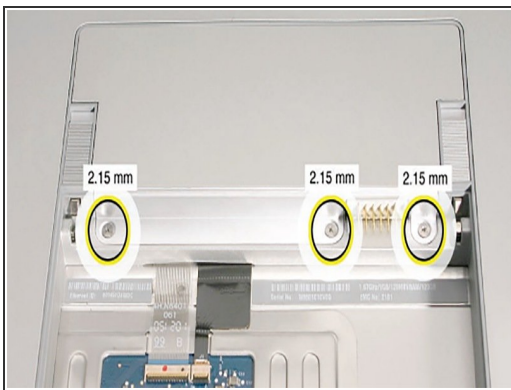


- Remove the three screws from the memory door
- Remove the door as shown
- Remove the memory cards by carefully spreading the tabs away from the card
- Pull the card straight back and out

Step 3 — Top Case

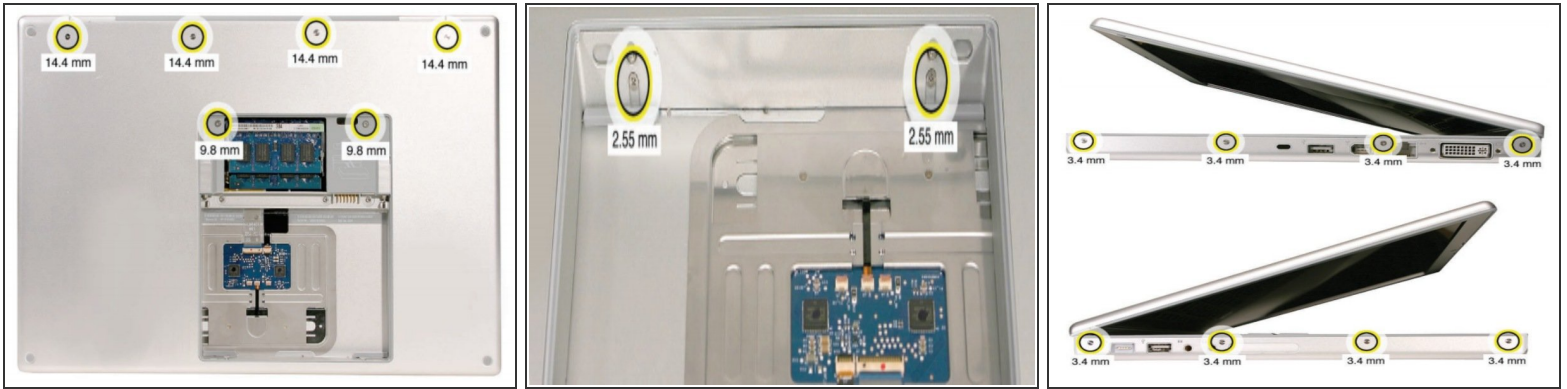



- Remove the six screws on the bottom and the two in the battery bay
- Remove the four screws from the side and two on the back

Step 4 — Top Case Cont.

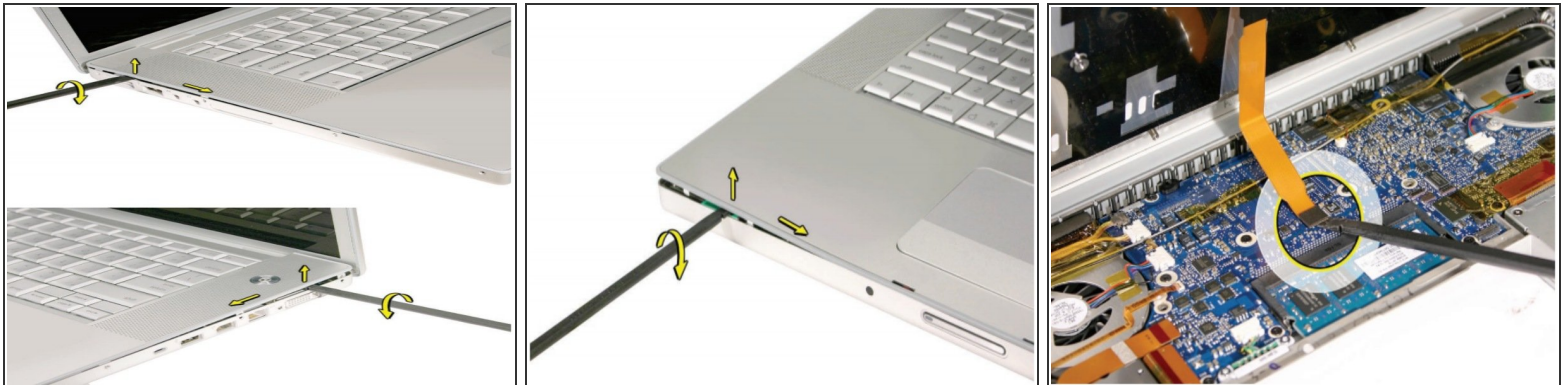

- Open the display slightly past 90 degrees and use a spudger to loosen the top case
- ⓘ A snapping noise is normal
- ⚠ Do not lift the top case once it is free
- Slowly lift the top case until you can see the ribbon cable, carefully unplug then lift the top case off

Step 5

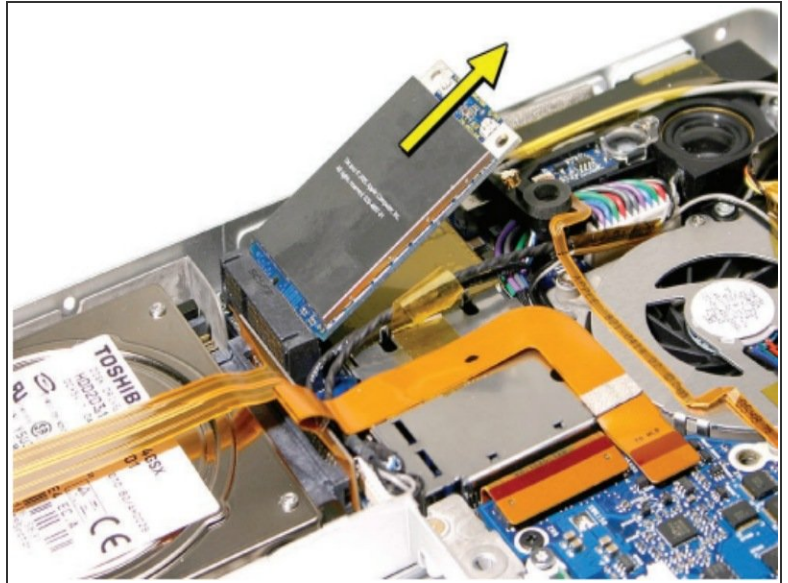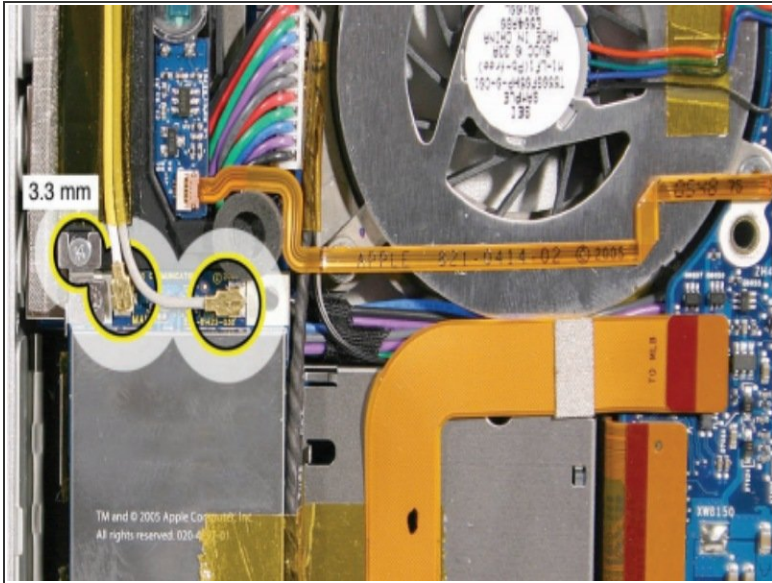

- Remove two antenna connectors. Lift straight up
- Remove one screw and bracket. The card should rise up slightly
- Pull the card straight out

This document was last generated on 2019-05-21 07:24:01 PM.