



Kindle Fire HDX 7" Speaker Bezel Replacement

A free guide on how to replace the speaker bezel on a Kindle Fire HDX 7" tablet.

Written By: Blake Klein



INTRODUCTION

From the outside, the Kindle Fire HDX 7" tablet looks impenetrable. But beneath the speaker bezel lies the screws to open it up.

Follow this guide to remove the speaker bezel, and don't forget to use heat to soften the strong adhesive.



TOOLS:

- [iOpener Kit](#) (1)



PARTS:

- [Kindle Fire HDX 7" Upper Bezel](#) (1)

Step 1 — Speaker Bezel



- Insert an opening pick underneath the speaker bezel, and slide it along the perimeter to separate it from the tablet.
- ⓘ The adhesive is strong and may require an [iOpener](#), or heat gun, to soften.

Step 2



- Remove the speaker bezel.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-11-20 09:35:58 AM.