



# Dell Inspiron 15-7547 Battery Replacement

Replacing a dying battery can allow it to hold a charge better.

Written By: Claro



## INTRODUCTION

The battery provides the power needed to run your laptop. This guide shows how to unscrew and disconnect your Dell Inspiron 15-7547's battery.

---

### TOOLS:

- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Bottom Cover




- Close the display and flip the laptop on its back.
- Loosen the ten 5.0 mm-long Phillips #0 screws.
  - The four screws marked with orange will remain captive to the cover.

## Step 2



- Pry the cover open with a plastic spudger and remove it.

### Step 3 — Battery

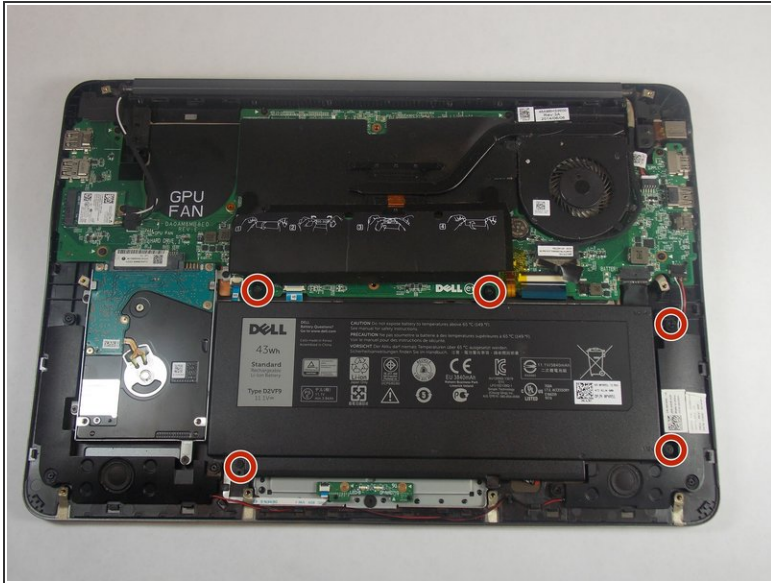




- Remove the five 5.0 mm-long Philips #0 screws that connect the battery to the case.

### Step 4



- Lift the battery out of the case.

## Step 5

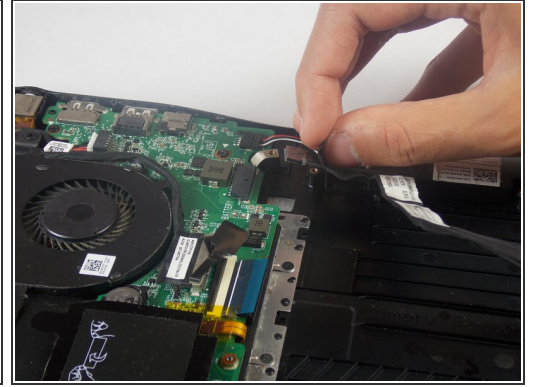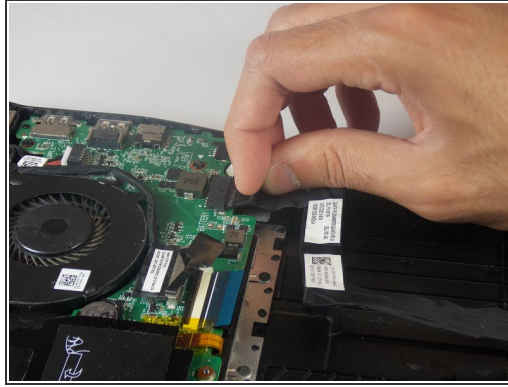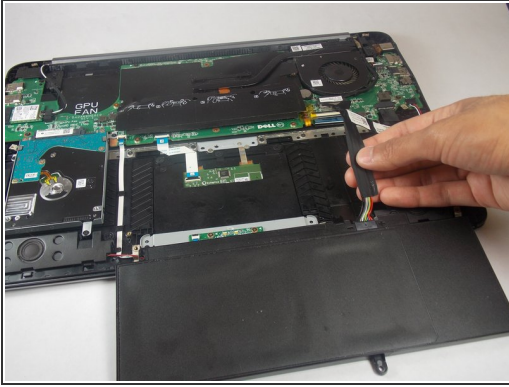

- Disconnect the battery using the pull tab to pull towards the front of the chassis.
  - ⓘ Most of the cable is attached to the case with adhesive, which may cause slight resistance.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 11:58:58 AM.