



Hot Wheels AI Intelligent Race System Car Batteries Replacement

This is a step by step guide on how to replace the car batteries.

Written By: Luke Marshall



INTRODUCTION

Using your Hot Wheels AI Intelligent Racing system may drain out the battery. Consider replacing them!

TOOLS:


- [JIS #1](#) (1)
-

Step 1 — Car Batteries



- Use a JIS #1 screwdriver to unscrew the single screw that secures the battery cover on the bottom of the car.

Step 2

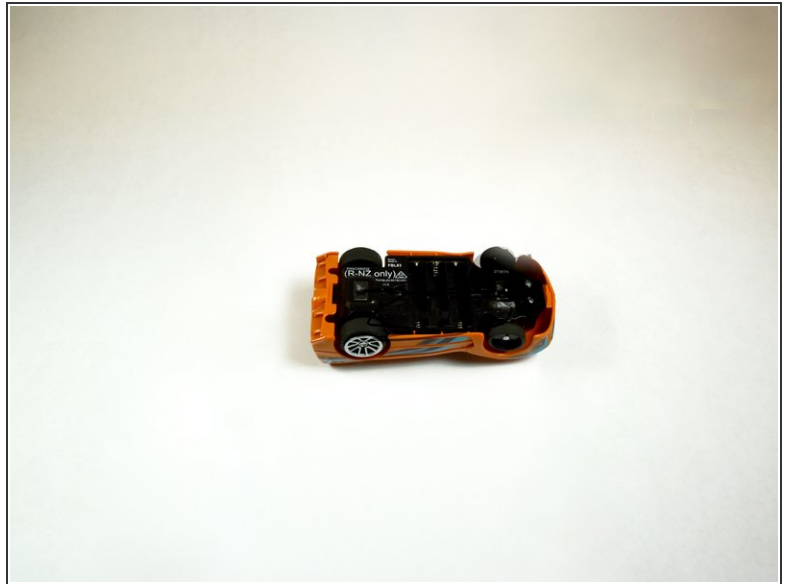

- Make sure there are no rust or broken springs in the battery slot.
- Press on the positive end of the battery to either remove or insert.

Step 3



- Turn on the controller and car to see if the device is responsive.

This document was last generated on 2019-08-24 12:07:56 AM.