



# Hot Wheels AI Intelligent Race System Car Batteries Replacement

This is a step by step guide on how to replace the car batteries.

Written By: Luke Marshall



---

## INTRODUCTION

Using your Hot Wheels AI Intelligent Racing system may drain out the battery. Consider replacing them!

---

### **TOOLS:**


- **JIS #1** (1)
-

## Step 1 — Car Batteries



- Use a JIS #1 screwdriver to unscrew the single screw that secures the battery cover on the bottom of the car.

## Step 2

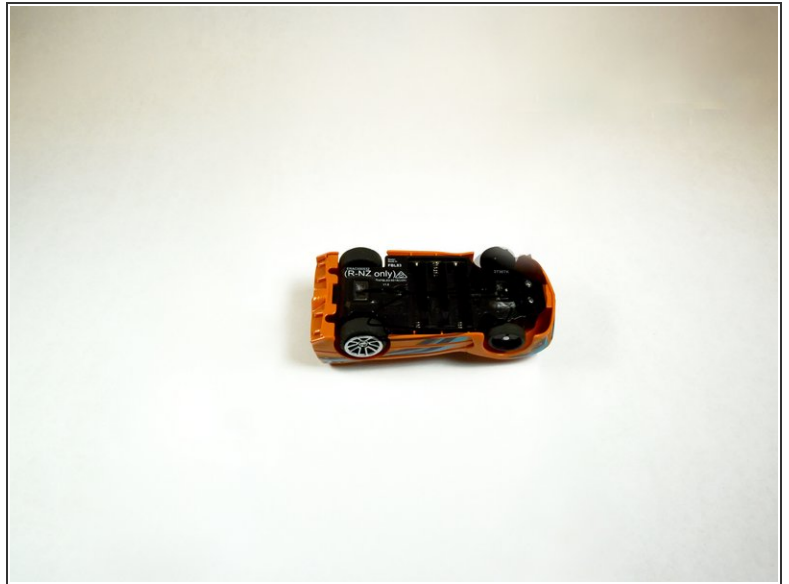

- Make sure there are no rust or broken springs in the battery slot.
- Press on the positive end of the battery to either remove or insert.

### Step 3



- Turn on the controller and car to see if the device is responsive.