



JBL Pulse 3 Speaker Grill Replacement

This guide will help you replace the speaker grill on the JBL Pulse 3.

Written By: Kaitlyn Greenfield



INTRODUCTION

The speaker grill is the small, circular, mesh looking piece on the bottom of the JBL Pulse 3. It is often the first component you have to take off to get to other components on the JBL Pulse 3. For further information regarding troubleshooting, please visit our [Troubleshooting Page](#).



TOOLS:

- [iFixit Opening Tools](#) (1)



PARTS:

- [JBL Pulse 3 Speaker Grill](#) (1)

Step 1 — Speaker Grill



- Lay the JBL Pulse 3 on its side as shown in the picture.
- Use a plastic opening tool to lift the top right corner of the speaker grill. A small amount of force is necessary to remove the grill.

Step 2



- Repeat step 1 for bottom right corner of speaker grill.

Step 3



- After pulling the right side of the grill off, place thumb underneath grill as shown in the picture.
- Lift and pull straight out to pull grill off the posts.

Step 4



- Repeat steps 1-3 for the left side of the speaker grill on the JBL Pulse 3. The speaker grill should now be completely removed from the JBL Pulse 3.

To reassemble your device, follow the instructions in reverse order.

This document was last generated on 2019-07-21 04:00:04 PM.