



Bissell Pet Hair Eraser Dirt Cup Replacement

How to take apart the Dirt cup and replace it for the Bissell Pet Hair Eraser.

Written By: Jim Lopez



INTRODUCTION

This guide will teach you how to access and replace the Dirt cup for the Bissell Pet Hair Eraser. This guide is the first step for reaching all other components.

Step 1 — Dirt Cup



- Firmly grasp the handle and press the release button.
- Gently pull the dirt cup down and away from the vacuum body.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 12:29:30 AM.