



Pioneer DDJ Ergo. How to do internal clean, due PLAY button problem

I'm going to disassemble this controller and clean it with isopropyl alcohol and toothbrush.

Written By: @HectorNavarroMX



INTRODUCTION

This midi controller has the problem on PLAY button, no longer responds when it's pressed. It has a long time use and only requires a cleaning service. I'm going to disassemble this controller and clean it with isopropyl alcohol and toothbrush.

#RTSistemasPueblaMX @HectorNavarroMX

[video: <https://www.youtube.com/watch?v=6Rj-OljJIBk>]

TOOLS:

- [Standard #2 Philips Head Screw Driver](#) (1)
 - [Spudger](#) (1)
 - [Metal Spudger](#) (2)
 - [Toothbrush](#) (1)
 - [Isopropyl Alcohol](#) (1)
-

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-21 03:02:40 AM.