




Bissell Pet Hair Eraser Filter Cup Replacement

The filter cup is used to collect the dirt and pet hair that the vacuum sucks up. If it isn't working then it might be time to wash or replace it.

Written By: Jim Lopez

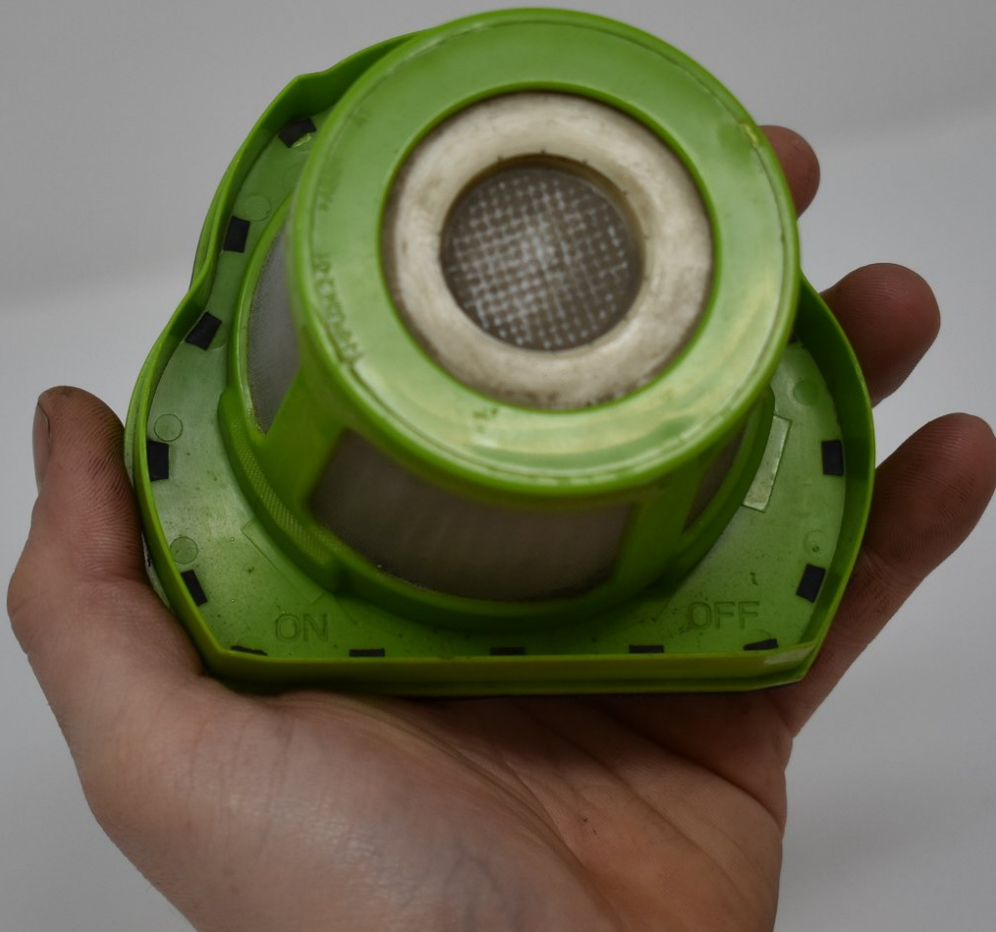

INTRODUCTION

The Bissell Pet Hair Eraser has a washable filter. Be sure to follow proper cleaning instructions for the filter. This will help maintain and prolong the lifespan of your filter.

Step 1 — Dirt Cup



- Firmly grasp the handle and press the release button.
- Gently pull the dirt cup down and away from the vacuum body.

Step 2 — Filter Cup



- Grasp the filter tabs and firmly pull the filter straight out.

Step 3



- Turn the filter cap counter-clockwise.

Step 4



- remove the filter cap.

To reassemble your device, follow these instructions in reverse order.

