



Garmin Fenix 3 Display Assembly Replacement

This guide will demonstrate how to remove the watch display from the watch.

Written By: Adam Estabrook



INTRODUCTION

If your watch face is damaged, cracked, or chipped, you can learn how to replace it using this guide. This guide involves simply unscrewing screws from the watch face and carefully disconnecting the screen's ribbon cable from the motherboard. You will need a T6 Torx screwdriver and a spudger.

TOOLS:

- [T6 Torx Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Display Assembly



- Use a T6 screwdriver to remove the five 1.7 mm screws from the watch face.

Step 2




- Carefully lift the face off the watch base.
- ⚠ Do not yank the face. A ribbon connector connects the face and the motherboard, and yanking could result in damage to the motherboard or ribbon.

Step 3



- Use a spudger to lift up and free the screen ribbon cable's press-fit connector from the motherboard.

Step 4

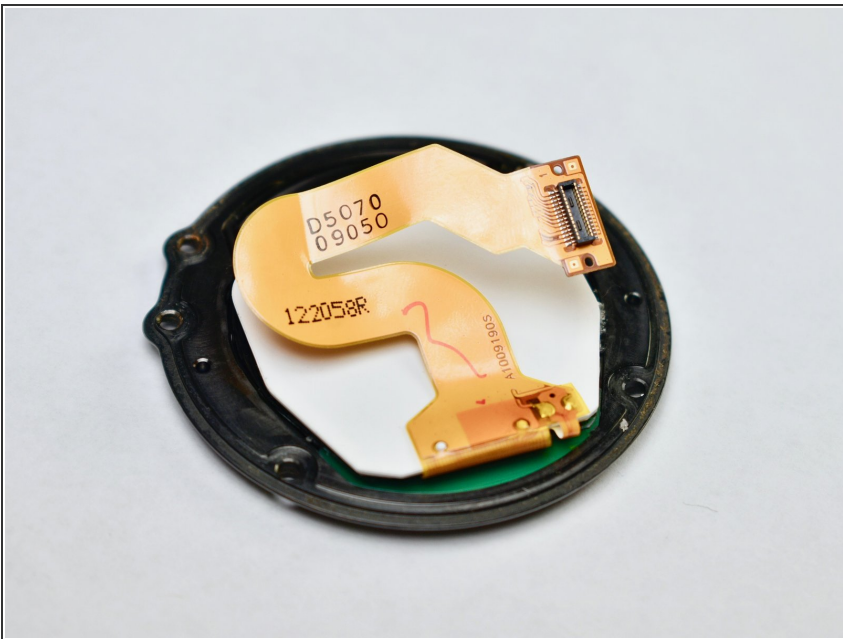

- Set the watch face aside.

To reassemble your device, follow these instructions in reverse order.