



Polaroid OneStep 2 Film Door Latch Replacement

Replace the film door latch in order to make your Polaroid OneStep 2 close.

Written By: Abby Boucher



INTRODUCTION

If you need to replace the film door latch, use this guide to access the inside of the camera. You may need to replace the latch if your camera will not close.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Film Door Latch



- Unscrew the four 5mm screws on the base of the camera using a Phillips #0 screwdriver.

Step 2



- Remove the bottom of the base and piece containing the film door latch.

To reassemble your device, follow these instructions in reverse order.

