



HP Mini 210 Battery Replacement

Replace the battery in this netbook so it can have longer battery life.

Written By: Heather Freed



INTRODUCTION

Replacing the battery in this netbook is quick and does not require any disassembly.

Step 1 — Battery



- i** Turn off and unplug the netbook before replacing the battery.

 - Hold the netbook top-side down with the lid closed.
 - Slide the plastic battery release latches towards the lock symbols.
- i** The left tab unlocks completely, but you will need to hold the right tab towards the lock symbol as you remove the battery.

Step 2



- Slide the battery out from the netbook.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-23 06:11:26 AM.