



Cuisinart CPB-380 Disassembly

This guide will assist a user in disassembling the Cuisinart CPB-380 to access the internal components.

Written By: William Hesse



 **TOOLS:**

- [Metal Spudger](#) (1)
 - [Utility Scissors](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Cuisinart CPB-380 Disassembly




- Turn the device upside down.
- Remove all four rubber feet by prying them out using the metal spudger.
- Once the rubber feet have been removed, use the Phillips #2 screwdriver to remove all four 13mm screws.

Step 2



- Remove the base from the body of the blender.

Step 3

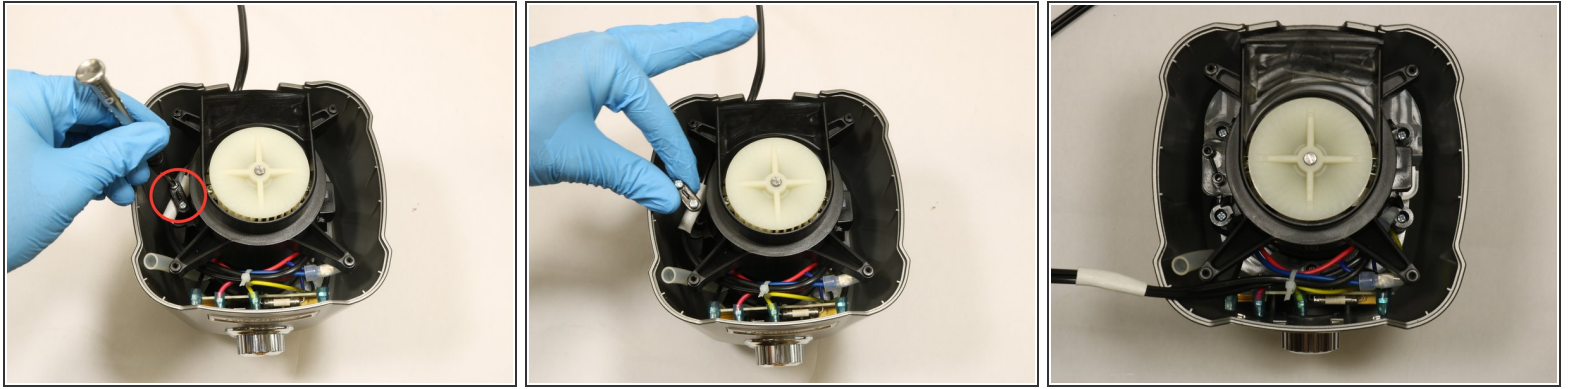

- Remove the two 11mm screws securing the power cord using the Phillips #2 screwdriver.
- Gently move the wire aside so that it is not in the way.

Step 4



- Remove the four 13mm screws that hold the black plastic cover using the Phillips #2 screwdriver.
- Gently remove the black cover. Underneath you will see a clear plastic cover that should be removed as well.

Step 5



- Cut the zip tie that holds the black, blue, red, and yellow wires together.

⚠ Take care not to cut the wires.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-02-03 12:57:35 PM.