



Shark DuoClean Powered Lift-Away Speed Brushroll Replacement

How to replace the brushroll on the Shark DuoClean Powered Lift-Away Speed.

Written By: Catie Halvorsen



INTRODUCTION


If your vacuum is leaving behind debris or has loss of suction, use this guide to replace the brushrolls. You will not need any tools to replace the brushrolls.

Step 1 — Brushroll



- Press the two Brush Roll Access buttons down at the same time to detach the cover.
- Pull the cover off of the vacuum by lifting it up.

Step 2

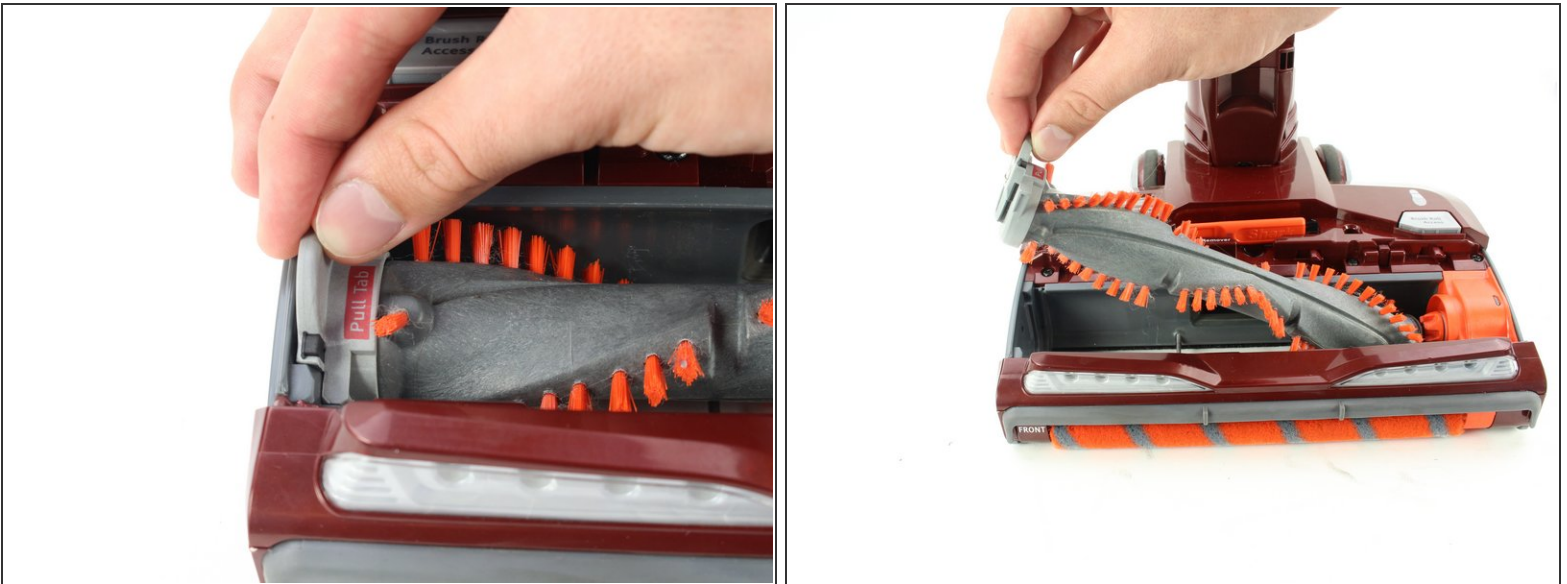

- Pull up on the Pull Tab to remove the large brush roll.

Step 3



- Press the Eject Roller button to detach the small roller.
- Pull the roller away from the vacuum to remove it.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-21 05:46:52 PM.