



Shark Rotator Powered Lift-Away Speed Filter Replacement

Replacing the filter on the Shark Rotator Powered Lift-Away Speed vacuum.

Written By: Sujei Ruano



INTRODUCTION


The Shark Rotator Powered Lift-Away has multiple filters to ensure a better clean as compared to other models. This vacuum has a foam and felt filter which should be cleaned every three months so that the vacuum can perform at its best. Another filter the vacuum has is a HEPA filter which helps traps dust and allergens inside the vacuum. The HEPA filter should be cleaned at least once a year. This replacement guide shows how to replace the foam and felt filter.

Step 1 — Filter



- Press on the lift away button and pull away from the vacuum.

Step 2

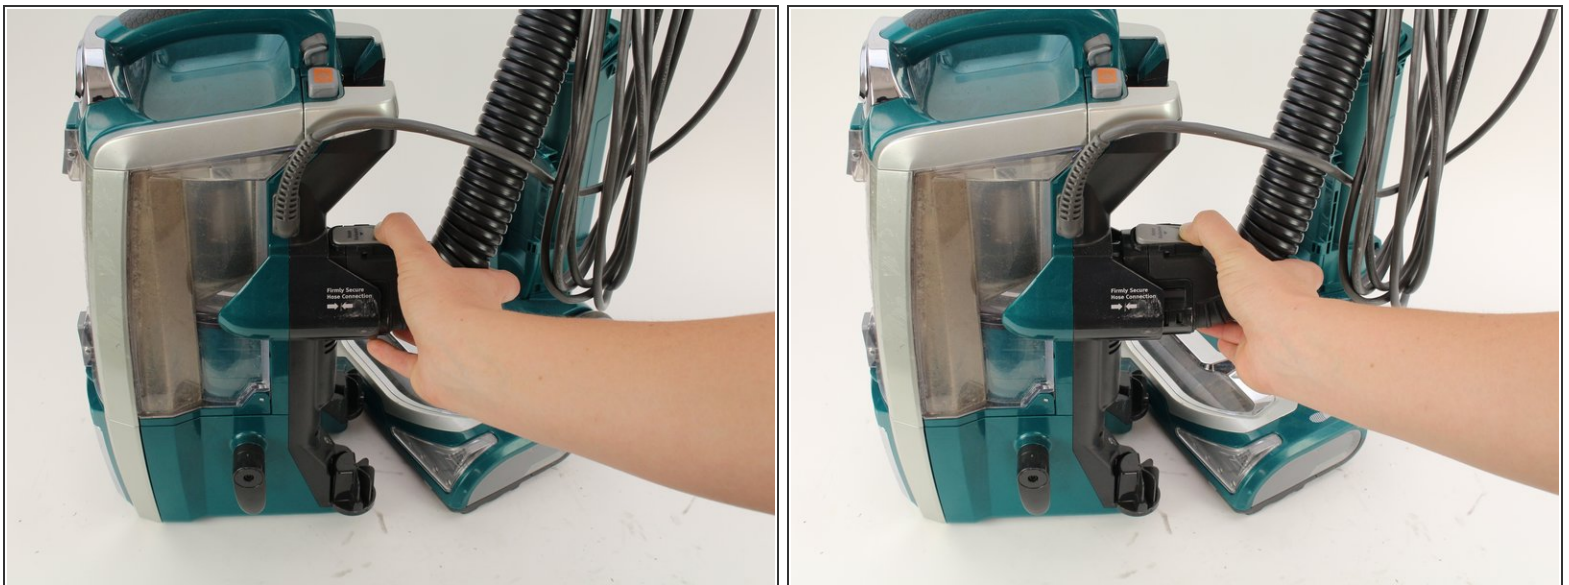

- Press down on the hose release button and pull away from the vacuum.

Step 3



- Pull the dust cup release latch and lift the dust cup from where it rests.

Step 4



- Pull out the foam filter from where the dust cup rested.

Step 5



- Pull out the felt filter from where the foam filter rested.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-16 12:57:23 AM.