




HP Color LaserJet Pro MFP M277dw Power Button Replacement

How do I replace the power button on an HP Color LaserJet Pro MFP M277dw

Written By: Christopher Fahey

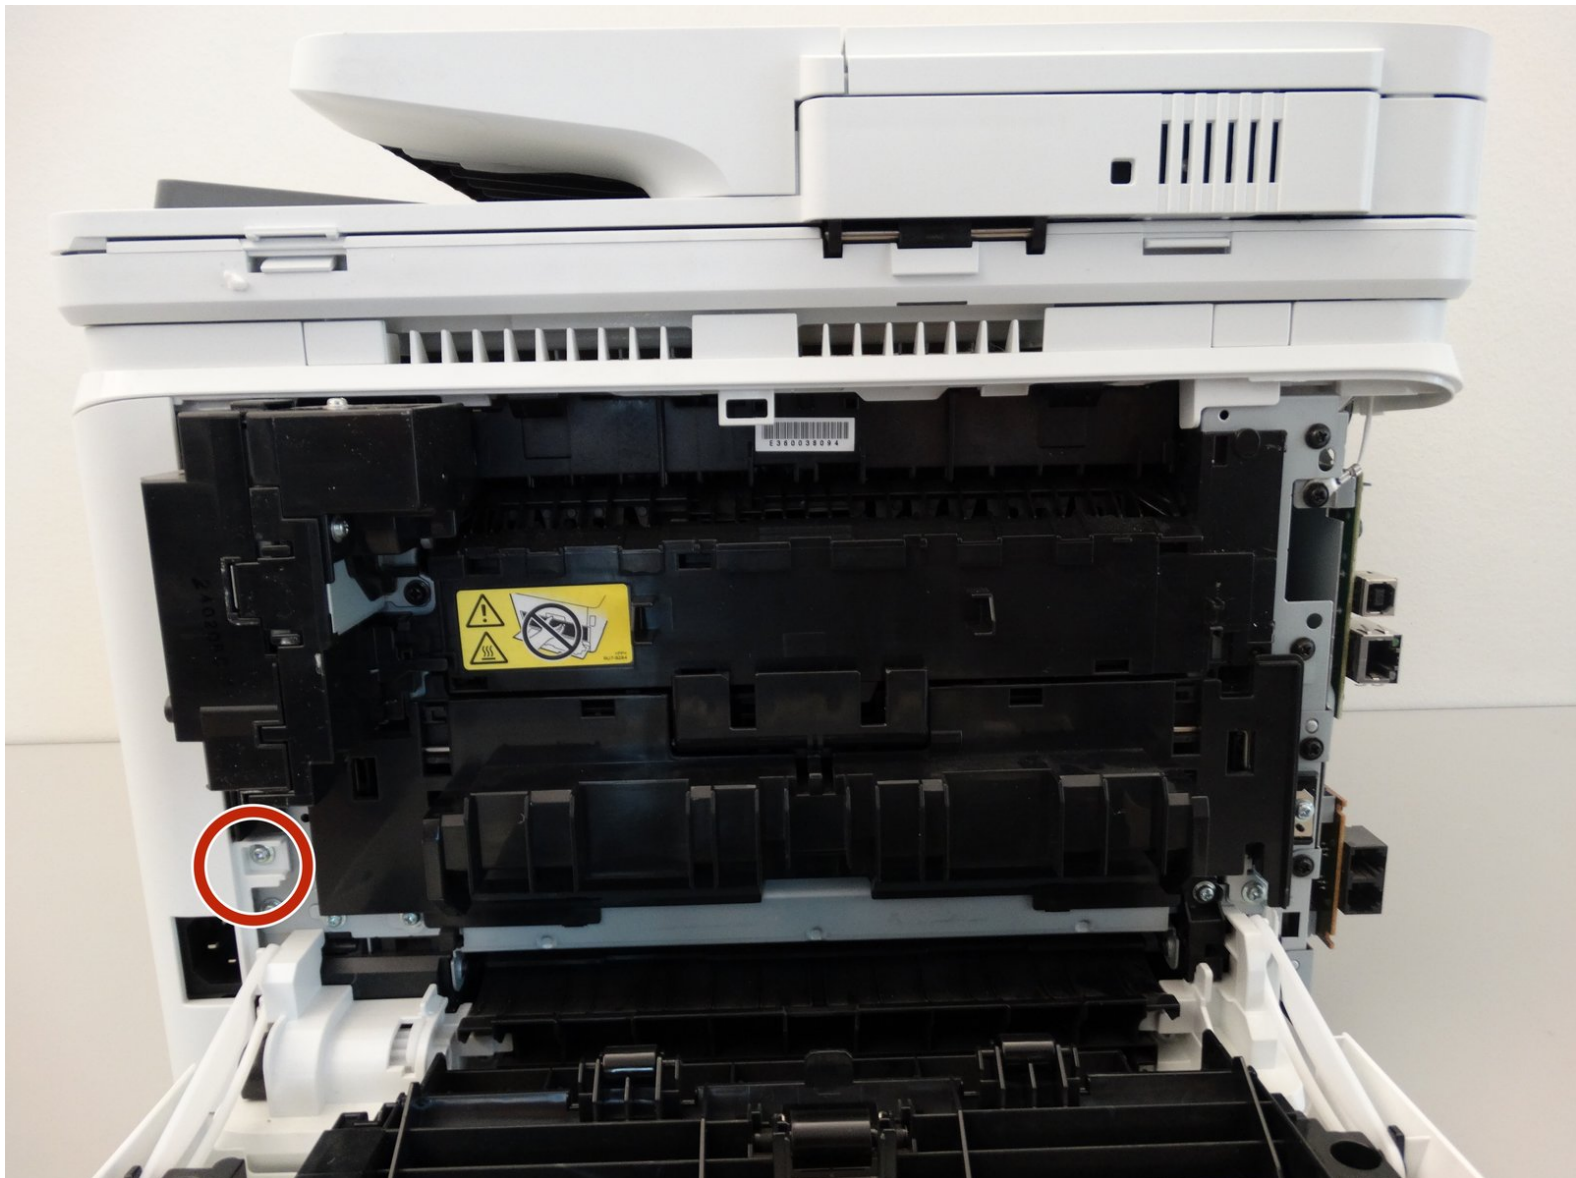


INTRODUCTION

This is a replacement guide for the power button on the HP Color LaserJet Pro MFP M277dw. You will need plastic opening tools as well as a Phillips #2 screwdriver.

TOOLS:

- [iFixit Opening Tools](#) (1)
 - [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Power Button

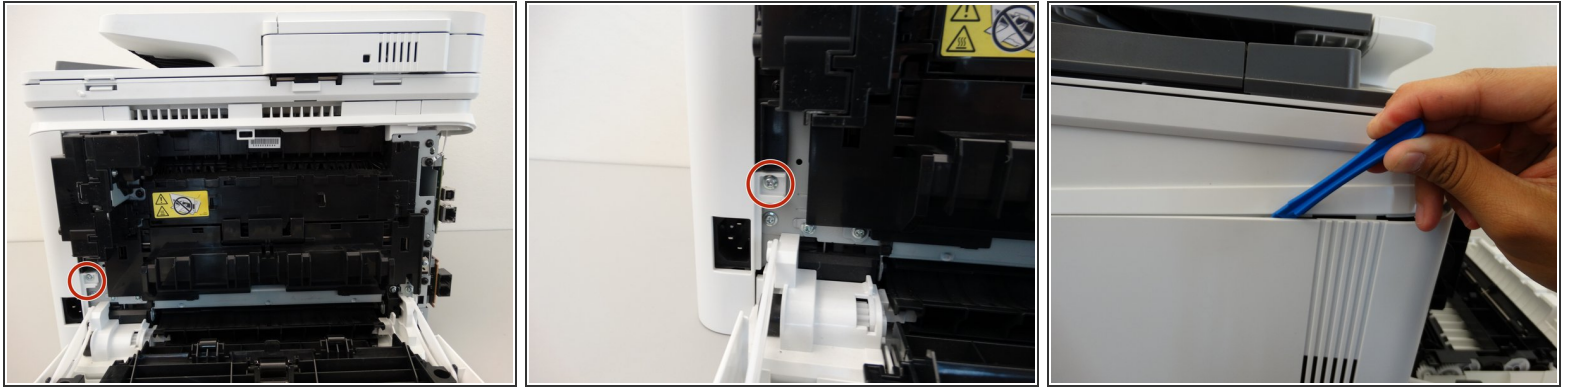


- Lower the back panel by pulling it down.
 - Remove one Phillips #2 10mm screw.
 - Use the plastic opening tool to remove right side panel by prying it off.
- i** Flipping the printer onto its side makes it easier to remove the side panel.

Step 2



- Lower the front panel by pulling it down from the upright position.
- i** The button cover should come off with the panel, if it does not be sure to remove it.

Step 3

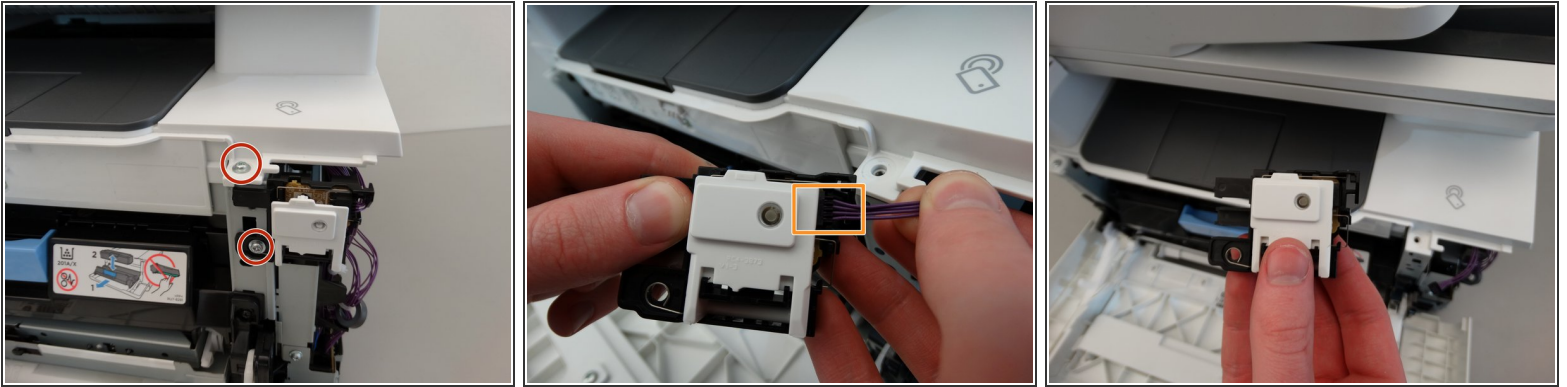

- Remove two Phillips #2 8mm screws.
- Unplug the wire connecting the power button to the circuit board by gently pulling them apart.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-08-22 12:49:35 AM.