



HP Color LaserJet Pro MFP M277dw Rollers Replacement

Replace the rollers in your HP Color LaserJet Pro so that it will properly take in paper.

Written By: Yvan Gonzalez



INTRODUCTION

If your printer is improperly taking in your paper through the bottom tray, you may need to replace your rollers. With nothing but a #2 Phillips screwdriver, you will be able to quickly remove them.

TOOLS:




- [Phillips #2 Screwdriver](#) (1)
-

Step 1 — Rollers





- Remove the bottom tray by pulling it until it fully is out of the printer.

Step 2

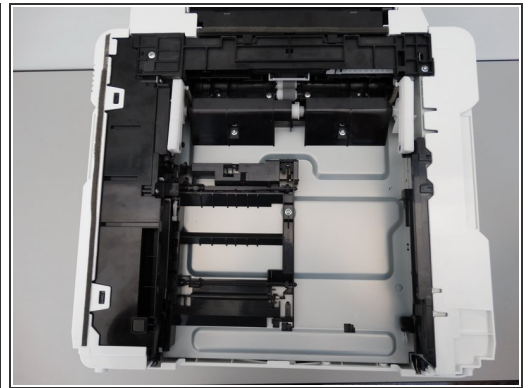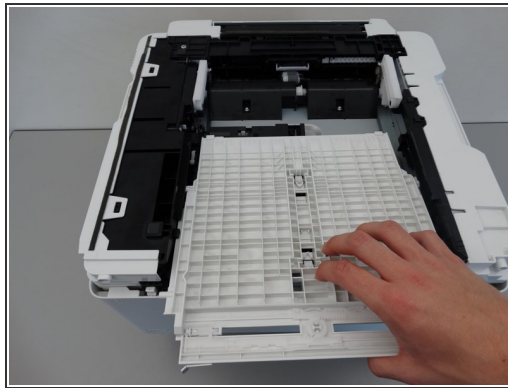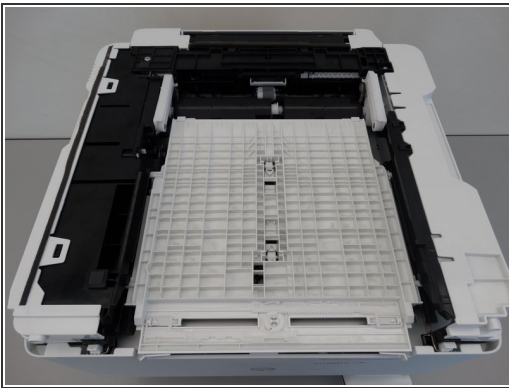




- Turn the printer upside down.
- Pull out the white manual feed tray.

Step 3

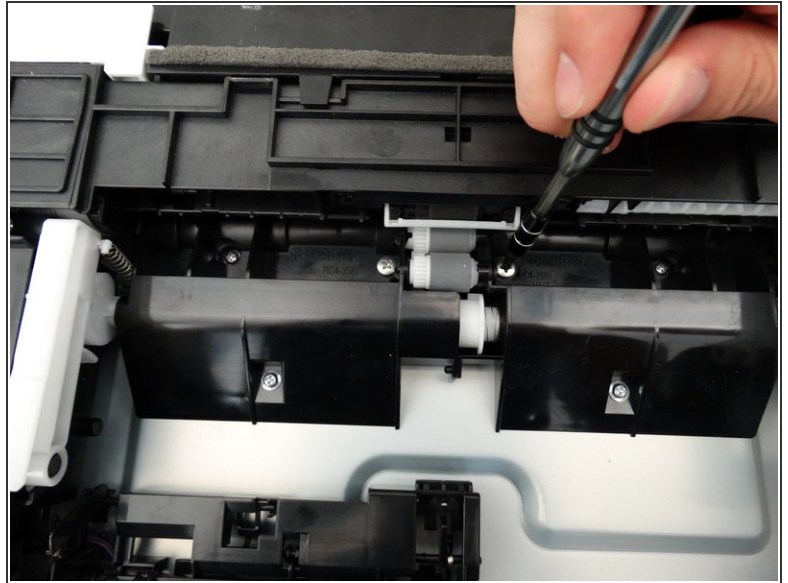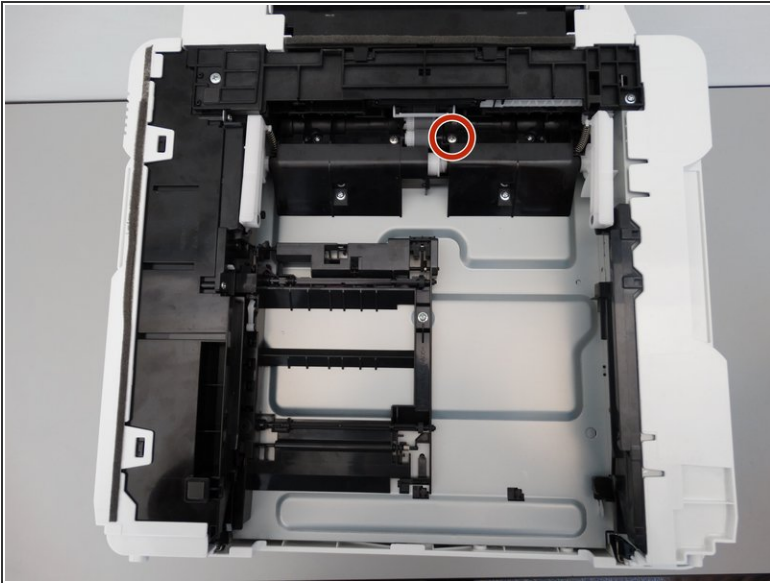


- Remove one Phillips #2 8mm screw.

Step 4

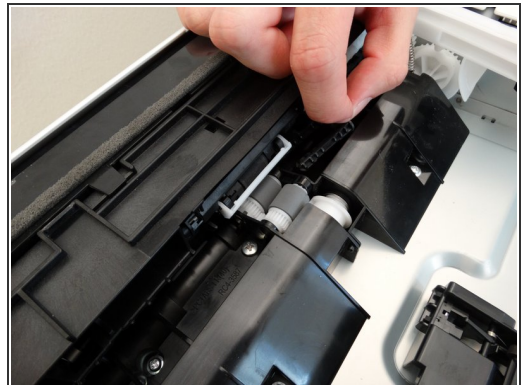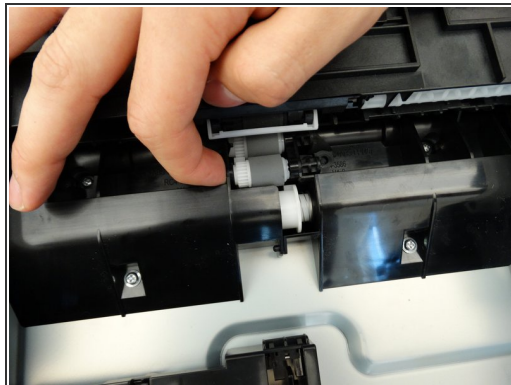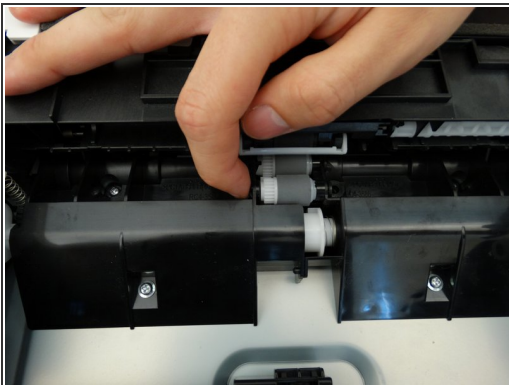

- Push on the exposed piece of rod that pokes out of one end of the roller.
- Pull out the now unscrewed and free rod.

Step 5

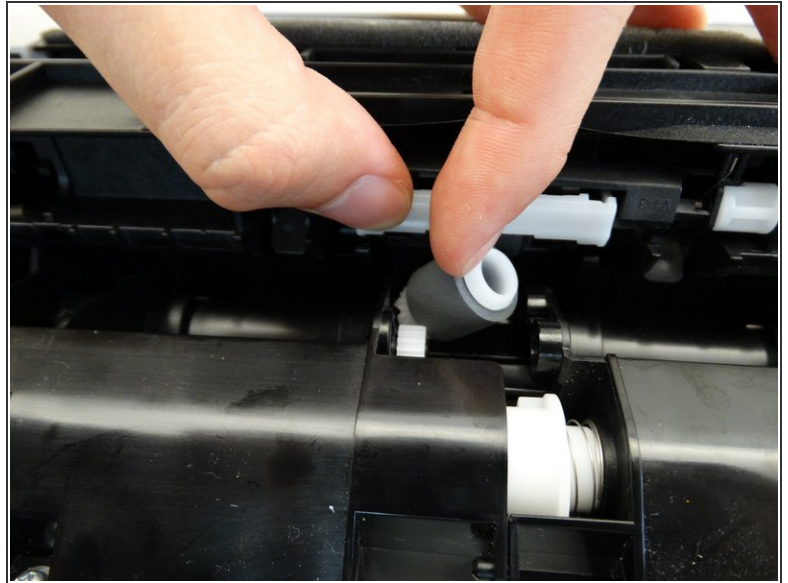

- Use your thumb to push in the white plastic hanging over the roller and use your index finger to pry the roller out.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-11 10:32:30 PM.