


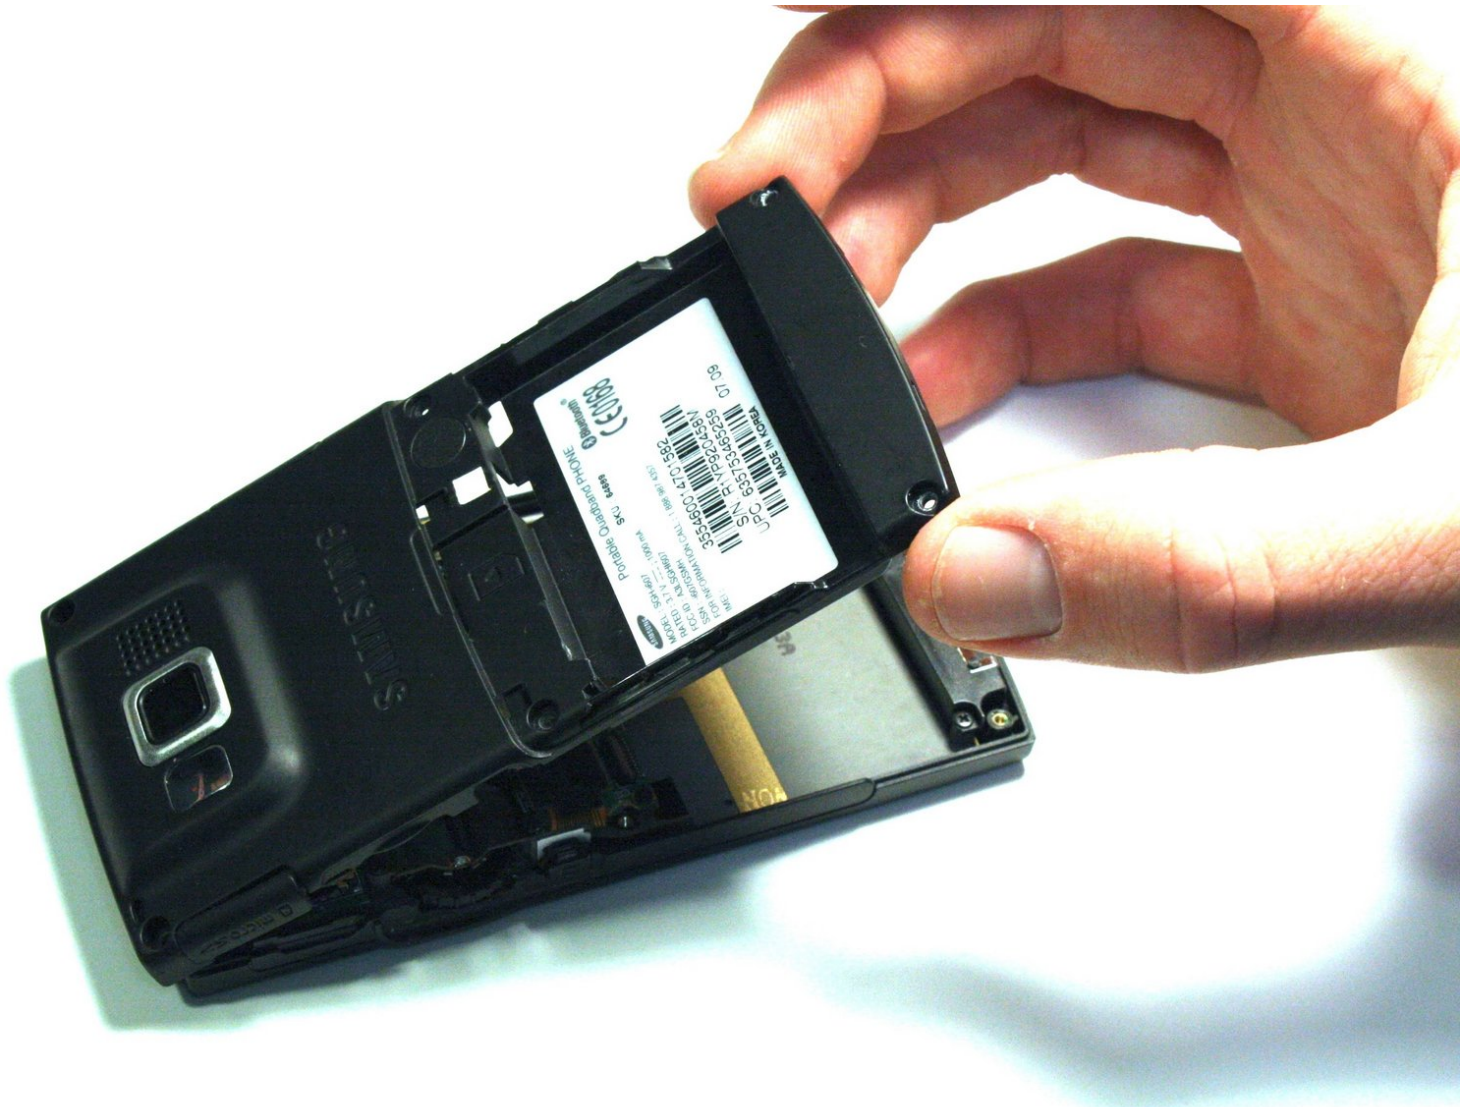

Samsung Blackjack Back Phone Casing Replacement

Replace or remove the back phone case on your Samsung Blackjack.

Written By: Kristin Manna



INTRODUCTION

Use this guide to replace the back phone case and to remove the casing to access the inside of the phone.

TOOLS:


- [Phillips #00 Screwdriver](#) (1)
 - [Spudger](#) (1)
-

Step 1 — Battery Cover




- Hold the device with the screen facing away from you and the camera towards you.
- Place your thumb on the bottom half of the phone and slide the cover off while gently pushing down on the cover.

Step 2 — Battery

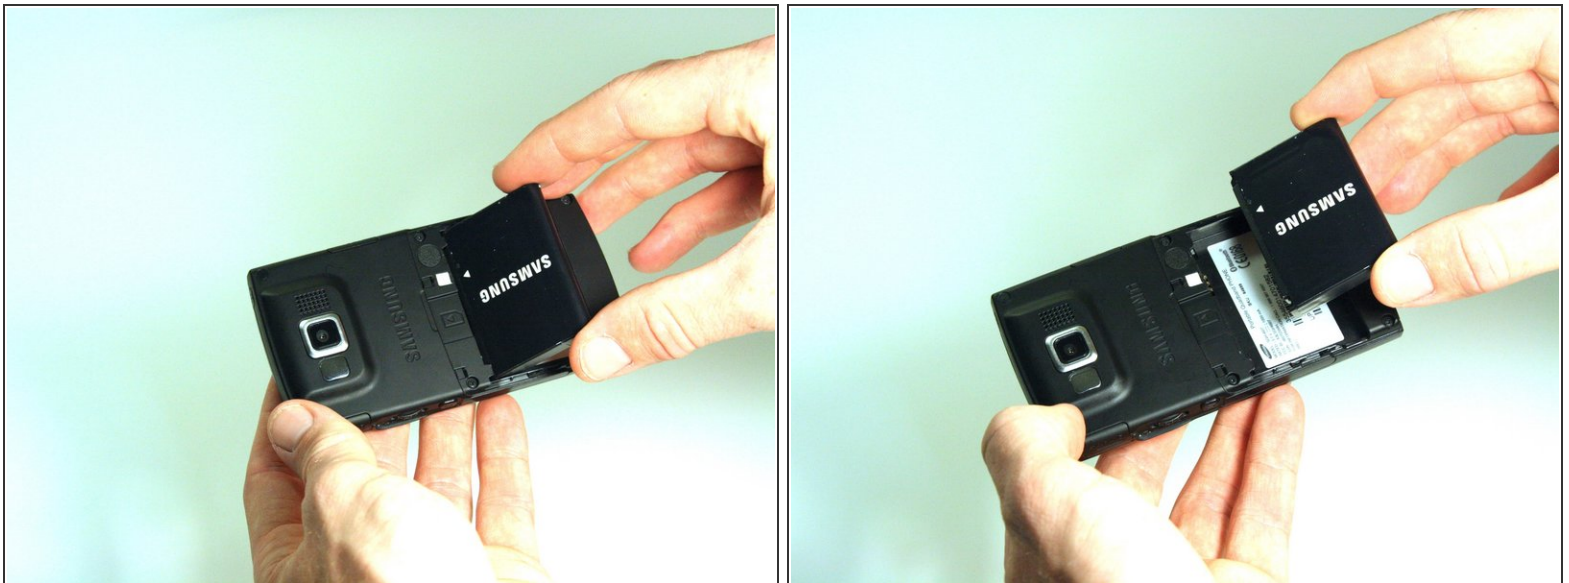


- Place your fingers on both sides of the bottom of the battery and lift upwards.
- Pull the battery away from the phone.

Step 3 — SIM Card

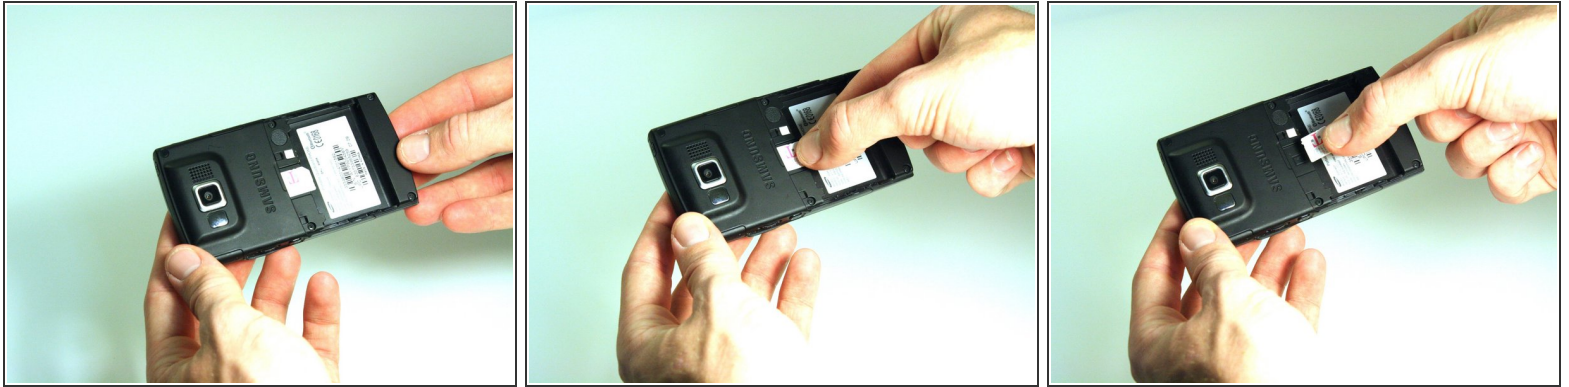

- Place your thumb on the SIM card.
- Slide the card out of the slot.

Step 4 — Back Phone Casing

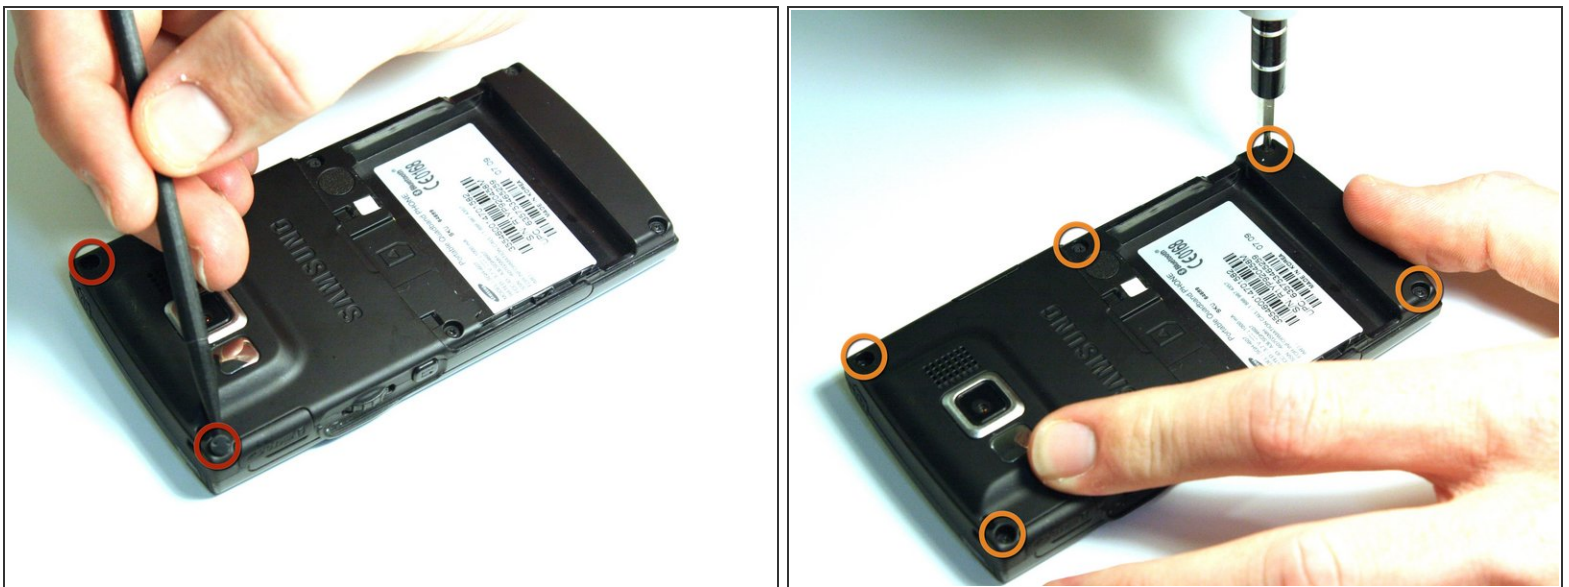

- Use the spudger to remove the rubber stoppers from the top of the cover.
- Use the Phillips 00 screw driver to remove the screws from each of the four corners and the two on sides (six total).

Step 5



- Use the spudger to loosen and separate the front and back covers.
- Pick up the back cover once loosened.

⚠ *The front and back covers will be attached to each other by a gold wire.*

- Remove the gold wire connecting the back cover to the motherboard to completely separate the covers.

To reassemble your device, follow these instructions in reverse order.