



HP Envy 4520 LCD Screen Replacement

This guide will accomplish a complete replacement of the LCD Screen for the HP Envy 4520.

Written By: Markell Parks



INTRODUCTION

The replacement of LCD screen will require a T10 and a T6 screwdriver.



TOOLS:

- [T6 Torx Screwdriver](#) (1)
- [T10 Torx Screwdriver](#) (1)



PARTS:

- [13 mm T10 Hex Screw](#) (1)
 - [7 mm T6 Hex Screw](#) (4)
-

Step 1 — LCD Screen



- Lift the scanner bed.

Step 2



- Remove the T10, 13 mm center screw.

Step 3





- Slide the front panel to the right, then lift the front panel upwards.

Step 4



- Remove the large flat ribbon cable by pinching the top and bottom of the cable between thumb and index finger and pulling away from the motherboard.
- Remove the small flat ribbon cable by pinching the top and bottom of the cable between thumb and index finger and pulling away from the motherboard.

Step 5

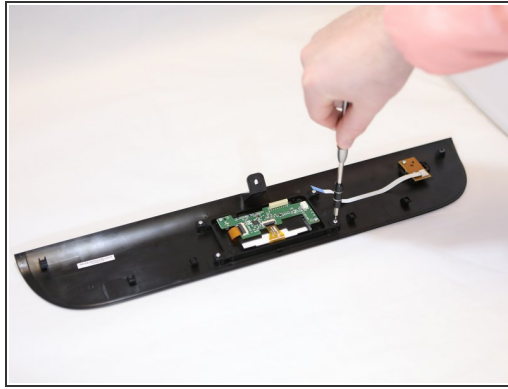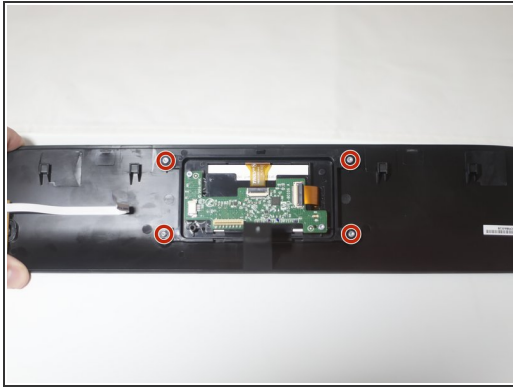

- Remove the four T6, 7 mm mounting screws.
- Remove the LCD screen out of the plastic housing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-17 09:13:02 PM.