



Bose Cinemate 10 Speaker Grill Cover Replacement

This guide can be used to remove and replace the Speaker Grill Cover.

Written By: Phillip Halverson



INTRODUCTION

This guide can be used to remove and replace the Speaker Grill Cover for the Bose Cinemate 10. The only tool required is the Plastic Opening Tool. It should take approximately 5 minutes to complete this replacement guide.



TOOLS:

- [iFixit Opening Tools](#) (1)
-

Step 1 — Speaker Grill Cover



- Orient the Bose Cinemate 10 so that the Bose Label is facing forward.
- Rotate the speaker so that the bottom barcode is visible.

Step 2



- Insert the blue plastic opening tool into the crevice directly beneath the Bose Logo.
- Using the blue plastic opening tool, pry upwards.
- Work the blue plastic opening tool along edge of the speaker towards the right end of the speaker prying along the way
- Move the blue plastic opening tool back to center, and then work the plastic opening tool towards the left end of the speaker, prying along the way

Step 3



- Insert fingers into crevice between the grill cover and device base and forcefully pry upwards.
- Continue prying until the Speaker Grill cover is completely detached.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 10:38:58 AM.