 


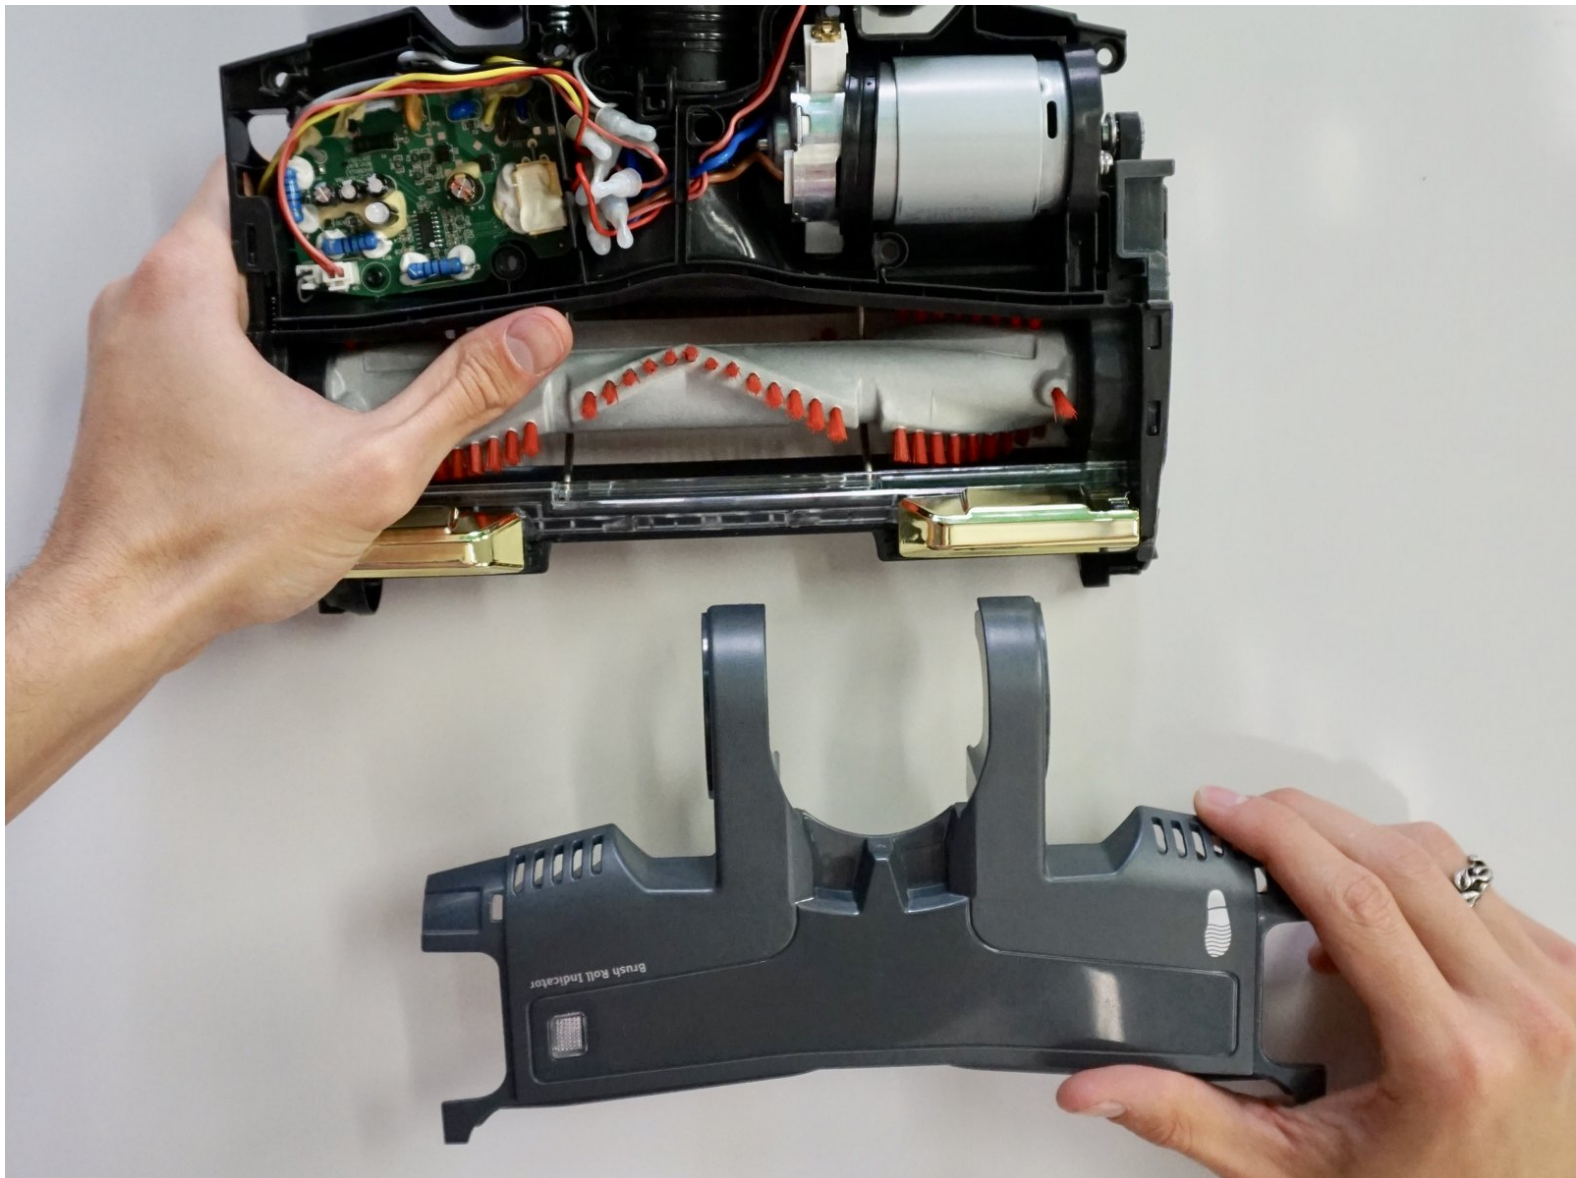

# Shark Flex DuoClean Top Component Replacement

How to remove the top component of the Shark Flex DuoClean HV391 vacuum.

Written By: Samantha Mickelson



---

## INTRODUCTION

 
You will need to remove the top component to access the motor and motherboard.

---

### TOOLS:


- [T10 Torx Screwdriver](#) (1)
  - [Spudger](#) (1)
-

## Step 1 — Top Component

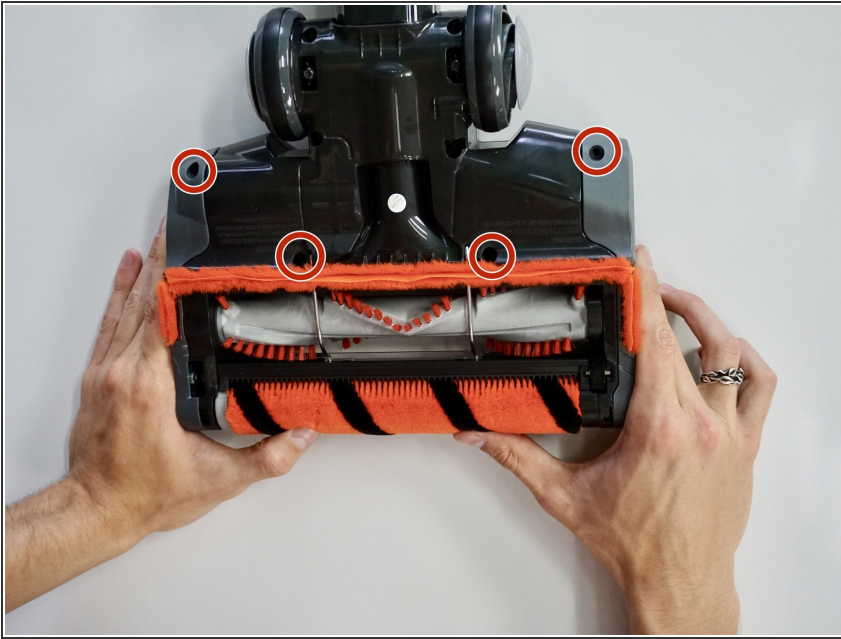

- Remove the four 15 mm T10 screws on the underside of the vacuum.

## Step 2

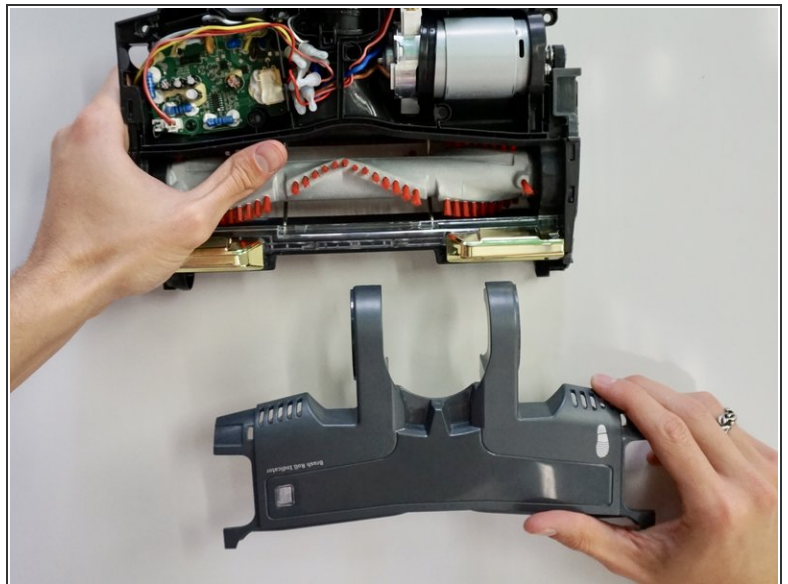

- Using the plastic spudger, pry the back seam of the top component to pop it off the vacuum.

To reassemble your device, follow these instructions in reverse order.

