



Alienware M17x Battery Replacement

Replace your dying battery to bring the power back to your Alienware M17x laptop.

Written By: Mosier Locke



INTRODUCTION

If your battery can't keep a charge or drains quickly, use this guide to remove and replace your battery.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
 - [iFixit Opening Tools](#) (1)
-

Step 1 — Battery



 Turn off your laptop before starting.


- Flip the laptop over so the model stickers face the ceiling.

Step 2





- Remove the two 3.5 mm Phillips #0 screws holding the cover in place.
- Slide cover forward then carefully lift up.

Step 3

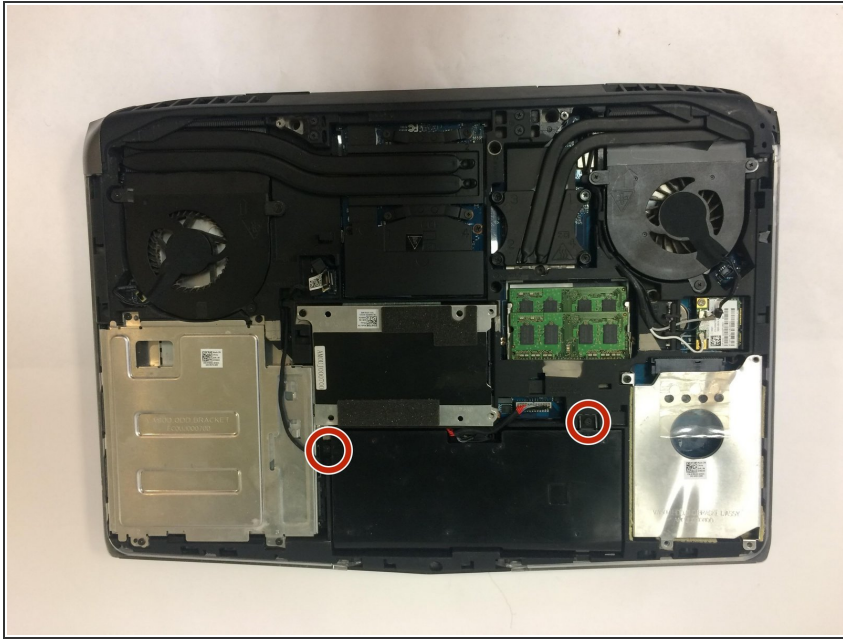

- Remove the two 5.5 mm Phillips #0 screws holding the battery in place.

Step 4

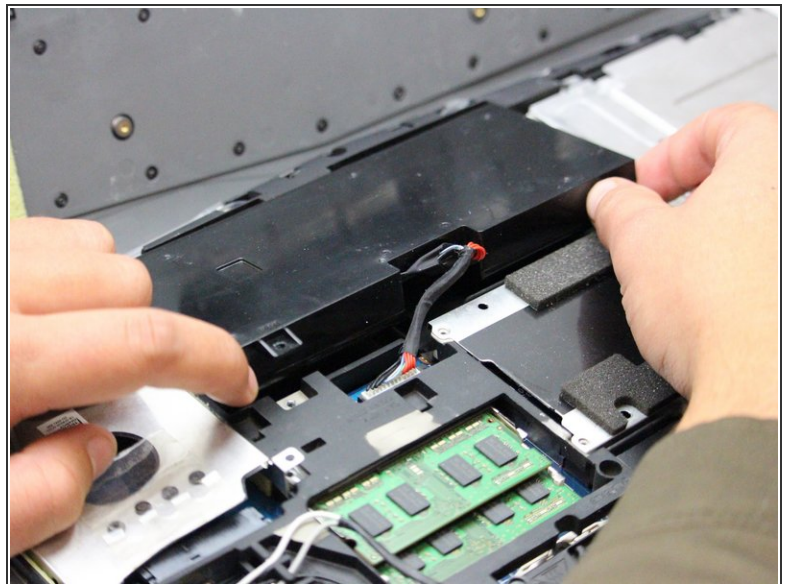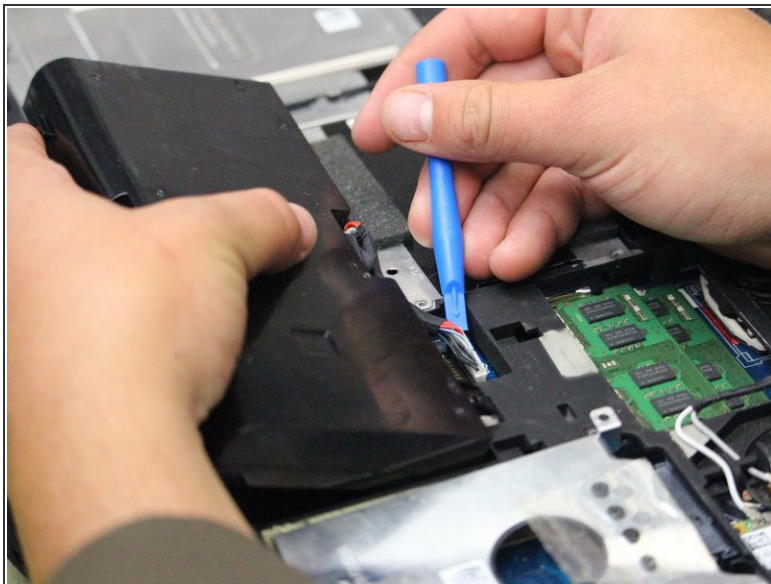

- Carefully use the Plastic Opening Tool to unplug the battery.
- Lift the battery up and out to remove.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-21 04:28:55 PM.