



# HP Officejet Pro 8625 Left Side Panel Replacement

Remove the HP Officejet Pro 8625 side panel for access to components such as the motherboard, CMOS battery, and power supply.

Written By: Daniel



---

## INTRODUCTION

To gain access to the motherboard, the CMOS battery, and the power supply of your HP Officejet Pro 8625, use this guide to remove the left side panel. You will need a T9 Torx screwdriver for each screw in this guide.

---

### TOOLS:

- [T9 Torx Screwdriver](#) (1)
-

## Step 1 — Left Side Panel



- Remove the two 11.6 mm T9 screws from the right side of the back of the printer.

## Step 2



- Pull down the front panel to expose the screws on the front.
- Remove the one 11.6 mm T9 screw on the left side of the front face.

## Step 3



- Remove the side panel by pushing down and towards the back.
- ⓘ This step may be easier if the printer is laid on its side with the left side panel facing up.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 03:47:43 PM.