



Apple TV 4K Logic Board Replacement

A guide to replace the logic board in an Apple TV 4K.

Written By: Keenan Barber



INTRODUCTION

This guide will show you how to properly get into your Apple TV 4K device and get access to the logic board for replacement.

TOOLS:

- [Spudger](#) (1)
 - [T7 Torx Screwdriver](#) (1)
-

Step 1 — Logic Board



- Use a spudger to pry the bottom panel off from the body. It is held on with clips on the inside, so you will need to make sure those are undone while opening.
- ⓘ The panel is held onto the device tightly, so you may need to be a bit forceful to remove it.

Step 2



- Remove the following screws using a T6 Torx screwdriver holding the heat sink assembly in.
 - Four 10 mm screws
- Lift and remove the heat sink assembly from the device.

Step 3



- Use plastic spudger to pull up on all three antenna connectors to remove them.
- Remove rubber piece from front side of device.

Step 4



- Unscrew the following screws holding the logic board in place using the T7 Torx:
 - Two black 3 mm screws
 - Two silver 4 mm screws

Step 5



- Use a spudger to pry up logic board. Try lifting it up from the front side.
- Remove logic board and set aside.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 02:18:30 AM.