



Yuneec Breeze 4K Leg Replacement

This guide will teach you how to replace a leg on your Yuneec Breeze 4K Drone.

Written By: Wes Knutson



INTRODUCTION

If you are having issues landing your Yuneece Breeze 4K, it is probably due to a leg being broken or chipped. This guide shows you how to safely remove one of the legs and replace it with a new one. We have also provided a link for you that will show you where new replacement legs can be purchased.



PARTS:


- [Yuneece Breeze 4K replacement leg](#) (1)
-

Step 1 — Leg



- Turn the drone over so the propellers are facing down. Pull the leg up so the leg is pointed up towards the ceiling.

Step 2

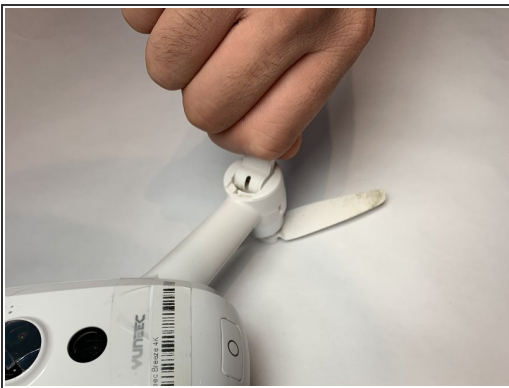

- Firmly grasp the leg so it is snug between your fingers.
- As you are grasping the leg, turn the leg counter clockwise about 80-90 degrees and pull up. This should take the leg out of its socket.
- Pull up so the leg is out of its socket. Now you can put in the replacement leg.

To reassemble your device, follow these instructions in reverse order.

