



Shark Flex DuoClean Power Cord Replacement

How to replace the power cord of the Shark DuoClean HV391 vacuum.

Written By: caoimhe



INTRODUCTION

Wire cutting and soldering may be required for more info on soldering visit the iFixit [soldering guide](#).

TOOLS:


- [T10 Torx Screwdriver](#) (1)
 - [T15 Torx Screwdriver](#) (1)
 - [Flush Wire Cutters](#) (1)
 - [Soldering Station](#) (1)
-

Step 1 — Dust Cup



- Squeeze Dust Cup release buttons on either side of the component.
- Pull up to release Dust Cup.

Step 2 — Power Cord

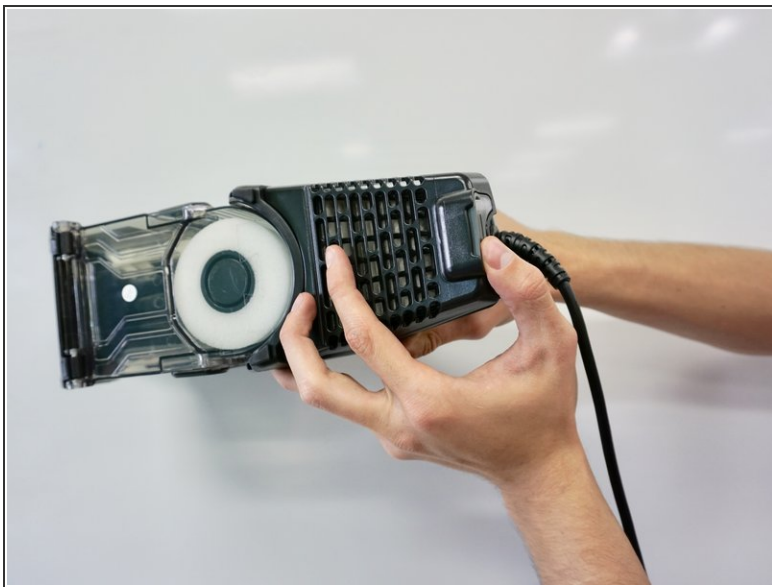

- Remove the pre-motor filter with your hands.

Step 3




- Remove the post-motor filter.

Step 4



- Remove the two 15 mm screws by twisting counterclockwise with the T10 Torx screwdriver.

Step 5

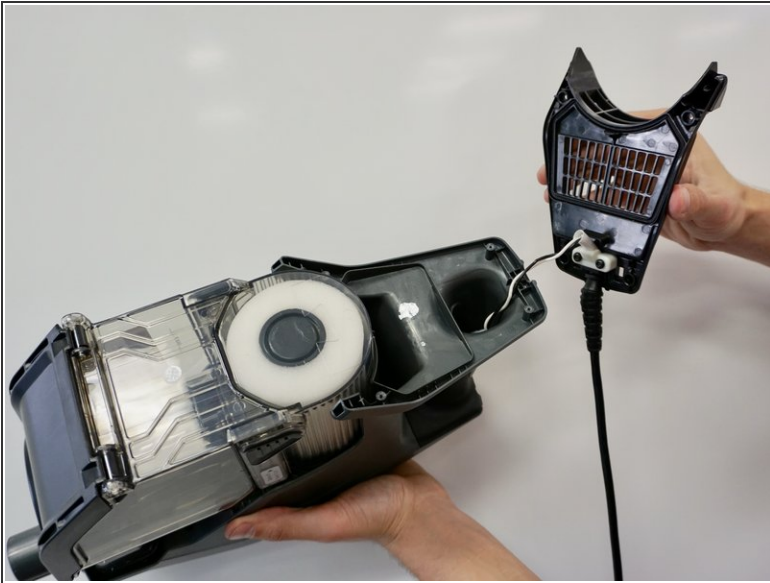

- Remove the two 12 mm screws by twisting counterclockwise with the T15 Torx screwdriver.
- To fully remove the power cord, cut the wires using a wire cutter.
- ⓘ For reassembly, use the soldering guide in the Introduction.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-11 10:27:26 PM.