



# Kenmore 78423 Dustbin filter Replacement

This guide will show you the correct procedure for removing and replacing the dustbin filters in your Kenmore 78423.

Written By: Christopher Bradley



## INTRODUCTION

Learn how to properly remove the dustbin filter on your Kenmore 78423.

## Step 1 — Dust Bin



- Grab the dustbin handle, press and hold the button at the top of the handle.
- Pull the dustbin up and away from the main body.

## Step 2



- Press the button located beneath the circular opening on the dust bin; this will open the bottom of the dustbin.
- Properly dispose any contents of the dust bin into a wastebasket.

## Step 3 — Dustbin Filters



- Pinch and grasp the raised handle on the primary dustbin filter.
- Lift the primary dustbin filter up and away from the dustbin and place it to the side.

## Step 4



- Grasp the foam filter and lift up to remove.
- ⓘ The foam filter may be lodged inside of the primary dustbin filter. In this case, both filters may be removed at the same time.

To reassemble your device, follow these instructions in reverse order.