



Canon Selphy CP720 Ink Cassette Replacement

This guide shows how to remove a stuck Ink Cassette that will not eject properly.

Written By: Peter Ely



INTRODUCTION

This guide will show how to remove and replace the Ink Cassette on the Canon Selphy CP720, and how to un-jam the part in case it is stuck.

TOOLS:


- [iFixit Opening Tool](#) (1)
-

Step 1 — Ink Cassette




- Pull open the top of the cover on the right hand side of the printer, so that the Ink Cassette is exposed.

Step 2

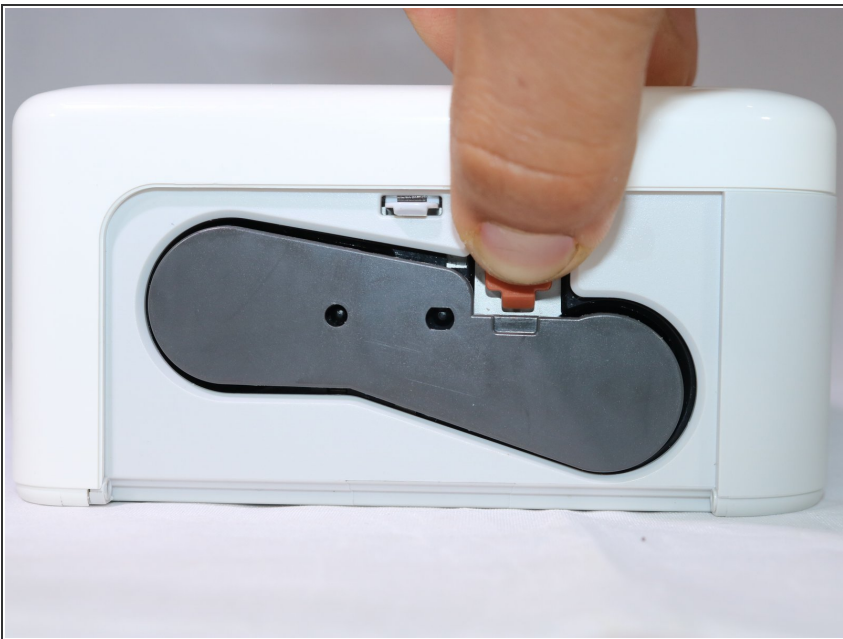


- Lift the orange tab, which retains the Ink Cassette. If the Cassette is not jammed, it will eject automatically.

Step 3

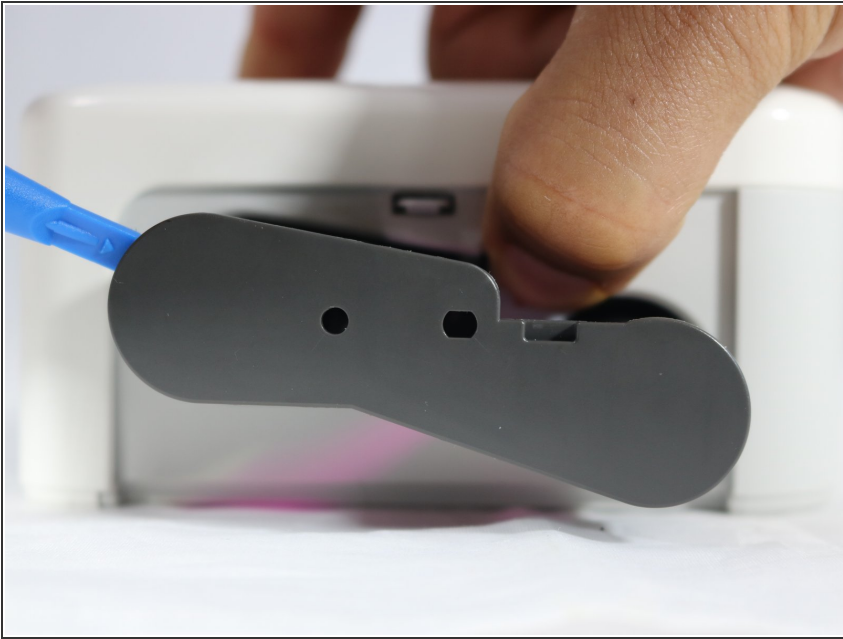

- ⓘ If the Ink Cassette is not jammed, this is the last step
- Gently pry the Ink Cassette outward with the iFixit blue opening tool.

Step 4

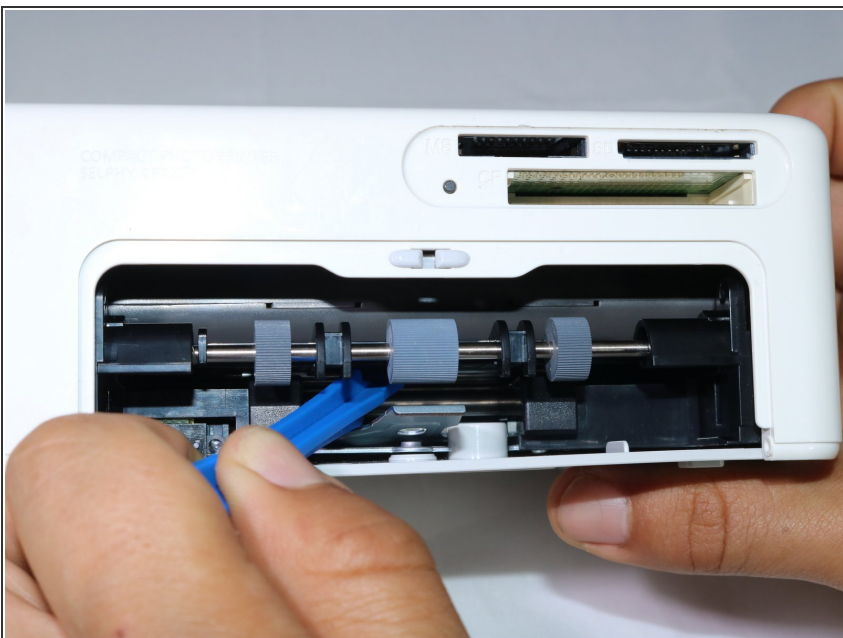

- ⓘ Only complete these steps if the Ink Cassette does not come out on step 3.
- With the orange release tab still held back, gently pull on the Ink Cassette.

Step 5



- Reach into the printer with an iFixit blue opening tool and apply pressure to the black plastic plate under the Ink Cassette.
- Pull the Cassette out slowly and smoothly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-07 09:46:13 PM.