



# MSI GP60 2pe Leopard Battery Replacement

This guide will help you replace your battery with a new one.

Written By: Zoey Calcagno



## INTRODUCTION


Is your MSI GP60 2PE Leopard not turning on or not charging properly? Here's a guide to replace the battery. No tools are needed to replace the MSI GP60 2PE Leopard battery.

## Step 1 — Battery



- Flip MSI GP60 2PE Leopard, so that the back is facing up.

## Step 2

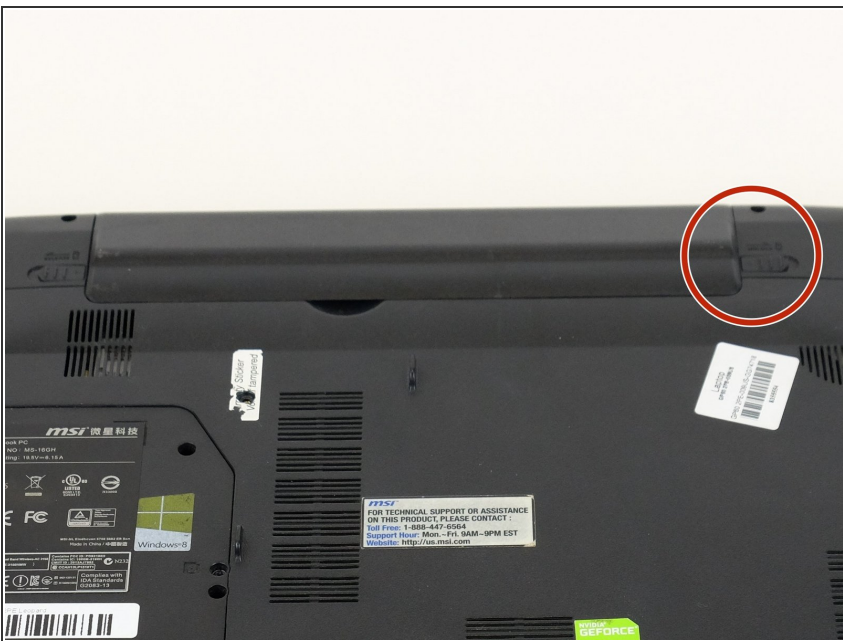

- Find the unlock tab located on the upper right side of the device, then slide it to the right.

### Step 3



- Slide and hold the release tab on the left side of the battery, so that you can remove the battery.

### Step 4



- While holding the release tab, remove the battery slowly.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-20 06:41:33 AM.