



How to tighten the Razor A handlebar clamp

Tighten the T-tube column to prevent it from collapsing.

 
Written By: Jordyn



INTRODUCTION



If your steering column suddenly collapses into itself, this guide is for you. This guide will show you how to tighten the T-tube column to prevent that from happening.

Step 1 — How to tighten the Razor A handlebar clamp

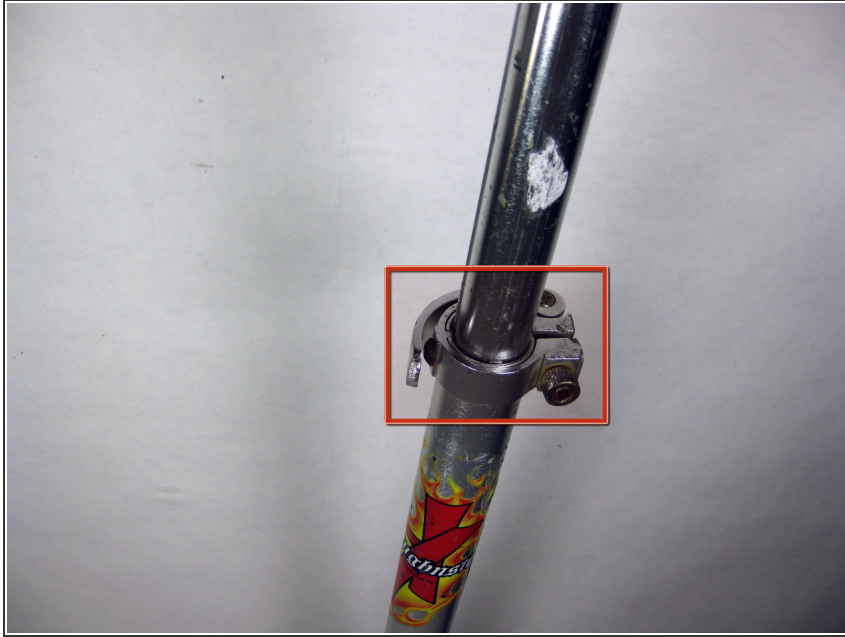

- Locate the T-tube clamp. It is in the middle of the steering column.

  Step 2

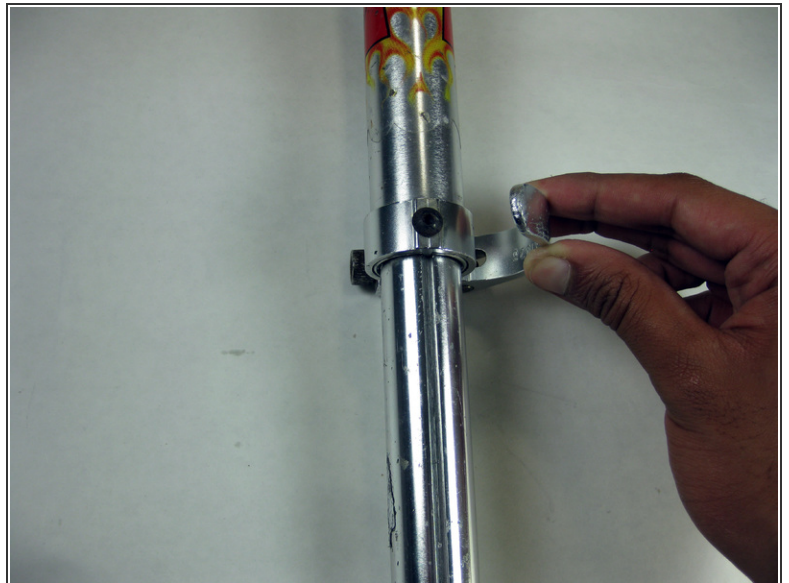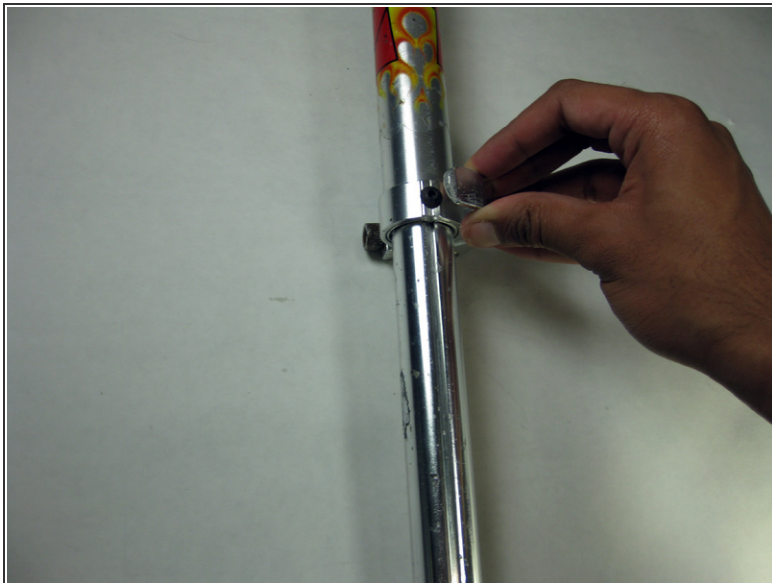

- Open the clamp by pulling the lever away from the scooter.

Step 3



- Locate the screw on the side of clamp.
- Turn the screw on the side of the clamp by hand in a clockwise direction.
- Attempt to close the clamp. If the lever is too tight to close, loosen the screw slightly and try again.
- The T-tube should now be locked in place. If it continues to fall down, repeat the instructions in this guide.

This document was last generated on 2017-06-25 10:38:28 PM.