



# Insignia NS-F12R6-SS Oscillation Button Replacement

This guide shows how to replace the oscillation button in your Insignia NS-F12R6-SS fan.

Written By: Hank



---

## INTRODUCTION


The oscillation button engages and disengages the back-and-forth movement of your fan. A broken oscillation button disables this feature, allowing only one setting.

---

### TOOLS:

- [Phillips 3 Screwdriver](#) (1)
-

## Step 1 — Oscillation Button

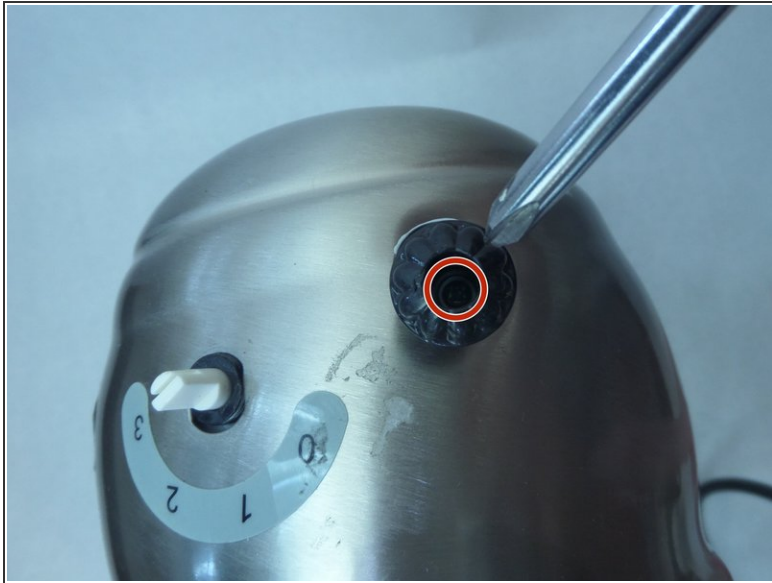

- Unscrew the 10 mm screw in the center hole of the oscillation knob with a Phillips #3 screwdriver.

## Step 2



- Remove the oscillation knob.

To reassemble your device, follow these instructions in reverse order.

