



Bose Cinemate 10 End Cap Replacement

By completing this guide, you should be able to replace the end caps on the Bose Cinemate 10.

Written By: Maranda Queen



INTRODUCTION

This guide will allow you to access the subwoofers on either side of the Bose Cinemate 10. By removing the end caps, you can clean them or replace the subwoofers.



PARTS:

- [Phillips #1 Screwdriver](#) (1)
-

Step 1 — End Cap



- Using the blue plastic opening tool, pry up on the cloth covered end panel. The edge of end cap cover should separate from main body of device.

Step 2



- Using your fingers, lift up on the end cap cover until it separates completely from the main body of the device.

Step 3



- Remove the 4, PH1, 15mm screws on the side speaker cover frame.

Step 4



- Remove speaker cover frame from main body of device.

To reassemble your device, follow these instructions in reverse order.

