




ASUS ROG G46VW RAM Replacement

This guide will show you how to replace the RAM for your ASUS ROG G46VW

Written By: Amon Stewart

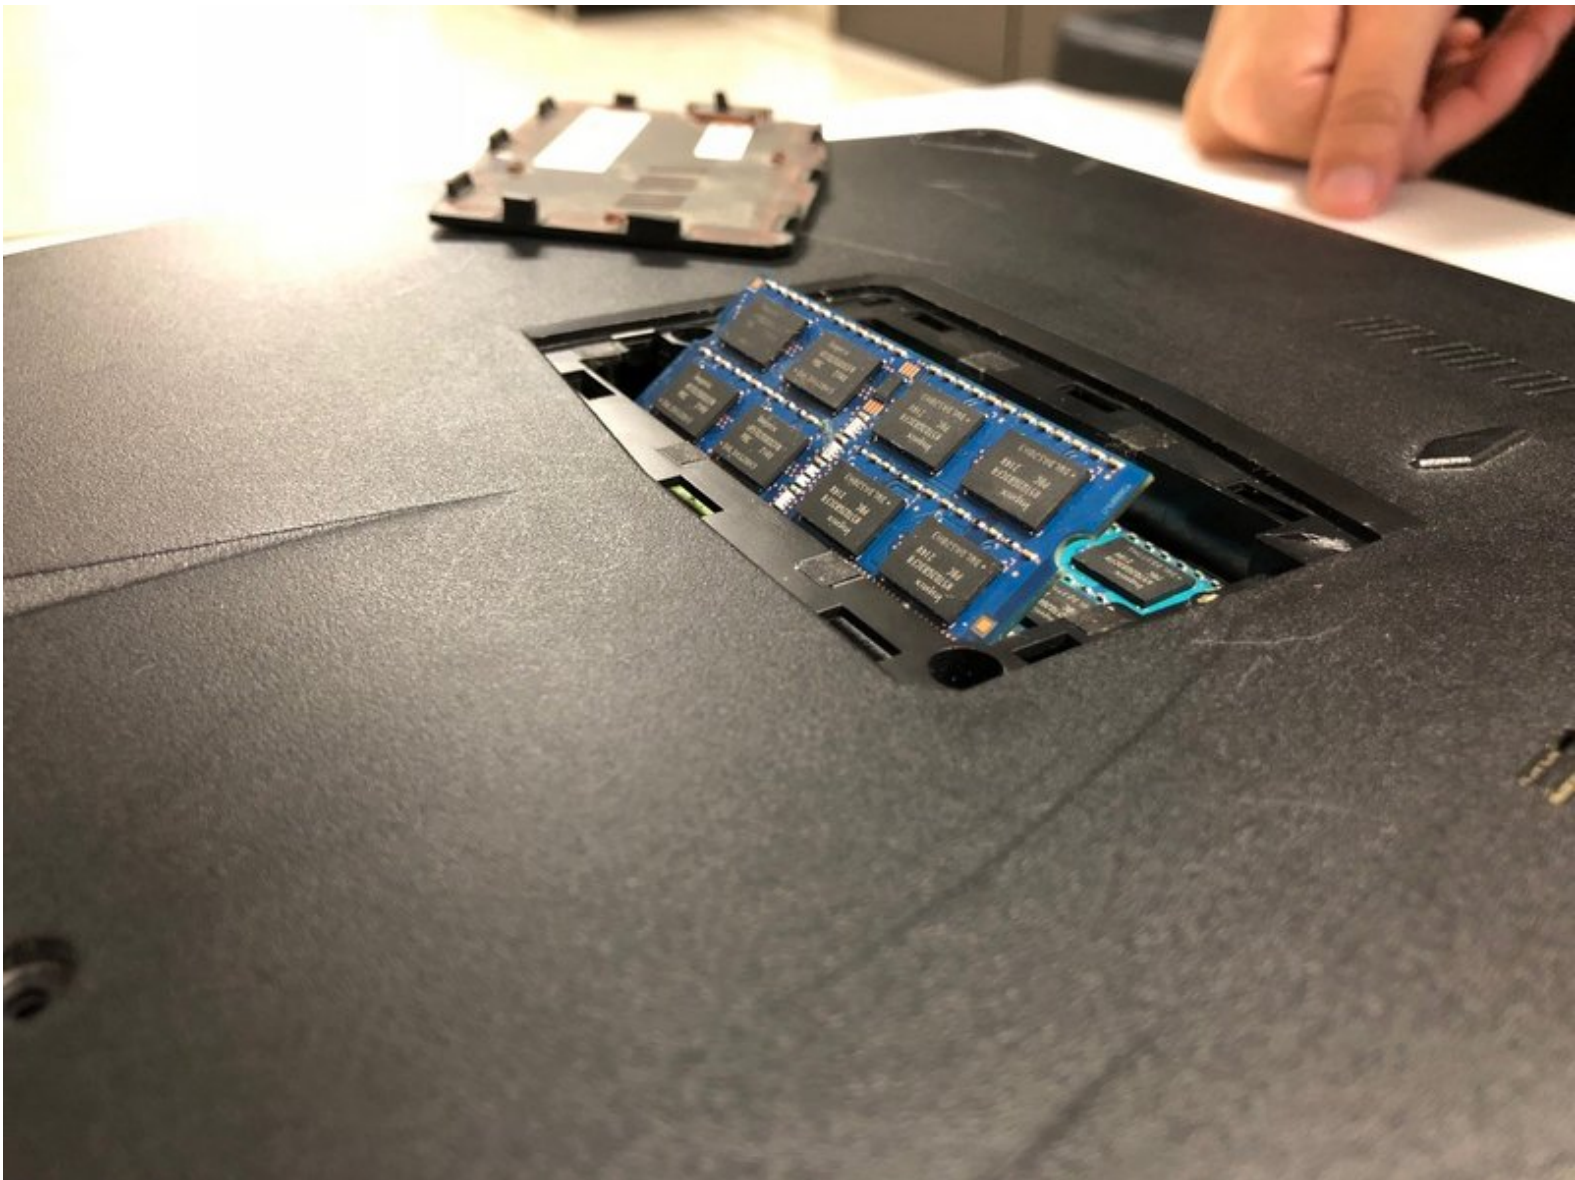


INTRODUCTION

Before removing the RAM sticks, be sure you have a clean surface to place them on as they are sensitive to dust and dirt.

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — RAM

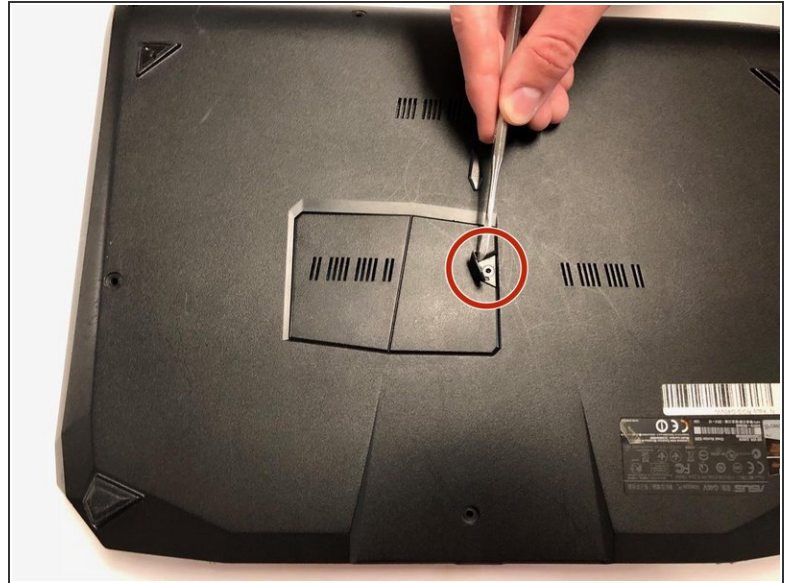



- Lift the screw cover and remove the screw using a Phillips #0 screwdriver.

Step 2




- Remove the RAM cover by lifting the screw cover and pulling away firmly.

Step 3

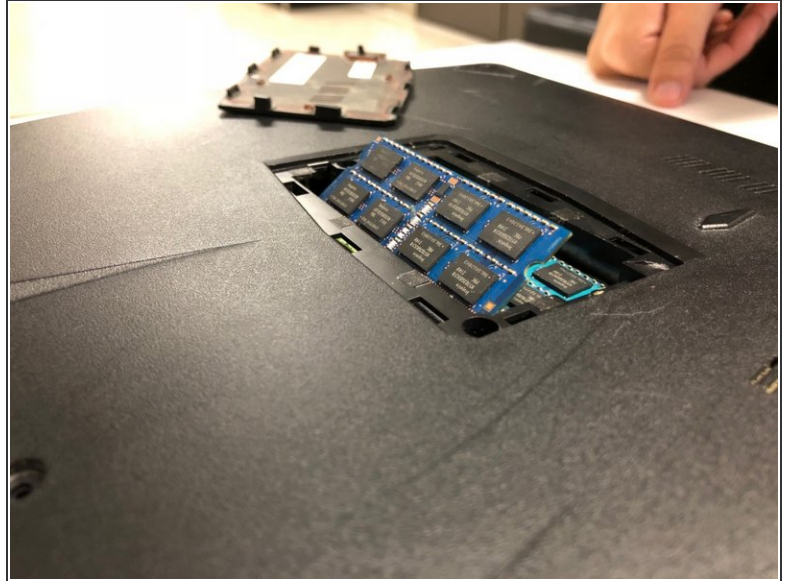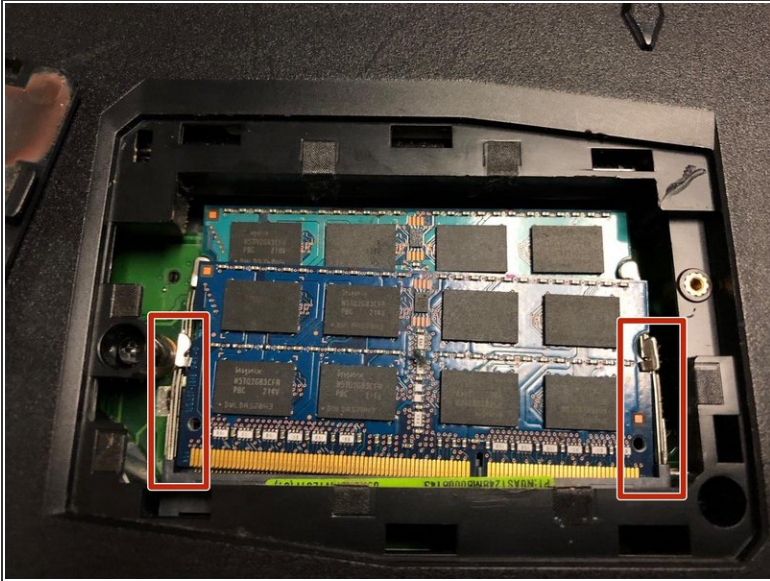


- Push outwards on the clips to release the RAM stick. The stick should pop up at an angle.

Step 4

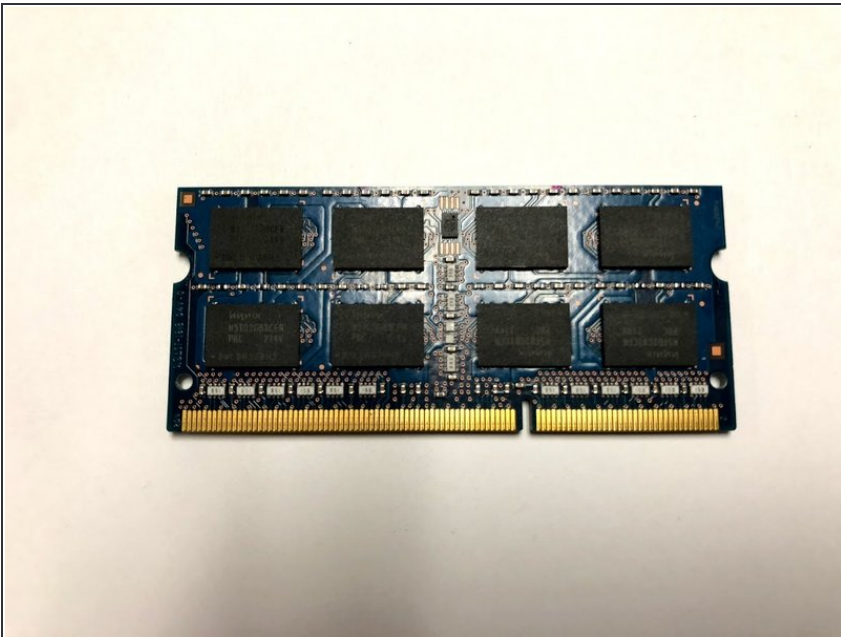

- Pull out the RAM stick carefully.
- ⚠ Do not use a prying motion as this will damage the hardware. Be careful not to damage the gold section of the RAM stick.

Step 5

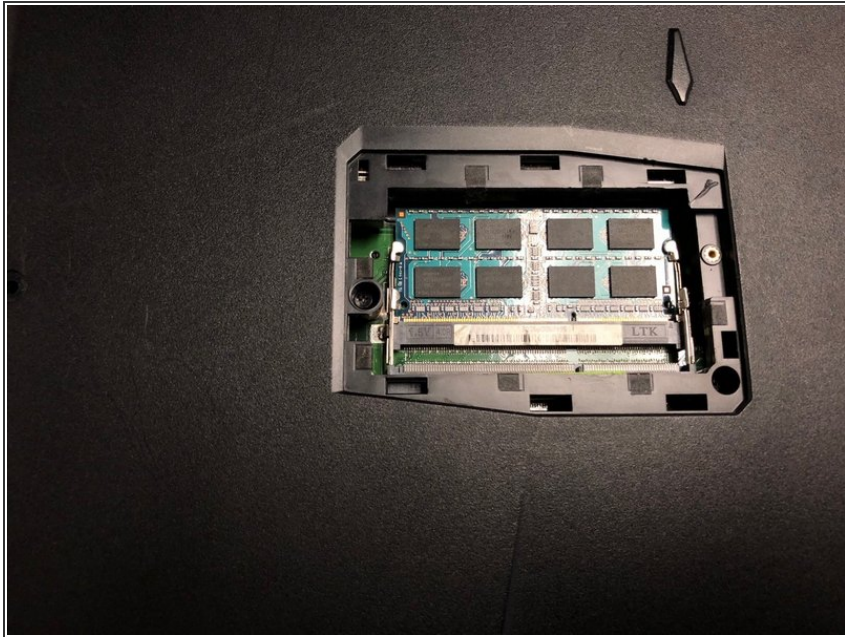

- Repeat steps 3-4 to remove the second RAM stick.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-15 05:08:35 AM.