



Pioneer FH-X730BS Volume Knob Replacement

How to replace the volume knob on the Pioneer FH-X730BS.



Written By: Cody Pesta



INTRODUCTION

A volume knob can become unusable in the event if the plastic breaks. This guide will show you how to replace the volume knob for the Pioneer FH-X730BS.

Step 1 — Volume Knob

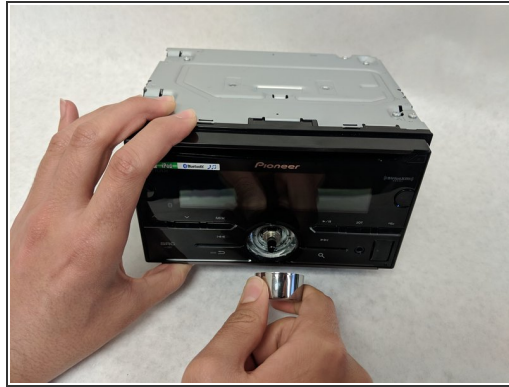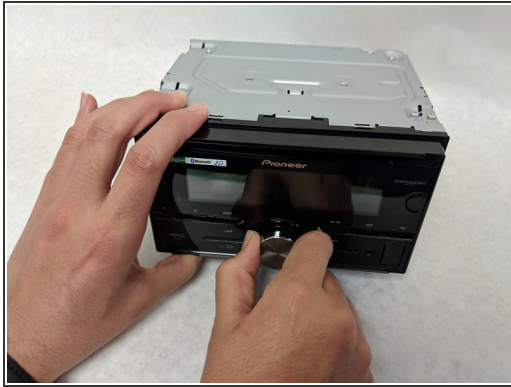

- Remove the volume knob by pulling it away from the face of the radio receiver.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-11 10:14:56 PM.