



HP Envy 4520 Lid Backing Replacement

This guide will accomplish the successful removal of the lid backing on the HP Envy 4520.

Written By: Ariel Gall



INTRODUCTION

In the event that you need to replace the white lid backing on your printer lid, do so following this guide. Any flaws on the surface of the lid backing can cause issues with the scanning of your documents.

Step 1 — Lid Backing



- Grab hold of the front and back of the left side of the lid backing.
- Face the printer towards you and push the lip of the lid back towards the lid hinges.
- ⓘ You may need to apply a lot of pressure to the lid. You will hear two clicks when the hinge releases.

Step 2



- Lay the lid with the white backing facing up with the lip of the lid facing your body.
- Peel the white backing away gently.
- ⓘ There will be a layer of foam glued to the bottom of the white lid backing.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-19 12:45:37 PM.