


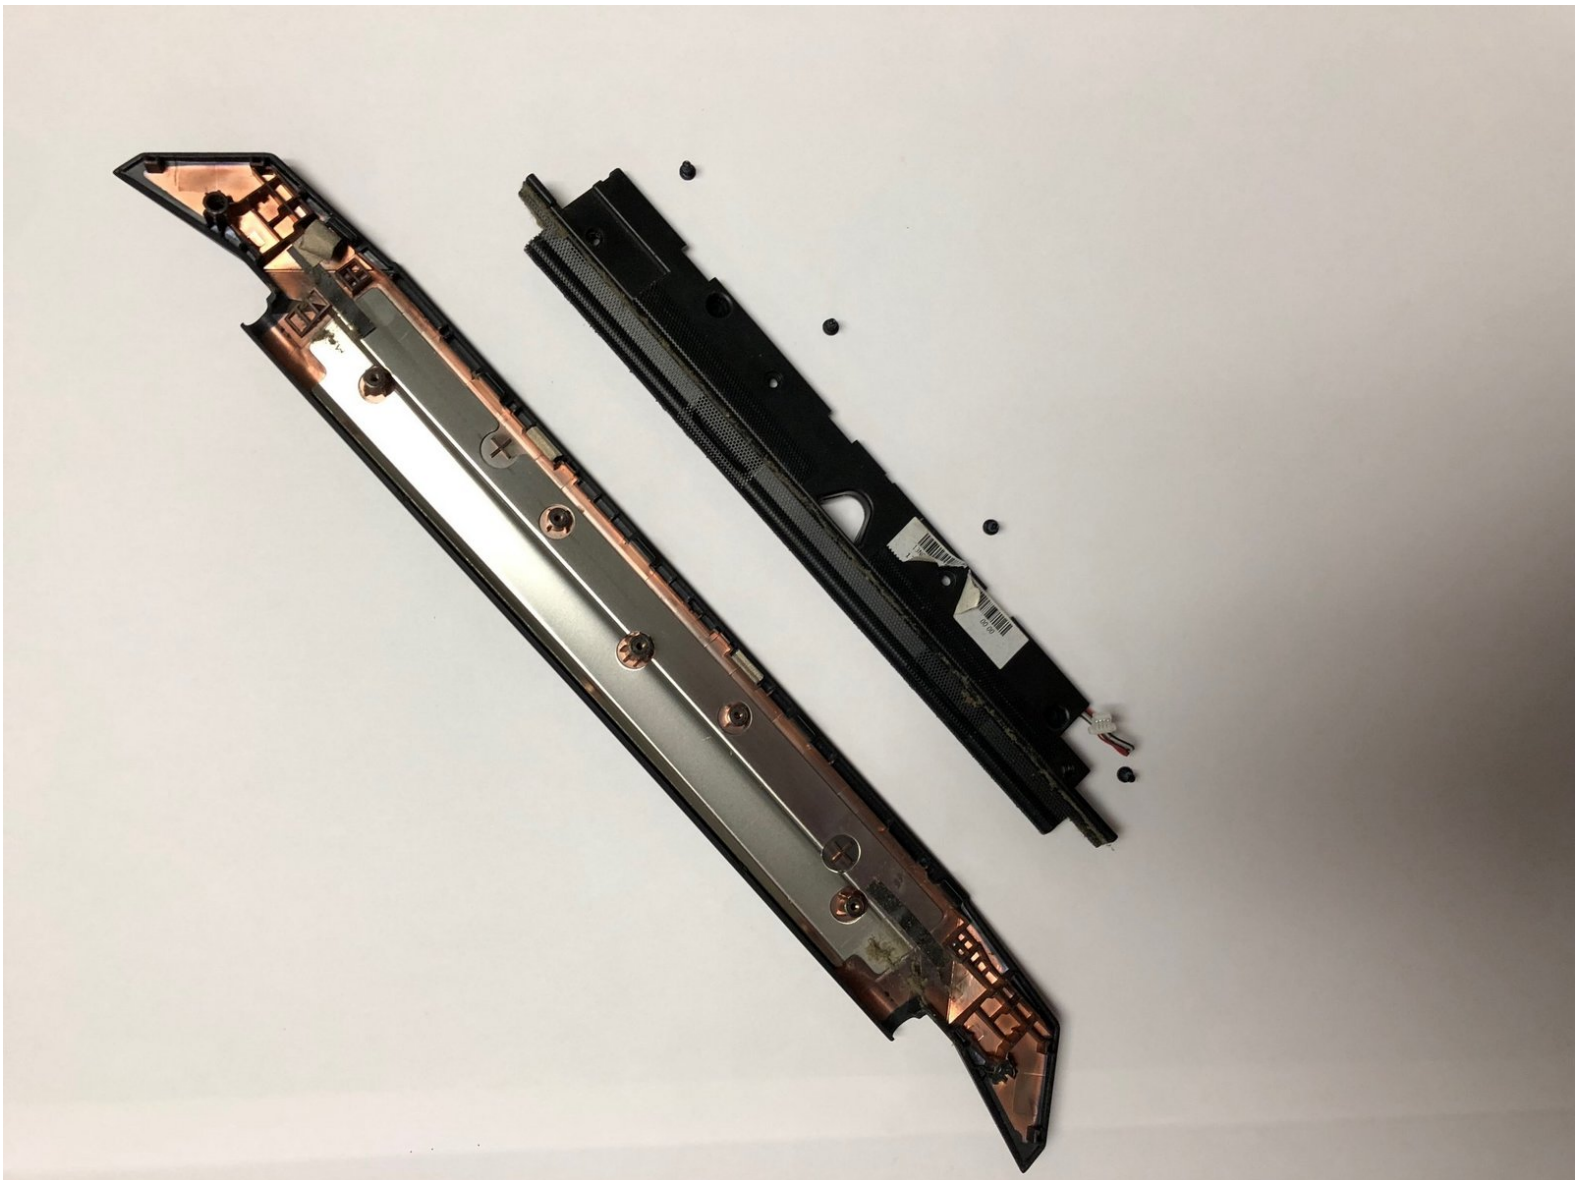

ASUS ROG G46VW Speaker Replacement

This guide will show you how to replace the speaker of the ASUS ROG G46VW.

Written By: Amon Stewart




INTRODUCTION

The speaker will come off with the speaker cover, but it is not necessary to follow this guide to continue disassembly of the device.

TOOLS:


- [Spudger](#) (1)
 - [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Speaker Cover

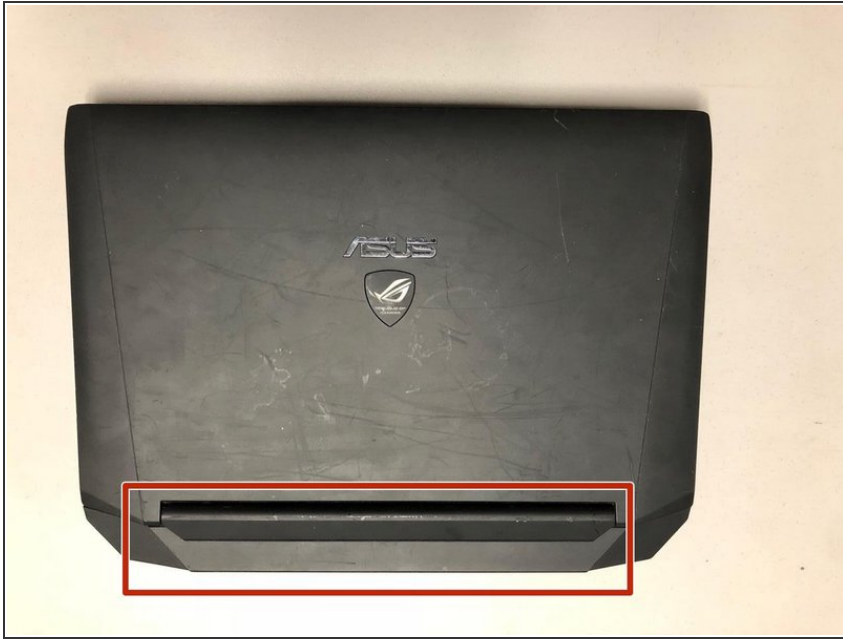

- Gently pry the back hinge cover piece away from the device.

Step 2

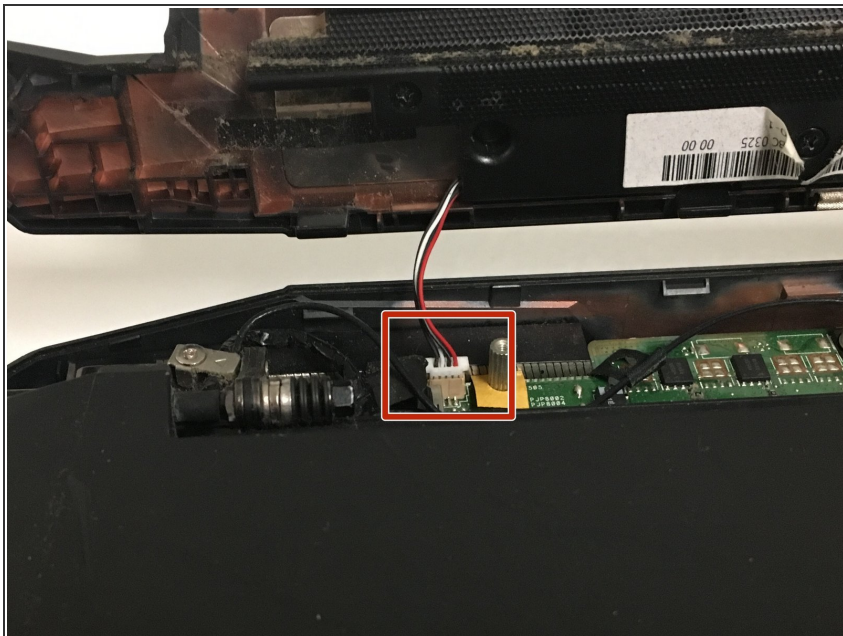

- Disconnect the speaker cable from the motherboard.

Step 3 — Speaker



- Remove the four screws using a Phillips #0 screwdriver.
- Remove the speaker from the device.
- ⓘ One of the screws may be hidden underneath the barcode sticker.

To reassemble your device, follow these instructions in reverse order.