


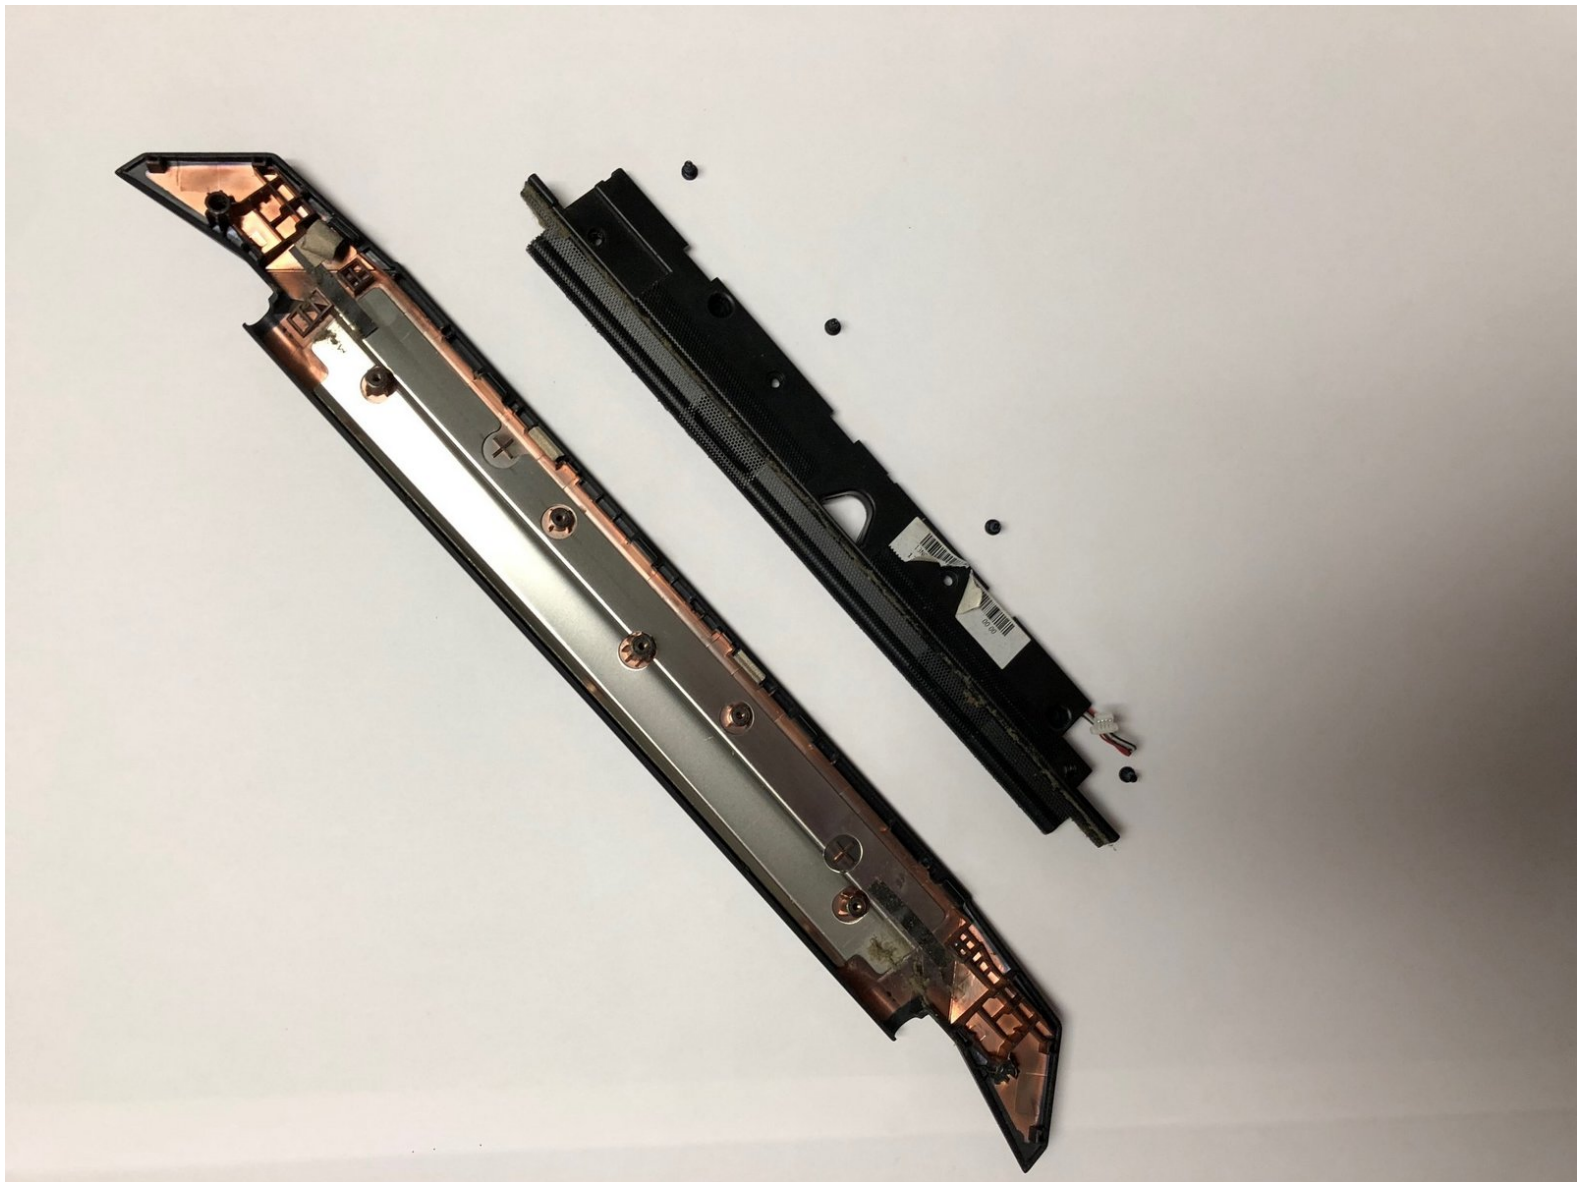

# ASUS ROG G46VW Speaker Replacement

This guide will show you how to replace the speaker of the ASUS ROG G46VW.

Written By: Amon Stewart



## INTRODUCTION


The speaker will come off with the speaker cover, but it is not necessary to follow this guide to continue disassembly of the device.

---

### TOOLS:


- [Spudger](#) (1)
  - [Phillips #0 Screwdriver](#) (1)
-

## Step 1 — Speaker Cover

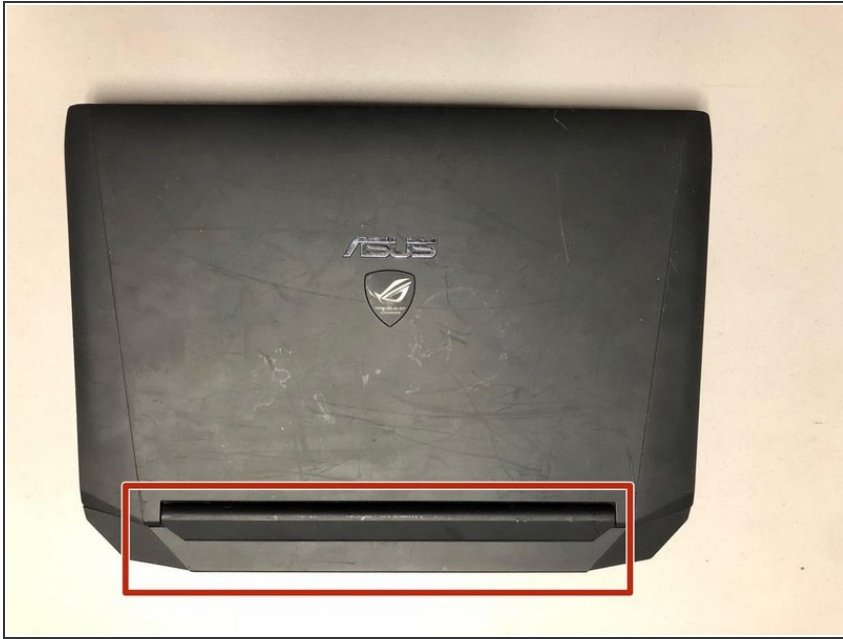

- Gently pry the back hinge cover piece away from the device.

## Step 2

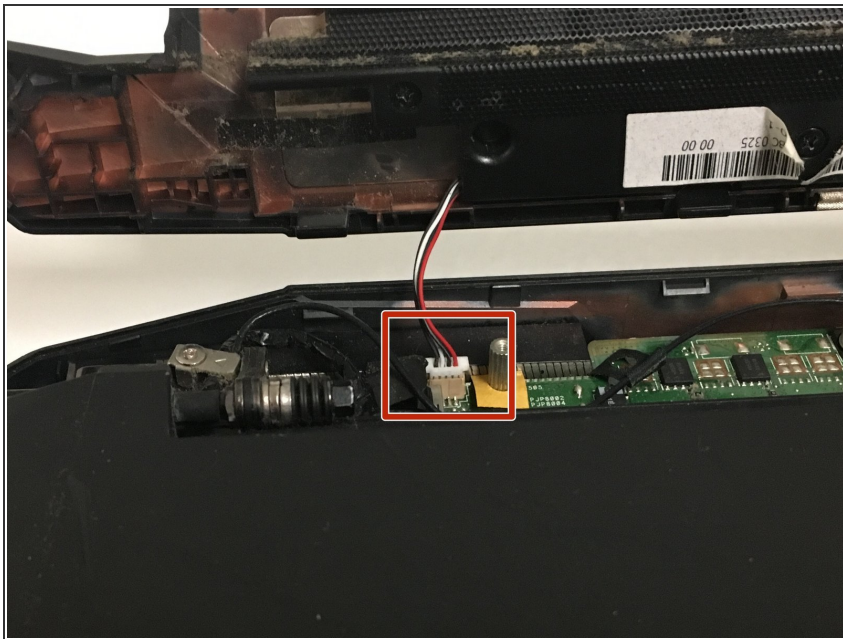

- Disconnect the speaker cable from the motherboard.

## Step 3 — Speaker



- Remove the four screws using a Phillips #0 screwdriver.
- Remove the speaker from the device.
- ⓘ One of the screws may be hidden underneath the barcode sticker.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-01-07 10:02:13 AM.