



Pioneer FH-X730BS Deck Buttons Replacement

How to replace the Pioneer FH-X730BS buttons.

Written By: Cody Pesta






INTRODUCTION

Faulty deck buttons can cause the user unable to control the radio receiver. This guide will show you how to replace the deck buttons for the Pioneer FH-X730BS.

TOOLS:




- [iFixit Opening Tools](#) (1)
-

Step 1 — Deck Buttons

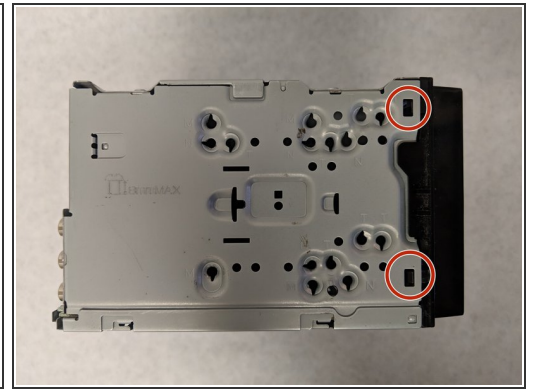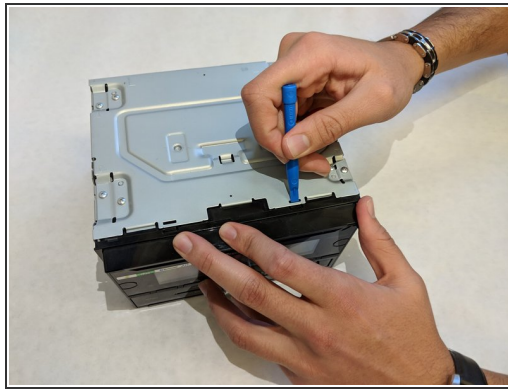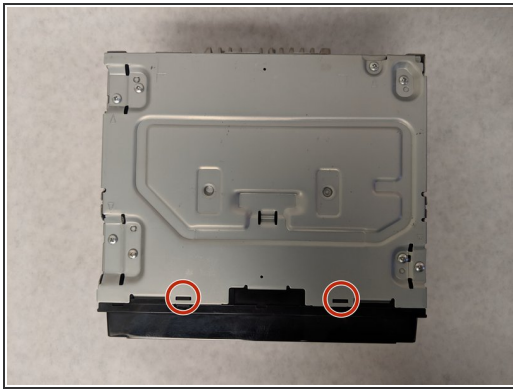




- Apply pressure to the tabs on each side using the plastic opening tool.
- You will need to pull the face away from the frame while unhooking the tabs.

Step 2

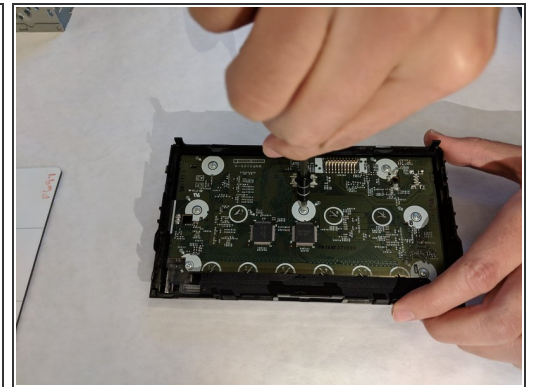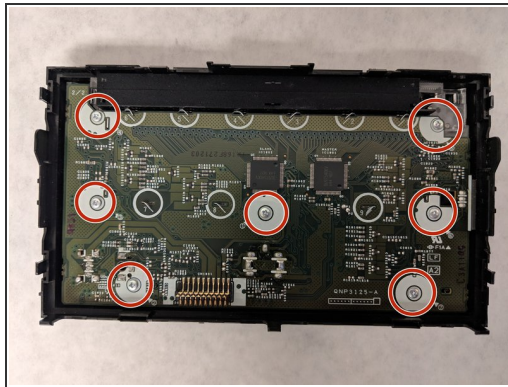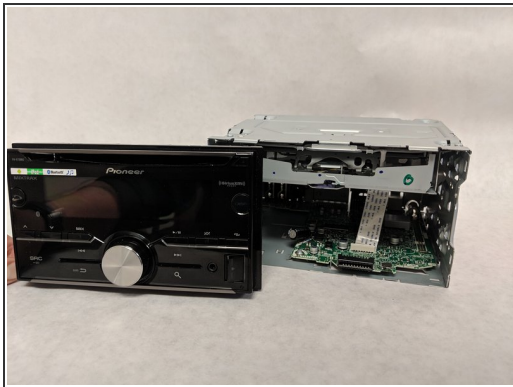

- After removing the stereo face from the frame it should look similar to this.
- Remove the seven 11.2mm Phillips #1 screws on the rear side of the stereo face.

Step 3

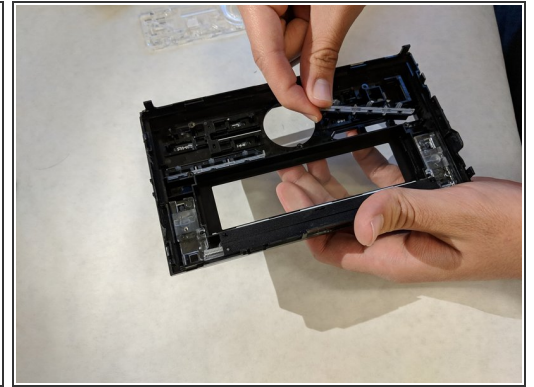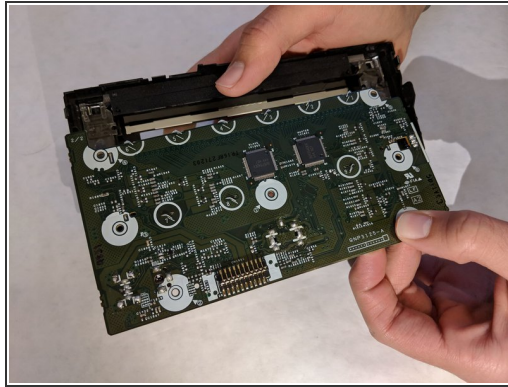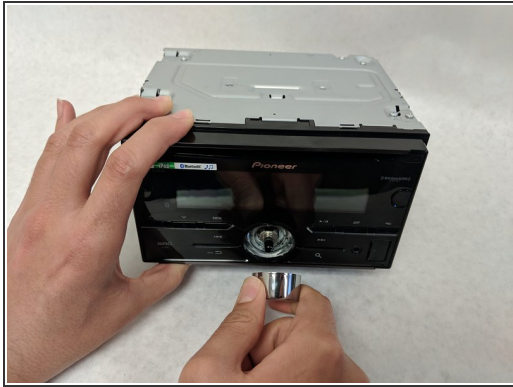

- Remove the volume knob by pulling it towards you and pull the motherboard out of the face.
- The audio buttons can now be taken out. You can flip the face downwards and tap the audio buttons.
- You can now insert the replacement audio buttons into the face.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2018-12-11 10:15:01 PM.