



Asus ROG G56JK Battery Replacement

This guide will show you how to replace the battery for the Asus ROG G56JK laptop.

Written By: Jonathan McNary



INTRODUCTION

Replace a broken or dying battery.

Before starting on this guide, unplug the laptop from its charger and turn the laptop off.

Step 1 — Battery



- Push the slider to the opposite side, while pulling out the battery.
- Remove the battery from the device.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-15 09:23:31 PM.