



# ZTE ZFive G LTE SIM Card Replacement

This guide provides the steps necessary to replace the SIM card on the ZTE ZFive G LTE.

Written By: Julian Mendoza



 **TOOLS:**

- [iFixit Opening Tools](#) (1)
-

## Step 1 — SIM Card



- Pry open the back cover from the crease at the bottom left corner with opening tool or fingernail.

## Step 2



- If there is a previous SIM card, remove the card with an opening tool or your fingernail.

### Step 3



☞ Slide the new SIM card in with the metal signal facing down.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2019-07-17 04:09:04 AM.